



DB 2-B762

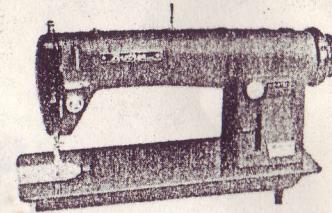


B762-2

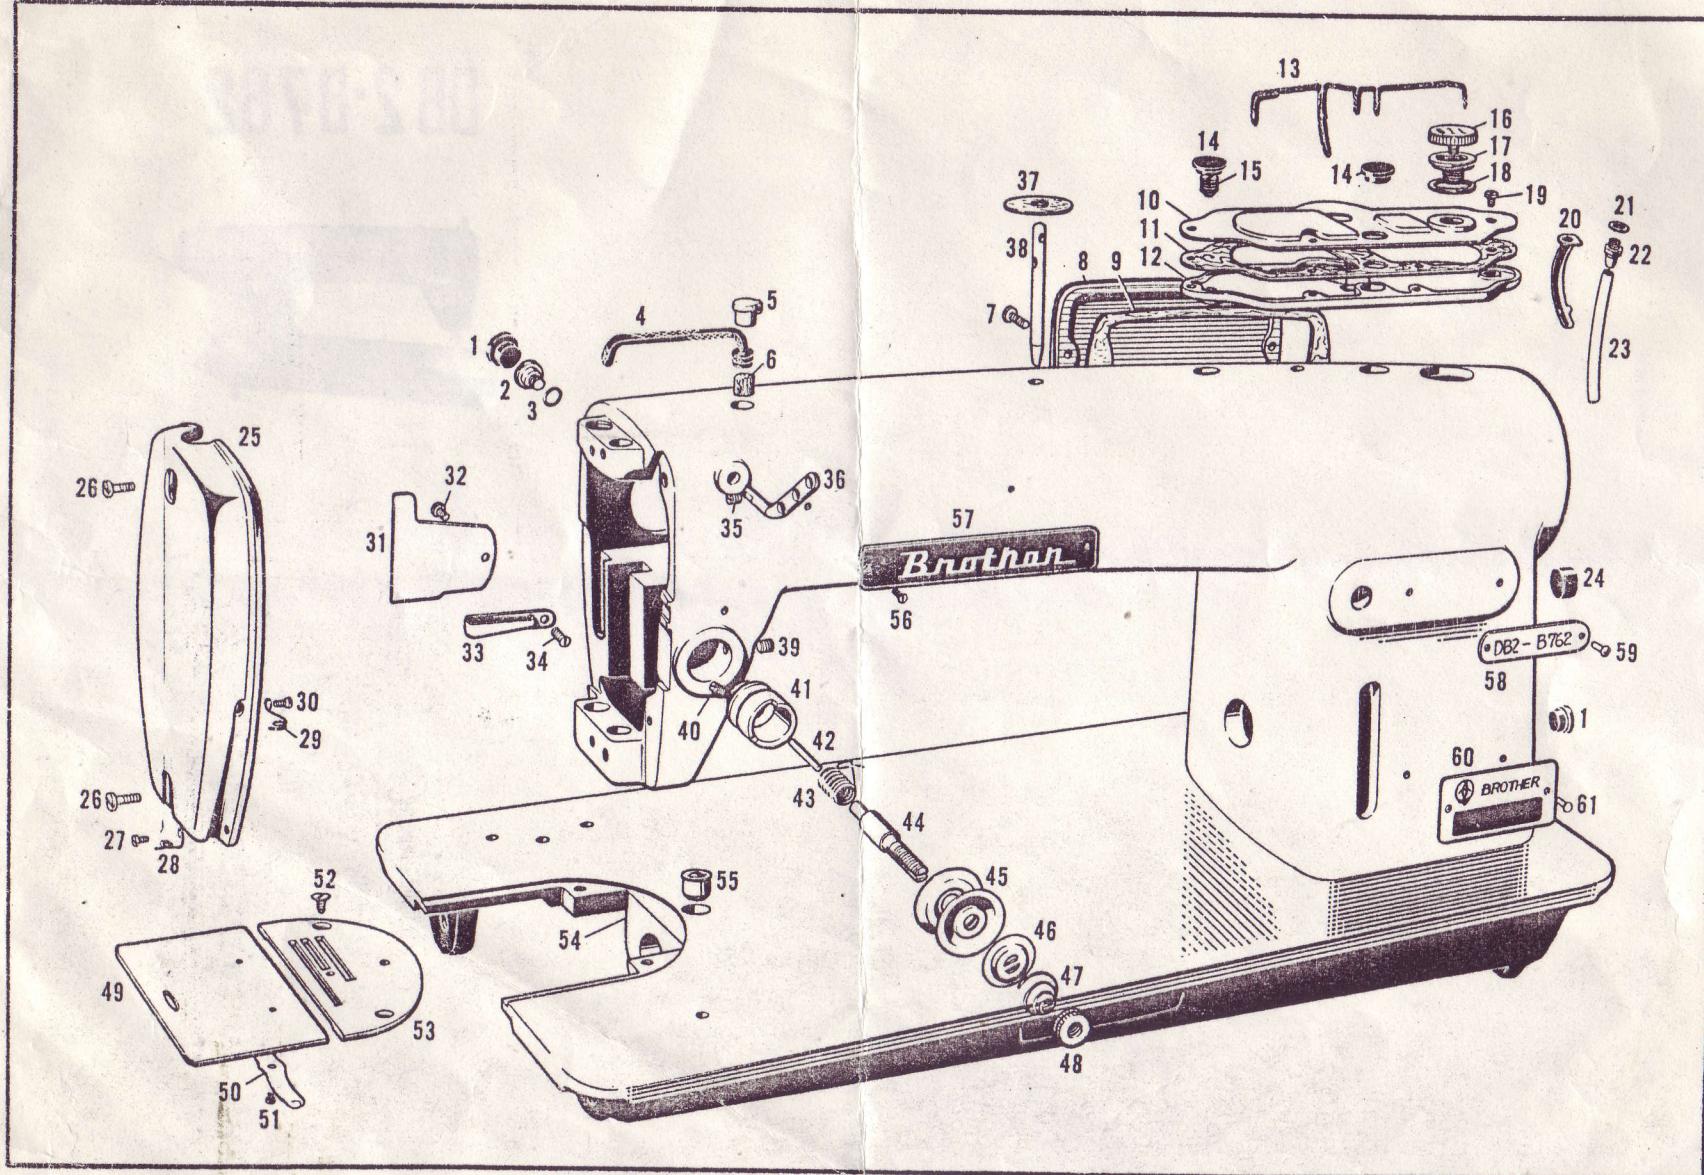

PARTS LIST FOR DB 2-B 762


B762-3

Ref. No.	Name of Parts	Q'ty	B-No.	Ref. No.	Name of Parts	Q'ty	B-No.
A- 1	Oil Cap for Hole of A-2, B-60.	2 pcs.	B4821	A-43	Thread Take Up Spring C.	1 pce.	B0399
A- 2	Cap Screw on Arm for Oil Hole of B-14.	1 pce.	B8803	A-44	Tension Stud.	1 "	B0398
A- 3	Packing AN 6227-5 for A-2.	1 "	B4564	A-45	Tension Disc.	2 pcs.	B8721
A- 4	Wick 4×510 for B-3.	1 "	B8804	A-46	Tension Disc Washer.	1 pce.	B0134
A- 5	Oil Cap for B-33.	1 "	B5053	A-47	Tension Spring.	1 "	B0401
A- 6	Oil Felt for Hole of A-5.	1 "	B6433	A-48	Tension Control Nut.	1 "	B0136
A- 7	Set Screw for A-8.	2 pcs.	B0288-3	A-49	Slide Plate.	1 "	B0268-1
A- 8	Rear Cover.	1 pce.	B6328	A-50	Slide Plate Spring.	1 "	B0269
A- 9	Packing for Rear Cover.	1 "	B6439	A-51	Slide Plate Spring Screw.	2 pcs.	B0035
A-10	Oil Reserver Cover.	1 "	B6452	A-52	Needle Plate Screw.	2 "	B0032-1
A-11	Packing for A-12.	1 "	B6454	A-53	Needle Plate (B).	1 pce.	B0266-1
A-12	Oil Reserver.	1 "	B6451	A-54	Arm Bed.	1 "	B6447
A-13	Wick 4×190 for A-12.	1 "	B8803	A-55	Ball Oil Cap for B-77.	1 "	B1635
A-14	Oil Cap for Hole of A-15, B-86.	2 pcs.	B4449	A-56	Set Screw for A-57.	2 pcs.	B2626
A-15	Stop Screw for A-12.	1 pce.	B6423	A-57	Name Plate "BROTHER".	1 pce.	B6459
A-16	Oil Inlet Cap.	1 "	B6443	A-58	Model Plate.	1 "	B6446
A-17	Oil Inlet for A-12.	1 "	B6455	A-59	Model Plate Pin.	2 pcs.	B6405
A-18	Packing for A-17.	1 "	B6449	A-60	Medallion.	1 pce.	B6458
A-19	Set Screw for A-10.	6 pcs.	B0242	A-61	Medallion Pin.	2 pcs.	B6405
A-20	Oil Pipe Supporter.	1 pce.	B9760				
A-21	Packing for A-22.	1 "	B6448				
A-22	Oil Outlet for A-12.	1 "	B6423				
A-23	Vinyl Tube 3.5×60.	1 "	B6792				
A-24	Oil Cap for C-34.	1 "	B4451				
A-25	Face Plate.	1 "	B6326				
A-26	Set Screw for A-25.	2 pcs.	B1552				
A-27	Set Screw for A-28.	1 pce.	B0393-1				
A-28	Face Plate Thread Guide F.	1 "	B7825				
A-29	Face Plate Thread Guide E.	1 "	B6327				
A-30	Set Screw for A-29.	1 "	B0393				
A-31	Cover Plate for Needle Bar.	1 "	B0241				
A-32	Set Screw for A-31.	1 "	B0242				
A-33	Arm Thread Guide B.	1 "	B6329				
A-34	Set Screw for A-33.	1 "	B8960				
A-35	Set Screw for A-36.	1 "	B0388				
A-36	Thread Retainer A.	1 "	B6457				
A-37	Spool Washer.	1 "	B0119				
A-38	Spool Pin.	2 pcs.	B0386				
A-39	Set Screw for A-41.	1 pce.	B0013				
A-40	Set Screw for A-44.	1 "	B0402-2				
A-41	Upper Thread Tension Bracket.	1 "	B0397				
A-42	Tension Release Pin.	1 "	B0400				

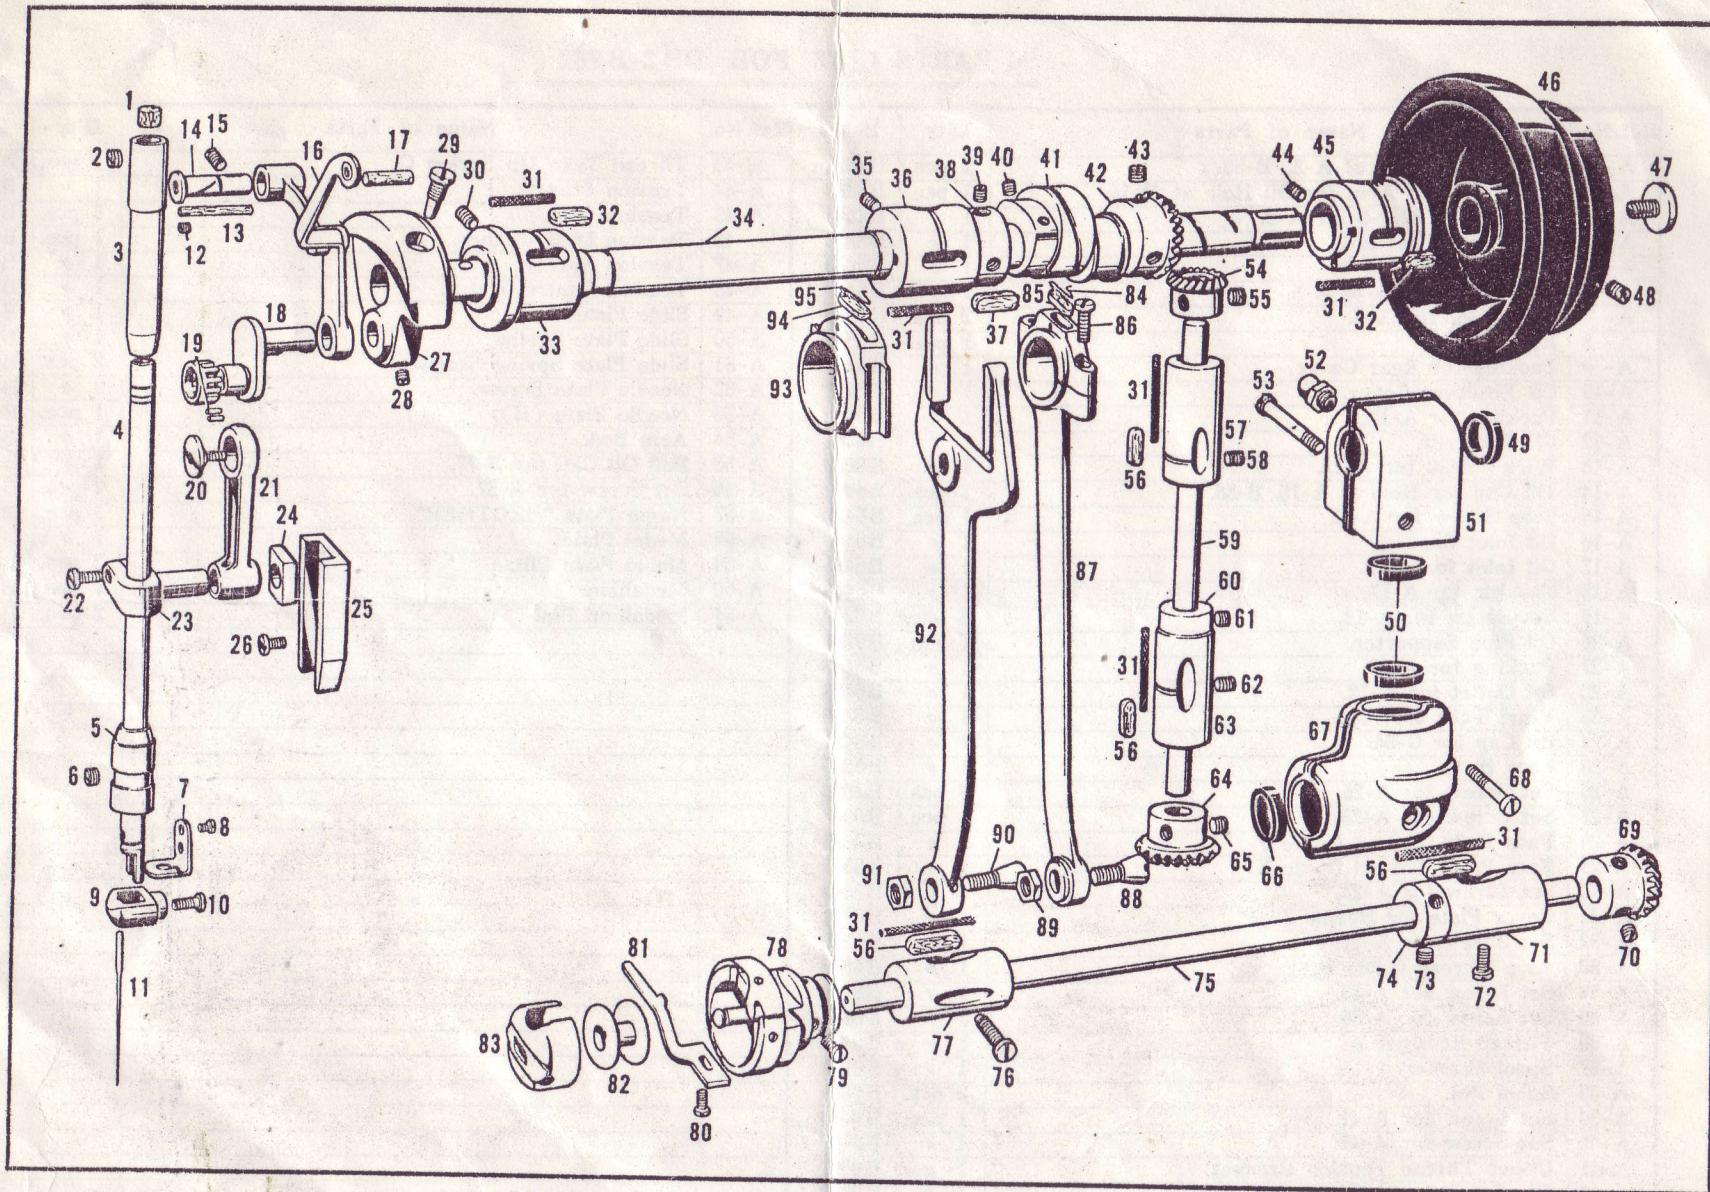

Ref.No.	Name of Parts	Q'ty	B-No.	Ref.No.	Name of Parts	Q'ty	B-No.	Ref.No.	Name of Parts	Q'ty	B-No.
B-1	Oil Felt for B-3.	1 pce.	B0027	B-36	Upper Shaft Bearing Intermediate.	1 pce.	B0597	B-71	Lower Shaft Bushing Right.	1 pce.	B0638
B-2	Set Screw for B-3.	1 "	B0260	B-37	Oil Felt for B-36.	1 "	B0598	B-72	Set Screw for B-71.	1 "	B0355
B-3	Needle Bar Bushing Upper.	1 "	B6415	B-38	Upper Shaft Collar.	1 "	B4274	B-73	Set Screw for B-74.	2 pcs.	B1706
B-4	Needle Bar.	1 "	B6408	B-39	Set Screw for B-38.	2 pcs.	B0251	B-74	Lower Shaft Collar.	1 pce.	B0356
B-5	Needle Bar Bushing Lower.	1 "	B9206	B-40	Set Screw for B-41.	2 "	B0013	B-75	Lower Shaft.	1 "	B0351
B-6	Set Screw for B-5.	1 "	B0260	B-41	Feed and Feed Lifting Eccentric.	1 pce.	B0307	B-76	Set Screw for B-77.	1 "	B0353
B-7	Needle Bar Thread Guide G.	1 "	B0406	B-42	Upper Shaft Gear A. 15/8	1 "	B3552	B-77	Lower Shaft Bushing Left.	1 "	B0637
B-8	Set Screw for B-7.	1 "	B0393-1	B-43	Set Screw for B-42.	2 pcs.	B0251	B-78	Rotary Hook Assembly.	1 "	B0357
B-9	Needle Clamp.	1 "	B0263	B-44	Set Screw for B-45.	2 "	B0016	B-79	Set Screw for B-78.	3 pcs.	B0366
B-10	Needle Clamp Screw.	1 "	B0264	B-45	Upper Shaft Bearing Right.	1 pce.	B3555	B-80	Set Screw for B-81.	1 pce.	B0368
B-11	Needle DB x 1.	1 "	B0265	B-46	Arm Pulley.	1 "	B6320	B-81	Bobbin Case Holder Position Bracket.	1 "	B0367
B-12	Cap Screw for Oil Hole of B-14.	1 "	B4651	B-47	Cap Scream for B-34, B46.	1 "	B0277	B-82	Bobbin.	1 "	B0376
B-13	Oil Felt for B-14.	1 "	B6436	B-48	Set Screw for B-46.	2 pcs.	B0016	B-83	Bobbin Case Assembly.	1 "	B0369
B-14	Stud for Thread Take Up Supporter.	1 "	B6412	B-49	Oil Seal Right for Upper Shaft.	1 pce.	B3738	B-84	Felt Wire for B-87.	1 "	B6460
B-15	Set Screw for B-14.	1 "	B0016-1	B-50	Oil Seal for Vertical Shaft.	2 pcs.	B3796	B-85	Felt for B-87.	1 "	B6441
B-16	Thread Take Up Link Supporter.	1 "	B8880	B-51	Upper Gear Case.	1 pce.	B3628	B-86	Screw for Crank Rod Cap.	2 pcs.	B7428-1
B-17	Oil Felt for Hole of B-14.	1 "	B6434	B-52	Grease Hole Cap for B-51.	1 "	B0630	B-87	Crank Rod.	1 pce.	B6406
B-18	Needle Bar Crank.	1 "	B8878	B-53	Set Screw for B-51.	1 "	B0628	B-88	Taper Hinge Screw for B-87.	1 "	B0310
B-19	Needle Roller and Retainer.	1 "	B8881	B-54	Vertical Shaft Gear B. 19/8	1 "	B3553	B-89	Nut for B-88.	1 "	B4689
B-20	Cap Screw for Needle Bar Crank.	1 "	B3001	B-55	Set Screw for B-54.	2 pcs.	B1706	B-90	Taper Hinge Screw for B-92.	1 "	B0310
B-21	Needle Bar Crank Rod.	1 "	B8879	B-56	Oil Felt for B-67, B-63, B-71, B-77.	4 "	B0633	B-91	Nut for B-90.	1 "	B4689
B-22	Clamp Screw for B-23.	1 "	B0257-6	B-57	Vertical Shaft Upper Bushing.	1 pce.	B3558	B-92	Feed Forked Connection.	1 "	B0309
B-23	Needle Bar Connecting Stud.	1 "	B2632	B-58	Set Screw for 174.	1 "	B0016	B-93	Sleeve for B-41.	1 "	B6424
B-24	Needle Bar Guide Slide Block.	1 "	B2630	B-59	Vertical Shaft.	1 "	B3557	B-94	Felt for B-93.	1 "	B6442
B-25	Needle Bar Guide.	1 "	B2631	B-60	Vertical Shaft Collar.	1 "	B0356	B-95	Felt Wire for B-93.	1 "	B6440
B-26	Set Screw for B-25.	2 pcs.	B0137-1	B-61	Set Screw for B-60.	2 pcs.	B1706				
B-27	Thread Take Up Crank.	1 pce.	B6437	B-62	Set Screw for B-63.	1 pce.	B0016				
B-28	Set Screw for B-27.	2 pcs.	B0251	B-63	Vertical Shaft Lower Bushing.	1 "	B0634				
B-29	Take Up Crank Position Screw.	1 pce.	B0250	B-64	Vertical Shaft Lower Gear C.	1 "	B3554				
B-30	Set Screw for B-33.	1 "	B0016	B-65	Set Screw for B-64.	2 pcs.	B0251				
B-31	Wick 6x30 for B-33, B-36, B-45, B-57, B-63, B-71, B-77.	7 pcs.	B8805	B-66	Oil Seal for Lower Shaft.	1 pce.	B3797				
B-32	Oil Felt for B-33, B-45.	2 "	B0248	B-67	Lower Gear Case.	1 "	B3629				
B-33	Upper Shaft Bearing Left.	1 pce.	B2407	B-68	Set Screw for B-67.	1 "	B0343				
B-34	Upper Shaft.	1 "	B2580	B-69	Lower Shaft Gear D.	1 "	B3560				
B-35	Set Screw for B-36.	1 "	B0016	B-70	Set Screw for B-69.	2 pcs.	B0251				

B762--6

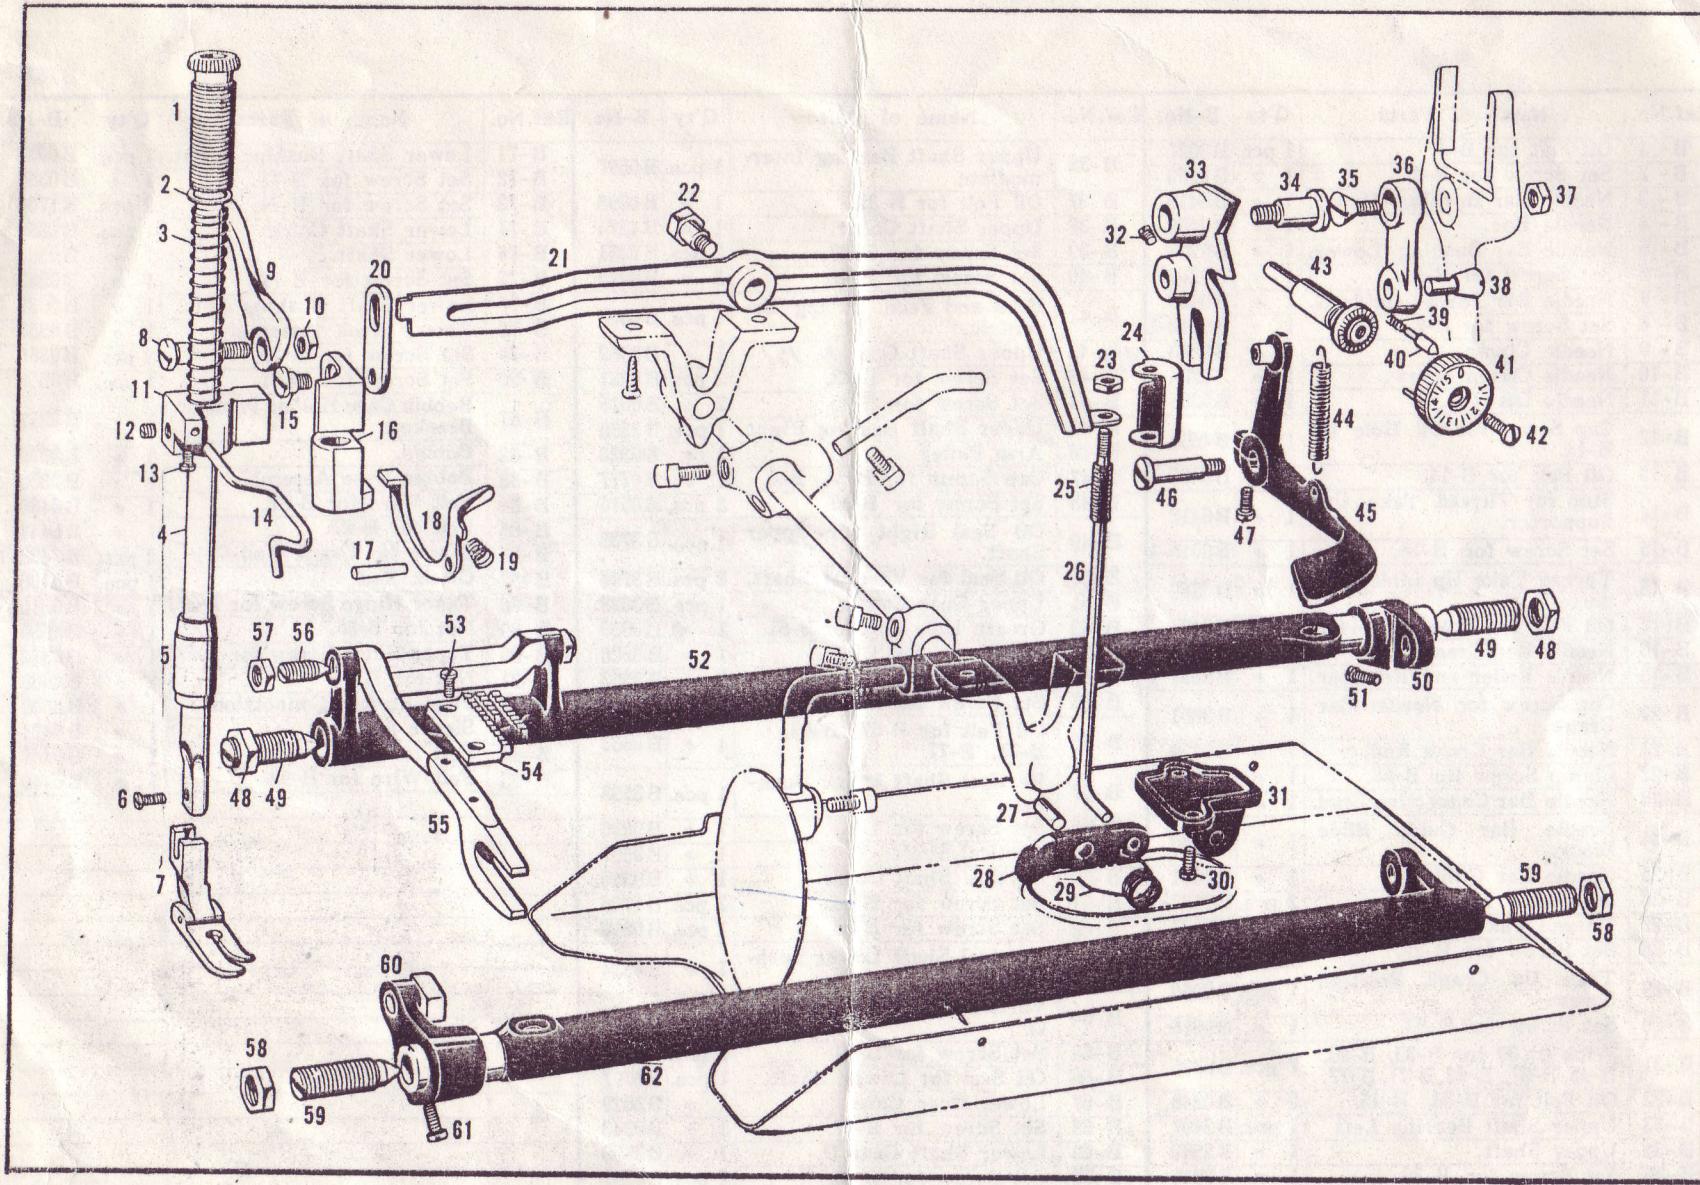

Ref.No.	Name of Parts	Q'ty	B-No.	Ref.No.	Parts of Name	Q'ty	B-No.
C-1	Presser Adjusting Screw.	1 pce.	B 0279	C-43	Length Control Screw.	1 pce.	B 0322
C-2	Presser Spring Washer.	1 "	B 0281	C-44	Feed Regulator Tension Spring.	1 "	B 6421
C-3	Presser Spring.	1 "	B 6794	C-45	Direction Control. /D/-	15/-	B 6432
C-4	Presser Bar.	1 "	B 3013	C-46	Stud Screw for C-45.	1 "	B 0321
C-5	Presser Bar Bushing.	1 "	B 9222	C-47	Clamp Screw for C-45.	1 "	B 0320
C-6	Presser Foot Set Screw.	1 "	B 0287	C-48	Nut for C-49.	2 pcs.	B 0075
C-7	Presser Foot Complete.	1 "	B 0282	C-49	Centre Screw for C-52.	2 "	B 0331
C-8	Stud Screw for C-9.	1 "	B 0292	C-50	Feed Rock Shaft Arm.	1 pce.	B 0329
C-9	Presser Bat Lifter.	1 "	B 0291	C-51	Clamp Screw for C-50.	1 "	B 0086
C-10	Nut for C-8.	1 "	B 0022	C-52	Feed Rock Shaft.	1 "	B 0330
C-11	Presser Bar Bracket.	1 "	B 0288	C-53	Set Screw for C-54.	2 pcs.	B 0080
C-12	Set Screw for C-11.	1 "	B 0289	C-54	Feed.	1 pce.	B 0334
C-13	Set Screw for C-14.	1 "	B 0080	C-55	Feed Bar.	1 "	B 4507
C-14	Presser Bar Bracket Thread Guide D for C-11.	1 "	B 0396	C-56	Centre Screw for C-55.	2 pcs.	B 0333
C-15	Stud Screw for C-20.	1 "	B 0294	C-57	Nut for C-56.	2 "	B 4690
C-16	Presser Bar Lifter Bracket.	1 "	B 0290	C-58	Nut for C-59.	2 "	B 0075
C-17	Taper Pin for C-18.	1 "	B 0404	C-59	Centre Screw for C-62.	2 "	B 0331
C-18	Tension Release Crank.	1 "	B 0403	C-60	Feed Lifting Arm Assembly.	1 pce.	B 4509
C-19	Tension Release Crank Spring.	1 "	B 0405	C-61	Clamp Screw for C-60.	1 "	B 0086
C-20	Presser Bar Lifting Connector.	1 "	B 0293	C-62	Feed Lifting Lock Shaft.	1 "	B 0337
C-21	Knee Lifter Lever.	1 "	B 6407				
C-22	Hinge Screw for C-21.	1 "	B 6413				
C-23	Nut for C-26.	2 pcs.	B 0301				
C-24	Spring Case for C-26.	1 pce.	B 6430				
C-25	Spring for C-26.	1 "	B 6429				
C-26	Knee Lifter Connecting Rod.	1 "	B 6427				
C-27	Hinge Pin for C-28.	1 "	B 0303				
C-28	Knee Lifter Crank Lower.	1 "	B 0302				
C-29	Lifter Spring for C-28.	1 "	B 0304				
C-30	Set Screw for C-31.	2 pcs.	B 0306				
C-31	Bracket for C-28.	1 pce.	B 0305				
C-32	Set Screw for C-38.	1 "	B 2627				
C-33	Feed Regulator.	1 "	B 6419				
C-34	Feed Regulator Stud Screw.	1 "	B 6420				
C-35	Taper Hinge Screw for B-92.	1 "	B 0310				
C-36	Feed Regulator Link.	1 "	B 0311				
C-37	Nut for C-35.	1 "	B 4689				
C-38	Taper Hinge for C-33, C-36.	1 "	B 0312				
C-39	Notch Spring for C-41.	1 "	B 0328				
C-40	Notch for C-41.	1 "	B 0327				
C-41	Length Control.	1 "	B 0323				
C-42	Set Screw for C-41.	1 "	B 0326				