



HASHIMA®

INDUSTRIAL STEAM IRON

WITH WATER TANK

HI-35OPS


PARTS LIST

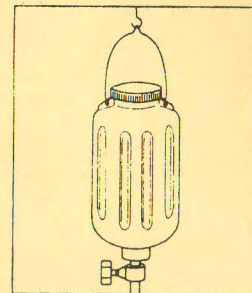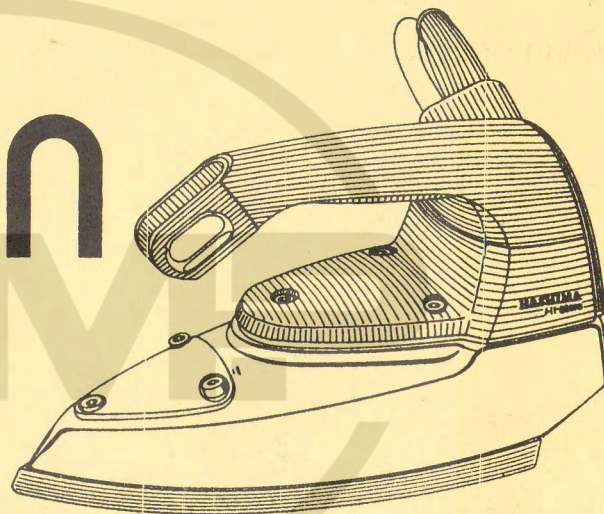


HASHIMA

HEAD OFFICE : 3-18, HIGASHI KINPO-CHO, GIFU-CITY, JAPAN.
BUSINESS OFFICE : 7-8, RYOGE GIFU-CITY, JAPAN.
TELEPHONE 81-58-274-8400 81-58-246-4501
FACSIMILE 81-58-240-5775
BRANCH : BEIJING SHANGHAI SINGAPORE


EXPLODED VIEW

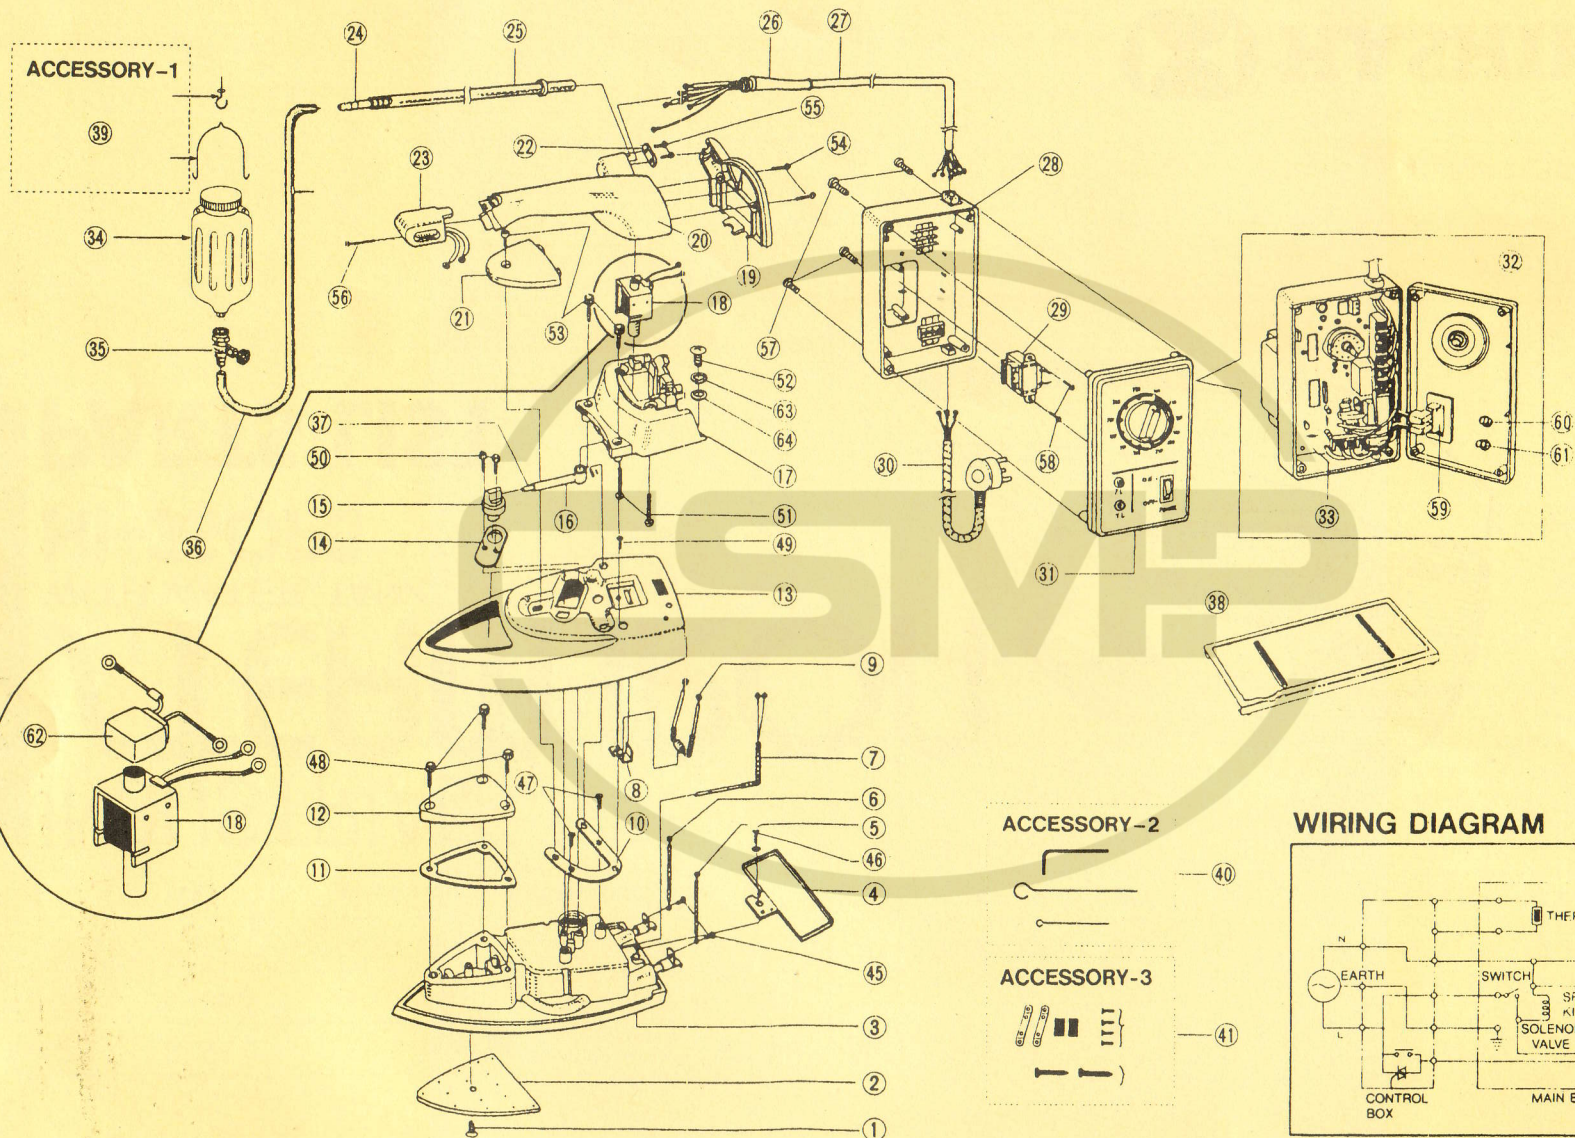


ACCESSORY-2

 

ACCESSORY-3

 

WIRING DIAGRAM

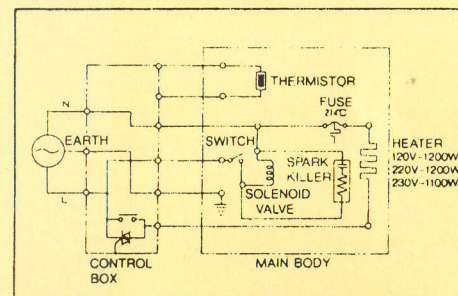

PARTS LIST for HI-35OPS

Ref. No.	Parts Name	Part No.	Remarks
1	Fixing Screw	HIP-401	
2	Bottom Plate	402	
3-1	Heating plate	501	120V-1200W
3-2	Heating plate	502	220V-1200W
3-3	Heating plate	503	230V-1100W
4-1	Rating plate	403	120V
4-2	Rating plate	404	220V
4-3	Rating plate	405	230V
5	Heater lead wire (A)	504	
6	Heater lead wire (B)	505	
7	Thermistor	406	
8	Fuse fixing plate	407	
9	Fuse	506	
10	Band	408	
11	Packing (A)	409	
12	Steam generating chamber cover	410	
13	Cover shell	411	
14	Retaining plate	412	
15	Rubber packing (C)	413	
16	Rubber packing (D)	414	
17	Handle base	415	

Ref. No.	Parts Name	Part No.	Remarks
18-1	Solenoid Valve	HIP-507	120V
18-2	Solenoid Valve	508	220V
18-3	Solenoid Valve	509	230V
19	Rear handle base cover	416	
20	Handle	417	
21	Handle sub-plate	418	
22	Cord stopper	419	
23	Switch	510	
24	Hose connector	420	
25	Hose (A)	421	
26	Power cord bushing	422	
27-1	Singnal cord	511	120V-1200W
27-2	Singnal cord	512	220V-1200W
27-3	Singnal cord	513	230V-1100W
28	Control box (B)	423	
29-1	Transformer	424	120V
29-2	Transformer	425	220V
29-3	Transformer	426	230V
30-1	Power cord assembly	427	120V-A2
30-2	Power cord assembly	428	220V-B3
30-3	Power cord assembly	429	230V-C3

PARTS LIST for HI-35OPS

Ref. No.	Parts Name	Part No.	Remark
31	Control box (A)	HIP-430	
32-1	Control box complete set	431	120V-1200W
32-2	Control box complete set	432	220V-1200W
32-3	Control box complete set	433	230V-1100W
33-1	Control circuit board	434	100V-120V
33-2	Control circuit board	435	220-240V
34	Water tank assembly	514	
35	Valve	515	
36	Hose (B)	516	
37	Metal connector	517	
38	Base	518	
39	Accessory-1	701	
40	Accessory-2	702	
41	Accessory-3	703	
45	M4 × 6 Terminal screw	601	
46	M4 × 8 Washer head tapping screw	602	
47	M5 × 12 Pan head tapping screw	603	
48	M5 × 12 Hex.socket head bolt	604	
49	M4 × 6 Truss head tapping screw	605	
50	M4 × 10 Hex.socket head bolt.	606	
51	M5 × 35 Pan head screw	607	

[illegible]