
Singer 11 Singer 12

SINGER
DEARBORN BLINDSTITCH
MACHINES

SINGER

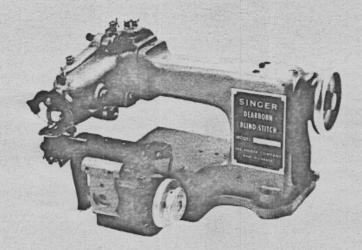

PARTS LIST DEARBORN BLINDSTITCH MACHINES CLASS 11 & 12 - PLAIN

MODELS 12 PL 1, 11-PL, 12-PL 1R, 12-P1, 12 BBE, 12-BE-1, 12-BE4, 12-BL, 12-FS1, 11 FS1, 12-FTJ, 11 FTJ, 12 SSP, 12-SSD, 12-WB1, 12-PE2



CONNECTION AND CRANK ASSEMBLY



NEEDLE SHAFT LOOPER ROD NEEDLE ECCENTRIC



FEED FRAME REGULATING DIAL



PRESSER FOOT




MACHINE HEAD

SINGER COMPANY OF CANADA LIMITED


200 ST. LOUIS, ST. JOHNS, P.Q. CANADA

A CONNECTION AND CRANK ASSEMBLY

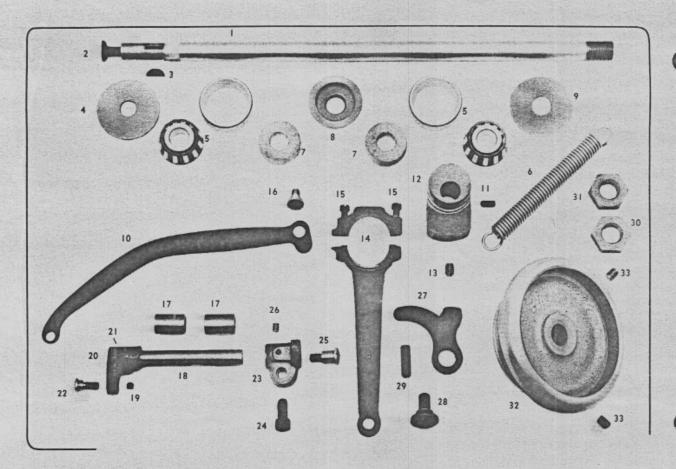


Illustrn.	Part		Illustrn.	Part	
Ref. No.	No.	Description	Ref. No.	No.	Description
	400314	Main Shaft	16	400078	Rib Shaft Connection Lever Stud
	400322	Main Shaft End Screw	17	402406	Rib Rocker Crank Shaft Bearing (2)
	400321	Needle Stitch Eccentric Woodruff Key	18	400346	Rib Rocker Crank Shaft
		Roller Bearing Shield - Left	19	400099	Rib Rocker Crank Left Set Screw
		Roller Bearing Cup & Cone (2)	20	400349	Rib Rocker Crank Left
		Feed Frame Tension Spring	21	400367	Rib Rocker Crank Left Tapered Pin
	402409	Roller Bearing Oil Pad (Felt) (2)	22	400072	Rib Shaft Crank Stud
		Roller Bearing Retainer (Aluminum)	23	400348	Rib Rocker Crank Right
		Roller Bearing Shield - Right	24	400301	Rib Rocker Crank Right Fastening Screw
10		Rib Shaft Connection Lever	25	400080	Main Shaft Connection Lever Stud
Not illustrate		Rib Shaft Connection Lever Assembly	26	400099	Rib Rocker Crank Right Set Screw
Not illustrate	1000//	Including = 400072 400339 400078	27	400308	Feed Frame Tension Spring Lever
	******	Main Shaft Connection Lever Eccentric	28	400005	Feed Frame Tension Spring Lever Stud
11	400204	Set Screw	29	400311	Feed Frame Tension Spring Lever Adjusting
17	400340	Main Shaft Connection Lever Eccentric			Screw
		Main Shaft Connection Lever Set Screw	30	402404	Main Shaft Lock Nut
1	你把助你你你吃吃	Main Shaft Connection Lever Style 2	31	400316	Main Shaft Adjusting Nut
1		Main Shaft Connection Lever Clamping	32	400313	Hand Wheel
	, ,,,,,,,,	Screw (2)	33	400098	Hand Wheel Set Screw (2)

B NEEDLE SHAFT, LOOPER ROD, NEEDLE ECCENTRIC ASSEMBLY

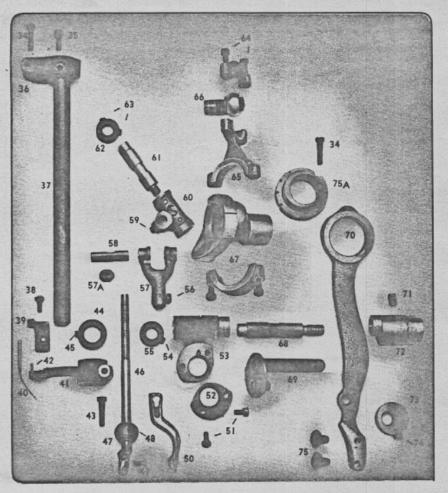


Illustrn. Ref. No.	Part No.	Description	Illustrn. Ref. No.	Part No.	Description
34	400094	Needle Shaft Crank Clamping Screw	58	400052	Looper Rod Fork Pin
35	402072	Needle Shaft Crank Locking Screw	59	400099	Looper Driving Stud Sleeve Set Screw
36	400037	Needle Shaft Crank	60	400055	Looper Driving Stud Sleeve
37	400030	Needle Shaft	61	400053	Looper Driving Stud
38	400040	Needle Lever Clamp Screw	62	400054	Looper Driving Stud Collar
39	400039	Needle Lever Clamp	63	400100	Looper Driving Stud Collar Set Screw (2)
40	400709	Needle (Size 3)		400666	Sub. ass'y of 1-400040, 1-400051, 1-400052,
41	400038	Needle Lever			1-400099, 1-400055, 1-400053, 1-400054, 2-
42	402098	Needle Lever Clamp Pin			400100
43	400094	Needle Lever Fastening Screw		400664	Sub. ass'y 1-400043, 1-400044, 1-400045,
44	400084	Needle Shaft Collar			1-400046, 1-400047 & 2-400095
45	400100	Needle Shaft Collar Set Screw		400056	Looper Rod Assembly Complete
46	400043	Looper Rod	64	400094	Needle Stitch Shaft Connection Fastening
47	400044	Looper Rod Ball			Screw (4)
48	400045	Looper Rod Ball Set Screw	65	400035	Needle Stitch Shaft Connection
	400665	Sub. ass'y of 400043, 400044 & 400045	66	400036	Needle Stitch Shaft Connection Ball Stud
49	400042	Looper Screw	67	402437	Needle Stitch Eccentric (Long)
50	401073	Looper Solid		400675	Sub. ass'y of 1-402437, 1-400035, 1-400036
51	400095	Looper Rod Carrier Cap Clamping Screw (2)			& 4-400094
52	400047	Looper Rod Carrier Cap	68	400048	Looper Rod Carrier Stud
53	400046	Looper Rod Carrier	69	400026	Feed Rocker
	400636	Sub. ass'y of 2-400095, 1-400047 & 1-400046	70	400025	Feed Lever
54	400100	Looper Rod Carrier Stud Collar Set Screw (2)	71	400098	Looper Adjusting Block Set Screw
55	400049	Looper Rod Carrier Stud Collar	72	400050	Looper Adjusting Block
56	400040	Looper Fork Clamping Screw	73	400027	Feed Rocker Clamp
57	400051	Looper Fork	74	400094	Feed Rocker Clamp Set Screw
57A	402341	Looper Rod lock Nut	75 75 A	400097	Feed Dog Fastening Screw Needle Stitch Eccentric Ring

C FEED FRAME REGULATING DIAL ASSEMBLY

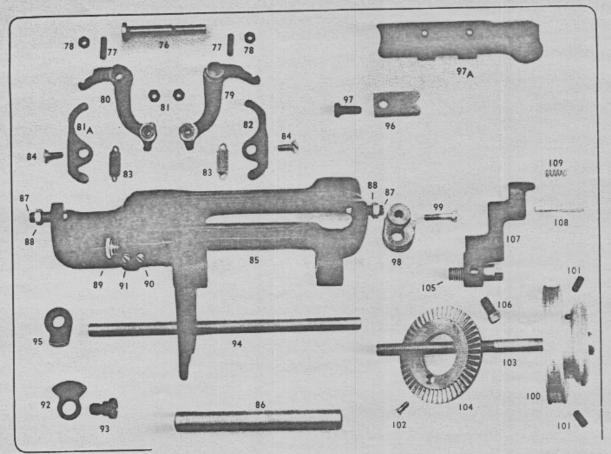


Illustrn. Ref. No.	Part No.	Description	Illustrn. Ref. No.	Part No.	Description
76	400022	Feed Bracket Stud	93	400010	Feed Frame Regulating Stop Stud
77	400020	Feed Bracket Limit Screw (2)	94	400069	Rib Shaft
78	400021	Feed Bracket Limit Screw Nut (2)	95	400067	Rib (PL)
79	400017	Feed Platen Bracket Right		400669	Rib & Shaft Assembly
80	400018	Feed Platen Bracket Left	96	400073	Rib Shaft Support
81	400021	Feed Platen Screw Nut (2)	97	400074	Rib Shaft Support Screw
81a		Feed Platen Left	The second second second	400070	Rib Shaft Cover Complete
82	400015	Feed Platen Right	98	400071	Rib Shaft Crank
83	400019	Feed Platen Spring (2)	99	400094	Rib Shaft Crank Fastening Screw
84	400101	Feed Platen Screw (2)	100	400195	Regulating Dial
	400660	Sub. ass'y of 1-400017, 1-400018, 1-400016,	101	400204	Regulating Dial Set Screw (2)
		1-400015, 1-400022, 2-400020, 2-400021,	102	400197	Regulating Dial Ratchet Set Screw
		2-400101 & 2-400102	103	400205	Regulating Dial Regulating Screw
85	400302	Feed Frame (Regular)	104	400196	Regulating Dial Ratchet
86	400002	Feed Frame Hinge Pin	105	400203	Regulating Indicating arrow Bracket Screw
87	400075	Rib Shaft Centre Screw (2)	106	402055	Regulating Dial Indicating arrow Bracket Set
88	400312	Rib Shaft Centre Screw Nut (2)			Screw
89	402075	Feed Bracket Stud Bushing	107	400200	Regulating Dial Indicating arrow Bracket
90	400099	Feed Bracket Stud Bushing Set Screw	108	400202	Regulating Dial Plunger
91	400100	Feed Bracket Stud Bushing Set Screw	109	400201	Regulating Dial Plunger Spring
92	400009			401074	Regulating Dial Complete
	402460 400302 400002 400003 400307 400308 400312 400311 400014	Feed Frame Safety Limit Screw	g: illustrated		OPTIONAL Feed Frame Sleeve Feed Frame Sleeve Screws

D PRESSER FOOT COMPLETE

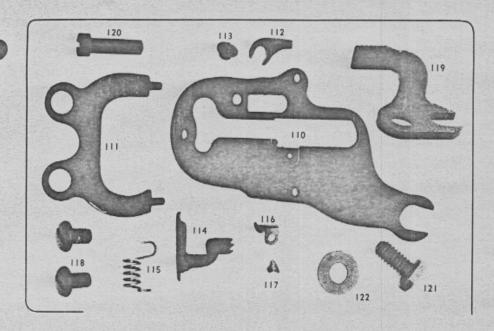


Illustrn	Part		Illustrn.	Part	
Ref. No	. No.	Description	Ref. No.	No.	Description
	401636	Presserfoot Complete (PL.)	Not Illustrated	400326	Presserfoot Complete W/Brass Pin
110	402142	Presserfoot Plate		400667	Presserfoot Complete — Fine Work
111	400060	Presserfoot Brace			Brush off
112	400081	Presserfoot Needle Guide		400122	Brass Pin for Presserfoot
113	400082	Presserfoot Needle Guide Screw		The follo	owing are not included in part No. 401636
114	400061	Presserfoot Shoe (PL.)	118		Presserfoot Mounting Screw (2)
115	400064	Presserfoot Shoe Spring	119	400028	Feed Dog (Coarse)
116	401184	Presserfoot Metal Pin		400143	Feed Dog (Fine)
117	401185	Presserfoot Metal Pin Screw	120	400066	Presserfoot Adjusting Eccentric Pin
			121	400103	Presserfoot Clamp Screw
			122	402068	Presserfoot Clamp Screw Washer


SHOE TREADLE ASSEMBLY

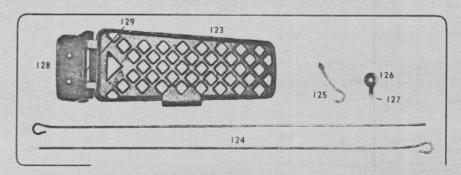

Illustrn.	Part		Illustrn.	Part	
Ref. No.	No.	Description	Ref. No.	No.	Description
	400119	Shoe Treadle Ass'y Complete	126	402105	Shoe Treadle Pull Down Wire Collar
123		Shoe Treadle	127		Shoe Treadle Pull Down Wire Collar
124	400136	Shoe Treadle Pull Down Wire (2)			Set Screw
125	400408	Shoe Treadle Pull Down Wire S-Hook	128	402138	Shoe Treadle Floor Bracket
			129	402139	Shoe Treadle Floor Bracket Hinge Pin

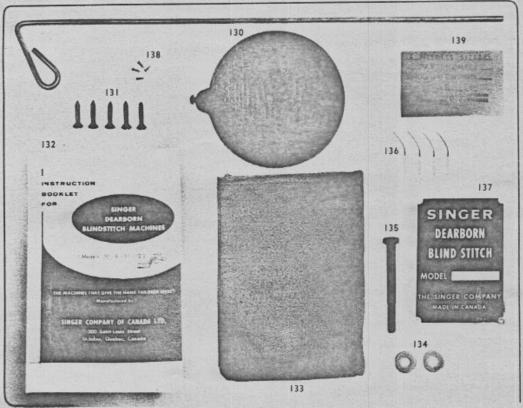

Illustrn.	Part		Illus	rn.	Part	
Ref. No.	No.	Description	Ref.	No.	No.	Description
130 4	400120	Cotton Stand Complete		135	400406	Clamping bolt
	402044	Wood Screws (5)		136	400709	Needles No. 3" or 31/2" (400711)
132	22100	Instruction Booklet		137	402411	Name Plate (Singer Dearborn)
	402086	Cotton Bag		138	401679	Name Plate Self Driving Screw
	402063	Washers (2)		139	402183	Brown Envelope 21/4" x 31/2"
134	402003	AA G2UGLZ (T)			402409	Base Plate Felt Spacer
THE FOLLOWING PA	ARTS M	AY BE PURCHASED ON REQUEST				
Not Illustrat	ted		Not	Illustr	ated	
DOTAL SIMPLESIATION	400411	Knee Lift Complete			400415	Knee Lift Collar Knee Lift Rod
	400412	Knee Lift Main Bracket			400417	Knee Lift Plate
	400413	Knee Lift Bracket Screw			400418	Knee Lift Rod Clamp
	400414	Knee Lift Short Shaft			400419	Knee Lift Rod Clamp Screw

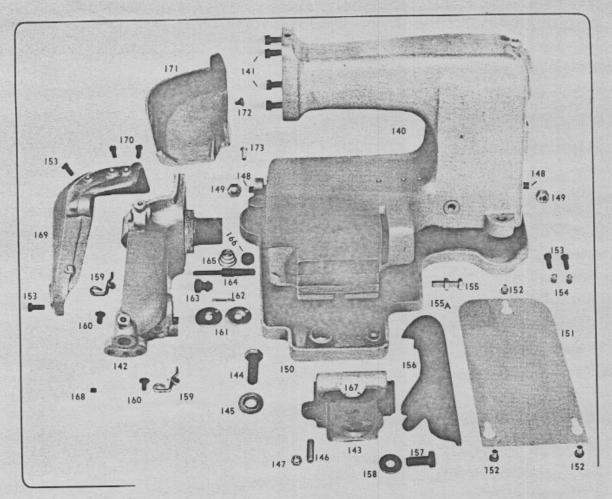

Illustrn.	Part		Illustrn. Ref. No.	Part No.	Description
Ref. No.	No.	Description	Non-Non-		
		Main Frame (PL.)	158	402063	Belt Guard Fastening Screw Washer
140	402428		159	400083	Thread Guide (2)
141	400301	Main Frame Head Screw (4)	160	400096	Thread Guide Mounting Screw (2)
142	401197	Main Frame Head	161	400088	Tension Disc (2)
143	400304	Feed Frame Bracket (PL.)		400093	Tension Pin
144	400306	Feed Frame Bracket Screw	162		Upper Cover Fastening Thumb Nut
145	402431	Feed Frame Bracket Screw Washer	163	400087	
146	400311	Feed Frame Safety Limit Screw	164	400090	Tension Long Stud
147	400312	Feed Frame Safety Limit Screw Nut	165	400091	Tension Spring
148	400361	Base Plate Center Screw 2	166	400092	Tension Regulating Nut
149	400362	Base Plate Center Screw Nut 2		400086	Tension Complete WI Long Stud
150	400863	Base Plate			2-400088, 1-400093, 1-400090,
	400351	Back Plate			1-400091 & 1-400092
151		Back Plate Screw (3)	167	400099	Feed Frame Hinge Pin Set Screw (2)
152	402401		168	400099	Presserfoot Adjusting Eccentric Pin
153	402426	Main Frame Oil Fitting (3)	100		Set Screw
154	401529	Main Shaft Oil Cup No. 202 (2)	110	400105	Upper Cover
155	400014	Feed Frame Stop Screw	169		Upper Cover Oil Fitting (2)
156	400352	Belt Guard	170	402025	
157	400419	Belt Guard Fastening Screw	171	400104	Lower Cover
155A		Feed Frame Stop Screw Nut	172	402407	Lower Cover Mounting Screw
1337	.02002		173	402052	Lower Cover Mounting Screw