



INDUSTRIAL SEWING MACHINES

THE EDGELOCK MACHINES FORTH-THREE THOUSAND SERIES

LIST OF PARTS

FOR

STYLE 43200 G

STYLE 43200G

Supplementary Catalog No. 75 N

Catalog No. 75 N applies only to machines with serial numbers higher than 293000 and includes all parts in Style 43200 G that are not included in Catalog No. 75 L.

CATALOG No. 75N

Union Social MACHINE COMPANY

The Edgelock Machines

Forty-Three Thousand Series

Supplementary Catalog No. 75 N

List of Parts for Style 43200 G

Description of Style 43200 G


For hemming overalls, jackets, and similar garments, high throw, two needle bar bearings; stitching Type EFb-1, hem turned on under surface of fabric, Type 128 needle, stitch range 16 to 8 per inch, split hemming attachment and knee press for opening same, standard widths of hem 3/8 and 1/2 inch.

Copyright 1938

By
Union Special Machine Co.
Rights Reserved In All Countries

Union Special Machine Company U.S.A.

Printed in U.S.A.

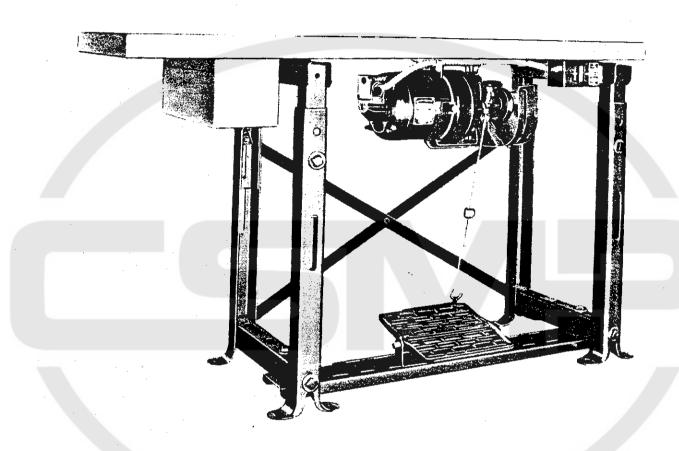

"Electro Drive"

Table Top, drawer, stand, and treadle are shown only for clarity and are furnished separately.

Plate 1 - Full Size

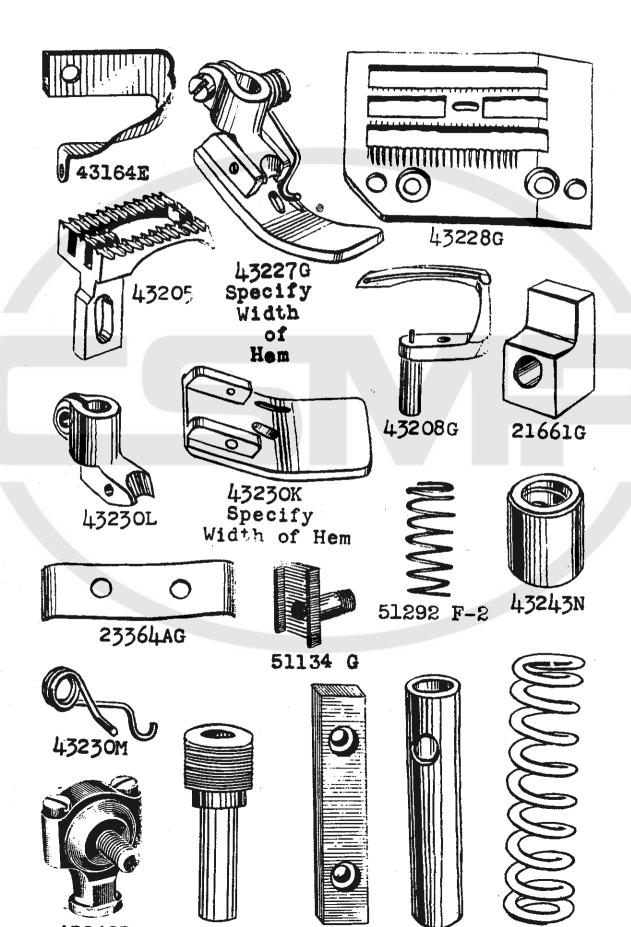


Plate 2 - Full Size


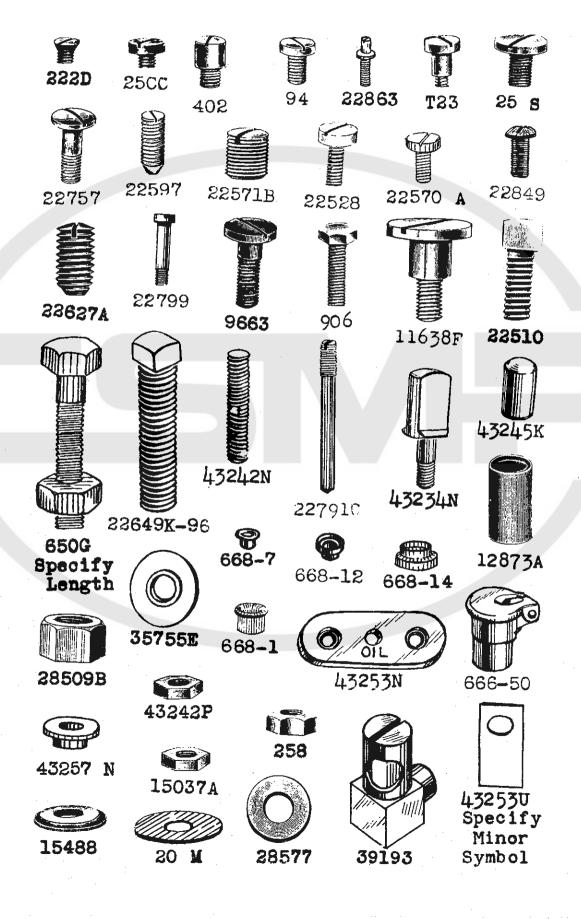


Plate 3 - One-Half Size

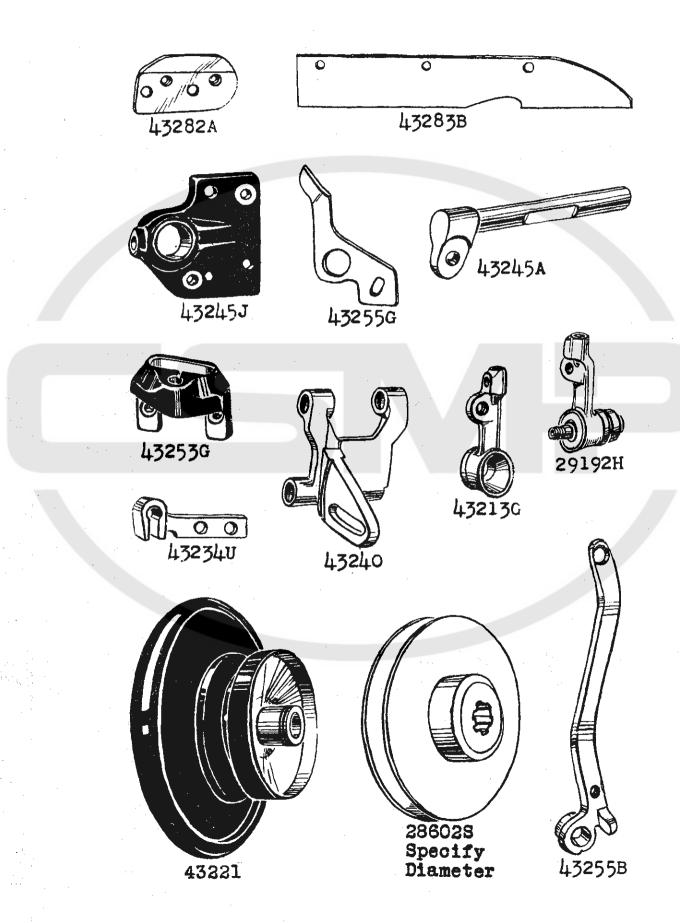

Flate 4 - One-Half Size

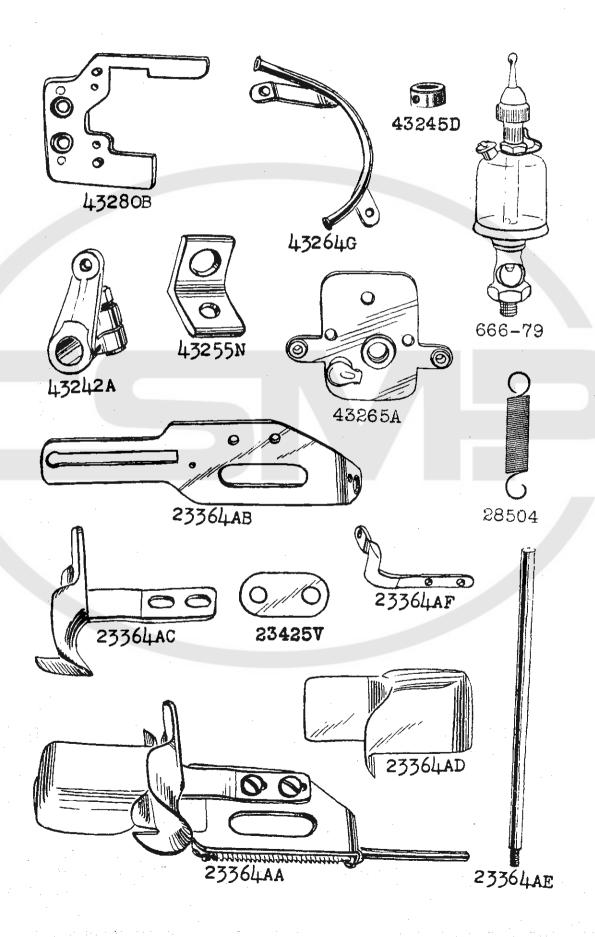


Plate 5 - One-Half Size

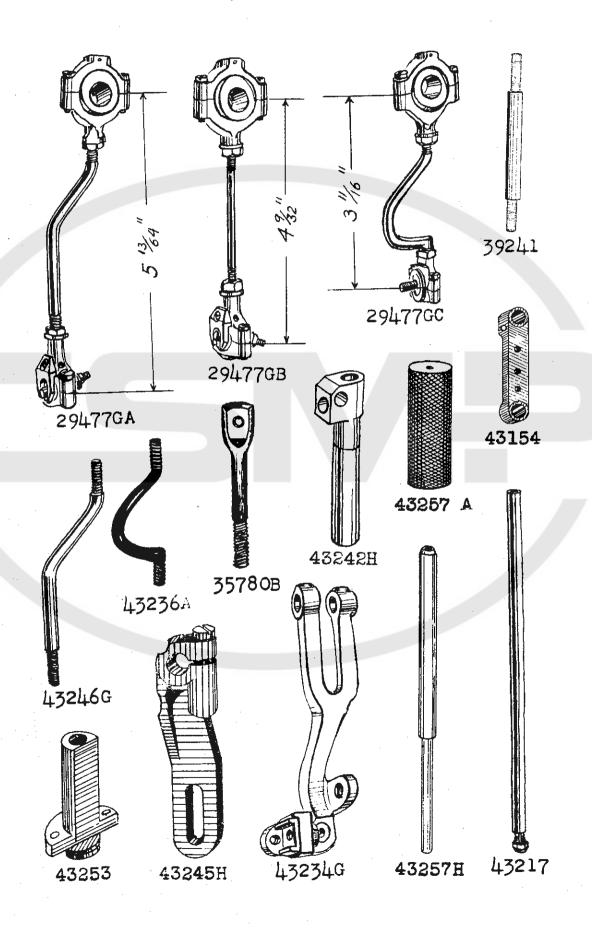


Plate 6 - One-Fourth Size

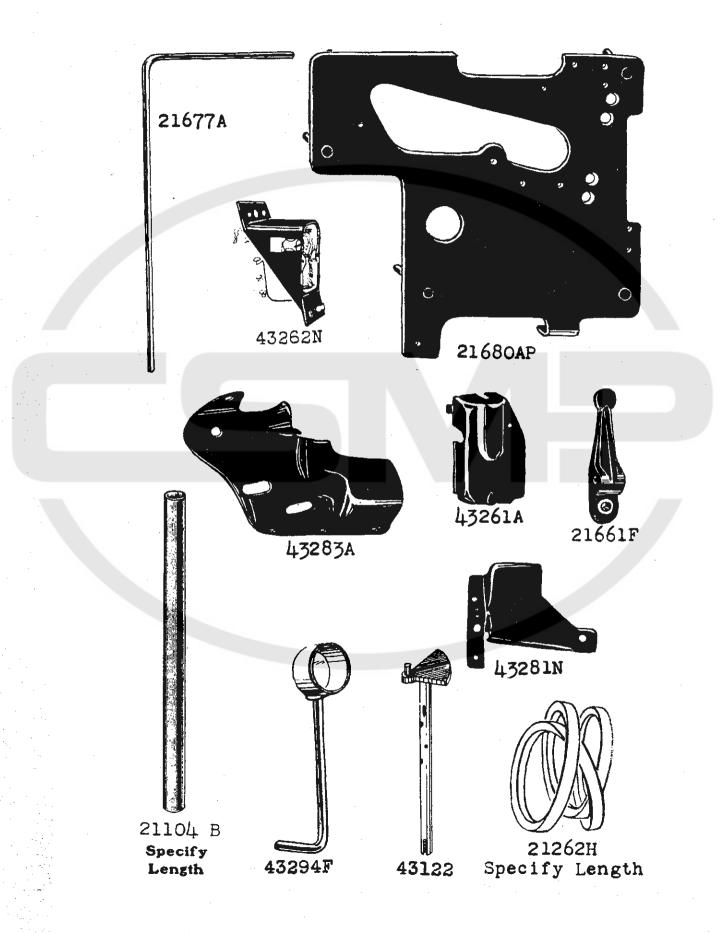


Plate 7 - One-Eighth Size













	LIDI OF TARTO	
Chambra 1	Ma Cinna in the land of the land	Diete
Symbol	The figures in the last column refer only to the	Plate
to Order by	plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	No.
Order by	used in ordering. Refer to pank intere for prices.	
20 M	Usekan fan Irona anaga lawan	
20 M	Washer, for knee press lever Screw, for presser foot spring	2
T23 25 S	for hemmer	2
25 CC	for belt guard, also for No. 43281 N	2
94	for needle thread tension disc	_
/ **	separator	2
222 D	" for main oil reservoir cover	2
258	Nut, for knee press lever, also for No.	
1	35780 B	2
402	Lifter Lever Stop Pin	2
650 G-12	Machine Bolt, hexagonal head, 5/16 x 1 1/2	
	inches, for attaching "Electro Drive" to	_
652-12	belt take-up assembly Washer, 3/16 inch, for belt guard screws on	2
0)2-12	"Electro Drive" installations	
652 A-20	Lock Washer, 5/16 inch, for attaching	
•	"Electro Drive" to belt take-up assembly	\
666-50	Oil Cup, for main oil reservoir cover	2
666-79	Oil Cup Assembly, with sight feed and	
((0.1	signal stop	4
668-1	Porcelain Eyelet, for oil reservoir cover	2
668 -7 668 -1 2	Porcelain Insert, for tension thread eyelet	2
000-12	Porcelain Insert Locking Ferrule, for ten- sion thread eyelet	2
668-14	Porcelain Insert Locking Ferrule, for oil	_
•	reservoir cover	2
906	Screw, for feed bar guiding stud fork	2 2 2 2
9663	for throat plate support bracket	2
11638 F	for knee press lever	2
12873 A	Needle Bar Bushing	2
15037 A	Nut, for feed lift ball joint stud, also for No. 43242 N	2
15488	Washer, for looper drive shaft arm ball	4
1)400	joint	2
21104 B-5	Belt Take-up Hanger Pivot Shaft, 5 inches	
	long (set screw No. 22627 A)	6
21104 B-9	Thread Stand Rod, 9 inches long (screw	ļ. ,
010/0 !! ===	No. 22509)	6
21262 H-350	"V" Belt, No. 2 size, 35 inches long	6
21262 H-370 21262 H-390	HVW Belt, 37 inches long	6
21202 H-590 21300 B-2 1/2	"V" Belt, 39 inches long Carriage Bolt, 3/8 x 2 1/2 inches, for	۱
21700 0-2 1/2	attaching belt take-up and hanger to	-
•	table top	
21371 HM-48	Table Top, 48"x 16"x 1 3/4", for American	
	Safety Table installations	
21371 HM-54	Table Top, 54 inches long	
21371 HM-60	" " 60 inches long	
21371 HN-48	" 48" x 16" x 1 3/4", for "Electro	
	Drive" group installations	
		<u> </u>


	1	nbol to er by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
	21371	HN-54 HN-60 HP-48	" 48"x 16"x 1 3/4", for open line	-
		HP-54 HP-60		
	21371 21375	HQ	Cover Strip, wood, for oil drain Belt Guard, for "Electro Drive" pulley	
	21660		Knee Press Assembly; one each Nos. 20 M, 258, 11638 F, 21661 F, 21664, 21677 A; two No. 21661 G (specify component parts in	1
	21661	F	Knee Press Lever (screw No. 69 FD. stud No.	_
	21661 21677 21680	A	11638 F, nut No. 258)	6 1 6 6
	21697		Belt Take-up and Hanger Assembly, for "Electro Drive" installations: one each	0
			Nos. 21104 B-5, 21697 V, 21697 W, 22627 A; two each Nos. 22649 K-96, 28509 B; three each Nos. 650 G-12, 652 A-20	7
	21697 21697		Belt Take-up Hanger, upper section lower section	<u>-</u>
	22510	-	Cap Screw, square head, 1/4 inch diameter, 5/8 inch long, 20 threads per inch, for	
	22528		transmission treadle bracket Screw, for upper needle bar bearing bracket	2
	22570 22571 22597	В	for hemmer mounting plate Plug Screw, for top oiler hole Spot Screw, for "V" belt pulley	2 2 2 2 2
	22627	A	Set Screw, for belt take-up hanger pivot shaft	2
	2 2649	K-96	Adjusting Screw, square head, 5/16 inch diameter, 1 1/2 inches long, 18 threads per inch, for belt take-up hanger (nut No.	2
	22757		28509 B)	2
	22791 22799	C	Screw Pin, for main shaft crank pin Screw, for needle bar bearing bracket oil	2
	22849 22863		reservoir cover Screw, for lower left side cover Adjusting Screw, for feed dog holder	2 2 2
	23364	AA	Hemmer Assembly; one each Nos. 91 A, 907, 23364 AB, 23364 AC, 23364 AD, 23364 AE, 23364 AF, 23364 AG, 23425 V, 28504; two each Nos. 22593, 22711 (attaching screw	
	23364		No. 25 S) Hemmer Base	4
_	23364 .	AU	Seroii, right (screw No. 22711)	4
			-10	

2:		
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
23364 AD 23364 AE 23364 AF 23364 AG 23425 V 28504 28509 B 28575 B	Hemmer Scroll, left (stop screw No. 91 A) "Operating Rod (nut No. 907) "Slide	444144 27
28577 28578 B 28585 B	22510, washer No. 28577)	7 2 7
28602 S-23	22510, 28576 B, 28577	~
28602 S-24	"Electro Drive" Pulley, 3 inches working	3
28602 s-2 5		3
28602 S-26	"Electro Drive" Pulley, 3 1/4 inches working diameter-	3
28602 S-27		3
28602 S-28		3
28602 S-29	"Electro Drive" Pulley, 3 5/8 inches working diameter-	3
29192 н	"Looper Rocker Assembly; one each Nos.43213G, 15465 F, 51745 lapped together; also one each Nos. 258 A, 22829	3
29470 V	Transmission Accessories Assembly, for	3
29470 W	"Electro Drive" group installations Transmission Accessories Assembly, for	
29477 GA	American Safety Table group installations Looper Avoid Connecting Rod Assembly; one each Nos. 29126 P, 18, 269, 22747, 41255 B, 43241 D, 43246 G. Assembly is set to gauge before shipment. The approximate distance	_
29477 GB	between centers is 5 13/64 inches Feed Drive Eccentric Connecting Rod Assembly; one each Nos. 29126 S, 18, 269, 22747, 39241, 41255 B, 43241 D. Assembly is set to gauge before shipment. The approximate distance between centers is 4 9/32 inches	5

	LIST OF FARIS	
C		
Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order by	used in ordering. Refer to pink insert for prices.	
29477 GC	Feed Lift Eccentric Connecting Rod Assembly;	
	one each Nos. 29126 W, 18, 269, 43235 F,	
	43236 A. Assembly is set to gauge before	
	shipment. The approximate distance be-	ĺ
	tween centers is 3 11/16 inches	ا ۾
35755 E	Washer, for feed lift ball joint stud	5 2
35780 B	Lifter Lever Extension (nut No. 258)	5
39193	Main Oil Reservoir Sight Gauge Assembly; one	י
27-72	each Nos. 660-92, 660-93, 666-49, 39193 A,	
	39193 B	2
391 93 B	Main Oil Reservoir Sight Gauge Base	2
39221	Pulley, grooved, for "V" belt, working	
<i>J</i> /	diameter 2 1/2 inches (spot screw No.	
	22597, set screw No. 22597 A)	
39241	Feed Drive Eccentric Connecting Rod (nut,	
J/-4-	right thread, No. 18, nut, left thread,	
	No. 269)	5
‡ 43122	Main Shaft, including crank pin (crank pin	
1	No. 39161 G, crank pin set screw No.	
	22791 C)	6
43152	Needle Bar Cross Head Guide Block (screw	
	No. 22585)	1
43154	Needle Bar Link	5
43164 E	Needle Bar Link Thread Eyelet, for looper	
	thread (screw No. 87 U)	1
43205	Feed Dog (screw No. 22596)	1
43208 G	Looper (screw No. 73)	1
43213 G	* Rocker	3
\$43217	Needle Bar, includes clamp nut No. 39151	
	(set screw No. 88)	5
43221	Pulley Assembly, grooved for "V" belt, work- ing diameter 2 1/2 inches; one each Nos.	/
	ing diameter 2 1/2 inches; one each Nos.	
	39221, 43221 A; three No. 22559 A	3
43221 A	Pulley Rim, for machines equipped with "V"	
	belt drive (screw No. 22559 A)	-
43227 G-3/8	Presser Foot Assembly, for 3/8 inch hem; one	
	each Nos. 43230 K-3/8, T23, 91, 22799 B,	_
1 7000 5 1 40	43230 L, 43230 M	1
43227 G-1/2	Presser Foot Assembly, for 1/2 inch hem; one	
	each Nos. 43230 K-1/2, T23, 91, 22799 B,	
1,7009 0	43230 L, 43230 M	1
43228 G	Throat Plate (screw No. 28)	1
45250 K-5/8	Presser Foot Bottom, for 3/8 inch hem (hinge	_
1.7070 V 1/0	screw No. 22799 B)	1
45450 V-1/5	Presser Foot Bottom, for 1/2 inch hem (hinge	
1.2220 T	screw No. 22799 B)	1
43230 L	Presser Foot Shank	1
43230 M	Presser Foot Spring (screw No. T23)	1
‡43234 G	Feed Bar, including tiltable feed dog holder	
ļ	No. 51134 G (set screw No. 89, feed dog	
	holder adjusting screw No. 22863)	.5
	-1/1-	

Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order by	used in ordering. Refer to pink insert for prices.	1.01
	• ******	ì
43234 N	Feed Bar Guiding Stud (nut No. 907, lock	-
	washer No. 652 C-9)	
43234 U	Feed Bar Guiding Stud Fork (screw No. 906)	2
43236 A	Feed Lift Eccentric Connecting Rod	3 5 3
43240	Feed Rocker	12
43240 U	" Shaft Bushing]2
43242 A	Looper Drive Shaft Arm, front (clamp stud No.	1+
	43242 J, nut No. 51246, washer No. 6042 A)	1,
‡43242 B	Looper Drive Shaft Arm Ball Joint (bearing	4
, , ,	screws No. 97 A, stud washer No. 15488)	1_
43242 н	Looper Drive Shaft Arm, rear	1
43242 N	Connecting Red (nut -1-14 1)	5
12-4	Connecting Rod (nut, right thread, No.	
43242 P	15037 A, nut, left thread, No. 43242P)	2
43243 N	Connecting Rod Nut, left thread	2
43245 A	Drive Shaft Bushing	2 1 3
43245 D	1 14010 011010	3
T)-4) 2	Avoid Shaft Collar (set screw No. 88,	1.
43245 H	spot screw No. 22764)	14
47647 11	Avoid Adjusting Arm (clamp screw No.	
43245 J		<u> </u> 5
47547 0	Avoid Shart Bracket (screw No. 22757.	1
43245 K	dowel pin No. 43245 K	3
43246 G	Avoid Shall bracket Dowel Pin	2
47240 0	Avoid Eccentric Connecting Rod (nut,	
	right thread No. 18, nut, left thread No. 269)	Į
43253	Needle Ber Buching 1	5
\$43253 G	Needle Bar Bushing, lower (screw No. 22707)	15
++/-//	pourting bracket, includes bushing	
43253 N	No. 12873 A (screw No. 22528)	13
42-72 1	" Bearing Bracket Oil Reservoir	
43253 U-4	Cover (screw No. 22799)	2
47-77 0 4		
43253 U-5	ing bracket	2 2 2 2
43253 U-6		2
43253 U-7	" .006 inch thick	2
13253 II-8	OOS inch thick	
43253 U-8 43253 U-9	" .008 inch thick	2 2 3
43255 B	" .009 inch thick	2
43255 G		3
47277 6	Needle Thread Tension Disc Separator (screw	
12055 N	No. 94)	3
43255 N	Lifter Chain Guide Bracket, for guiding chain	
	around the "Electro Drive" on "Electro"	!
1.2057 4	Drive" installations	4
43257 A	Presser Spring Regulator	5
43257 H	Plunger	5 5 2
43257 N	" Cap (screw No. 22585)	2
43257 U	" Bearing	ī
43261 A	Needle Bar Cover (hinge pin No. 43261 D)	6
.]		
	16	

	LIST OF PARTS	
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
43262 J	Side Cover, left (attaching screw No. 22848, porcelain insert No. 668-1, porcelain insert ferrule No. 668-14)	7
‡43262 N	Main Oil Reservoir Assembly (sight gauge No. 39193, oil cup No. 666-11)	6
43264 G	Looper Thread Tube (screw, lower, No. 98 A, screw, upper, No. 376)	4
‡43265 A	Main Oil Reservoir Cover and Lead-in Thread Eyelet (attaching screw No. 222 D, oil cup No. 666-50, porceelain insert No. 668-1,	
43280 B 43281 N 43282 A	porcelain insert ferrule No. 668-14) Throat Plate Support (screw No. 376) Rear Cover (screw No. 25 CC) Hemmer Mounting Plate (screw No. 22570 A)	4463
43283 A 43283 B	Side Cover, lower, left (screw No. 22849) Gasket	63636
43294 F 43457 B 51134 G	Oil Drain	6
51292 F-2	washer No. 6042 A)	1
71292 1-2	Tension Spring, for Tooper on eads	-
	·	

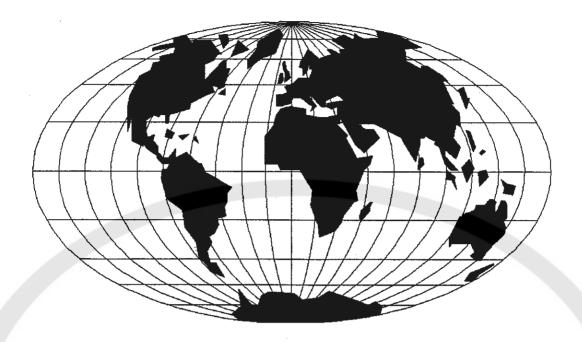

WORLDWIDE SALES AND SERVICE

Union Special Corporation maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special Corporation representatives and service technicians are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a qualified representative to serve you.

Brussels, Belgium
Charlotte, N.C.
El Paso, TX
Hong Kong, China
Huntley, IL
Leicester, England
Lille, France
Miami, FL
Milan, Italy
Möglingen, Germany
Montreal, Quebec
Osaka, Japan
Santa Fe Springs, CA

Other Representatives throughout all parts of the world.



