ILLUSTRATED SPARE PARTS LIST
FOR
HIGH SPEED
SAFETY STITCH MACHINE



MODELS & DEVICES

Z361 Z362 Z365

Z366 Z367 Z368

C--K-MT-MTIO

The Guideline to Utilize Parts Book for Class Z361

Quickly and without mistake, when certain part must be replaced for repair or remodelling, you will obtain the right object in your hands by means of this Parts Book which shows names and numbers in contrast with illustrations by each mechanism.

Parts for Z361-A3DF (A4), the standard model, are shown from Page 1 to 13, and those for Sub-models, Attachments and Extra Parts to be supplied on extra orders from Page 14.

Note: * Parts for Sub-models are shown only by those different from the standard model.

* Parts used in common with the standard model are not shown except those of virtual lines (two-dots chain lines).

For your convenience, Gauge Parts are shown in List of Spare Parts", Page 21.

By Parts Numbers listed in *INDEX" from Page 22, you can easily check the shape and /or setting spot of parts on machines.

Your purchase order must be placed with their own numbers!

Additionally, kindly understand that there may be some changes in numbers or shapes of parts owing to our constant technical improvements, because the Parts Book has been made on the basis of the production in May, 1982.

〈パーツブックご利用に際して〉

この度は、ヤマトZ361クラスのミシンをお買上げ頂き、誠にありがとうございます。

このパーツブックは修理交換用の部品や他のモデルに改造する場合等に目的の部品をいち早く 捜して頂くため、分かり易く機構別にイラストと表を対比して掲載しております。


すなわち、Z361-A3DF(A4)を基本モデルとし、1ページから13ページまでを基本モデル、14ページからサブモデル、附帯装置及び特注部品の部品を掲載しております。このサブモデルの部品構成は、基本モデルと異なる部品のみを掲載しており、仮想線(2点鎖線)及び無掲載の部品は基本モデルと共通使用のものでありますから、この点ご留意ください。

ゲージパーツ関係は21ページに主要部品リストとして分かり易く表にしてありますので合わせてご利用ください。

また、部品番号で部品の形状や、ミシンのどの部分に組込まれている部品か等をお調べの場合は22ページからの索引(INDEX)にて簡単に引き出せます。

部品をお求めの際は部品番号でお間違いのないようお願いします。

なお、このパーツブックは1982年5月現在製造中のミシンを基本に作成しております。品質性能に関しましては絶えず研究し、日々改良を加えておりますので部品番号及び形状等が異なる場合がありますからご了承ください。

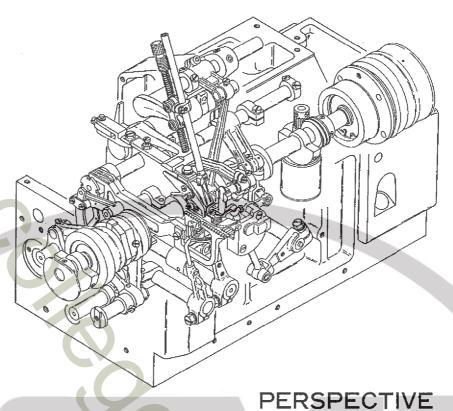

透 視 図

CONTENTS

目次

MISCELLANEOUS COVERS (1) ·············カバー関係(1)··········· 1
" " (2) ······· 2
MISCELLANEOUS COVERS (1) ・・・・・・カバー関係(1)・・・・・ 2 ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・
MISCELLANEOUS THREAD EYELETS ····································
CRANKSHAFT & MISCELLANEOUS BUSHINGS ··············主軸及びブッシュ関係···········5
NEEDLE BAR DRIVING MECHANISM ······ 針棒機構····· 6
KNIFE DRIVING MECHANISM 7
PRESSER FOOT MECHANISM ············押工機構························
UPPER LOOPER DRIVING MECHANISM ······上ルーパ機構······· 9
LOWER & DOUBLE CHAINING LOOPER DRIVING MECHANISM下ルーパ及び二重環ルーパ機構…1〇
FEED DRIVING CONTROL MECHANISM ······11
FEED DRIVING MECHANISM・・・・・・12
LUBRICATING MECHANISM ············13
EXTRA & Z361-Y·C, 362-A·Y·C EXCLUSIVE PARTS······特注部品及びサブモデル専用部品·····14
Z365-A, 366-A, 367-A EXCLUSIVE PARTSサブモデル専用部品15
Z365-C, 366-C EXCLUSIVE PARTS······ 16
Z368-A EXCLUSIVE PARTS ····································
"C" & "K" DEVICE ·······18
"MT" DEVICE ·······19
THREAD STAND & SUPPORTING BOARD ····································
LIST OF MAIN SPARE PARTS主要部品リスト21
INDEX ····································

Illustration of this Parts Book is based on the Model Z36I-A3DF(A4DF). このパーツブックはZ36I-A3DF(A4DF)を基本にしてイラストを作成しております。


Ref.	Parts				
No.	No.	Description	E	. €9	Amt.
		2 cocreption		名	Req.
1	31880	Machine Frame			1
2	33209	Base Gasket ·····	フレ ム・	. +. \	1
3	36501	Base	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	, ~ >	1
4	32421	Drain Hole Seal for Inner	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・		
5	5076	Drain Hole Screw for Inner	・・・・・・・・・・・ベース 油却	もキネジ(大)	1
6	567	Drain Hole Seal for Outer	・・・・・・・ベース 油却	x t ポン (ハ) bキ パッキン (小)	1
7	9852	Drain Hole Screw for Outer	・・・・・・・・ベース油却	ちキネジ(小)	1
8	33284	Chip Guard (Lower)			····· 1
9	1330	Screw for 33284	切唇除ケボ	- ネ ジ	1
10	34628	Adapter (Short) ·····	······アダプタ(:	 短)······	4
	00070				
11	32879	Base Rubber Cushion (Blak-colored)			
12	33627	" (Green-colored)	····・ベースゴム	.座	1
13	5519	Screw for 36501	ベース止ネ	、ジ・・・・・・・・・	4
14	563	Washer for 36501	ワッシャ…		4
15	570	Seal for 36501	ベースパッ	/キン	4
16 17	317	Seal for 36501	ベースパッ	/キン	4
18	33026	Rubber Cushion Holding Plate	·····ベースプレ	· — h	1
7 7 7 1	6910	Wood Screw for 33026	ベースプレ	・ート止ネジ・・・・・	4
19 20	31883	Cloth Plate (Upper)	⋯⋯クロスプレ	· –	1
20	34507	Cloth Plate Latch Bracket	······クロスプレ	・一トバネ掛ケ片	1
21	532	Washer for 34507 ·····		. 나가 얼마나다	T . 2 1
22	4358	Screwfor 34507	クロスプレ	トバネ掛クカ	ソツンヤ······ 1 ルラビ······· 1
23	9143	Screw for 34507	フロスフレ	一トハイ母リカ。 一トバラ樹た片	ルネン······· 1 ルネジ······· 1
24	36515	Cloth Plate Spring	・・・・・・・・・・クロスプレ	・ ト配シバネ	1
25	7006	Screw for 36515	・・・・・・・クロスプレ	・一ト戻シバネル	± 55 1
26	335	Stopper Nut for 31883	····・・・・・・クロスプレ	・ートストッパネ	ジナット 1
27	7405	Stopper Screw for 31883	クロスプレ	ートストッパネ	· · · · · · · · · · · · · · · · · · ·
28	36516	Cloth Plate Latch	クロスプレ	ートフック・・・・・	
29	322	Nut for 36516	・・・・・・クロスプレ	ートフックナッ	k 1
30	1174	Screw for 36516	クロスプレ	ートフックルネ	ジ1
	0.4500				
31	34509	Cloth Plate Latch Spring	クロスプレ	ートストップバ	ネ1
32	6066	Screw for 34509	クロスプレ	ートストップバ	ネ止ネジ 1

-	Ref. No.	Parts No.	<u>Description</u>	品		Amt. Req.
	1	36429	Top Cover (Right)	・・・・ トカバー	· (去)	1
	2	4445	Screw for 36429, 36333, 36240	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	·····	0
	3	36414	Top Cover Gasket (Right)	・・・・トカバー	パッキン(右)	1
	4	36336	Packing Piece for 36429	・・・・トカバー	(右)該栓	1
	5	32970	Thread Lead Bar		7. H / Sh 1-7	1
	6	4435	Screw for 32970	糸渞棒止	ネジ	1
	7	36333	Top Cover (Left)	上カバー	(左)	1
	8	9106	Screw for 36333	…上カバー	(左)止ネジ	2
	9	36507	Top Cover Gasket (Left)	…上カバー	パッキン(左)	1
	10	36334	Top Cover Gasket (Small)	…上カバー	パッキン(小)	1
	11	20004	Oil Cap	・・・オイルキ	± ,,, ² , , , , , , , , , , , , , , , , , , ,	1
	12	20005	Oil Cap O-ring	ーイールモ …オイルモ	マップのいった	1
	13	36479	Packing Piece	カールイ	4996927	1
	14	916	Brand Name Plate			1
	15	33562	Double Chaining Looper Thread Eyelet (Rear)	…後糸渚…		1
	16	4440	Screw for 33562, 31871, 32607			
	17	36179	Needle Thread Cover	…針糸カバ		1
)	18	1016	"Z" Mark	… Zマーク	*************	1
,	19	32620	Needle Thread Cover Latch Spring	…針糸カバ	ーバネ	1
	20	7006	Screw for 32620	…針糸カバ	 バネ止ネジ	2
	21	32622				
	22	36240	Needle Thread Cover Pin	···針糸カバ	ーピン	1
	23	32618	Side Cover Gasket	… 顔カハー		1
	24	31885	Cloth Plate Hinge	… 横カハー	バッキン	1
	25	34639	Cloth Plate Hinge Gasket	…クロスノ	レートヒンジ····································	1
	26	5089	Screw for 31885	…クロスフ	レートピンシバッキン	1
	27	528	Washer for 31885	…クロスフ	レートヒンジ止ネジ	5
	28	34637	Cloth Plate Eccentric Bushing	ノッンヤ	1 1 A- 1 5 5 5	I
	29	7650	Screw for 34637	・・・クロスノ	レートエキセンノッンュ・・・・	1
	30	34505	Cloth Plate Hinge Pin Collar	…クロスノ↓	ノートエキセンノッシュ止ネン レートレンジピンカラ	···· 1
	31	1459	Screw for 34505	…クロスプレ	ノートヒンジピンカラー止ネジ	1
1	32	31871	Chip Guard Support	…切屑落シ	板取付板	1
	33	31872	Chip Guard (Fixed)	…切屑落シ	板(大)	1
	34	1330	Screw for 31872 ····	…切屑落シ	板(大)止ネジ	2
	35	1223	Screw for 31872	…切屑落シネ	板(大)止ネジ・・・・・・・・・・・・・・・・・・・・・・・	1
<u>(</u>)	36	32607	Front Cover Hinge	…前開キカ	バーヒンジ	1
	37	32608	Front Cover Hinge Pin	…前開キカ	バーヒンジピン	···· 1
	38	31873	Chip Guard (Openable)	…切屑落シホ	版 (小) ···	1
	39	5131	Screw for 31873	…切屑落シオ	版(小)止ネジ	2
	40	36435	Front Cover	…前開キカ	/ <u>`</u> `	1
	41		Model Plate (See the table.)	·型式板(下	表参照}	1
	42		Gauge Indicate Plate (See the table.)	・ゲージ記	号板(下表参照)	1
	43		Device Indicate Plate (See the table.)			
	44-1	2528	Threading Chart (Z361)	・・糸通シ図・		1
	44-2	2529	" " (Z362) ·····	,, .		1
	45	32609	Front Cover Latch Spring	…前開キカノ	バーバネーーーー	1
	46	4358	Screw for 32609	…前開キカ/	バーバネ止ネジ	1


Model Plate	Parts No.
Z361	18650
Z362	18651
Z365	18652
Z366	18653
Z367	18654
Z368	18655

Gauge Indicate Plate	Parts No.
Y4DF	20804
A3DF	20802
A4DF	20806
A4GF	20770
C5DF	20810
C5GF	20771


Device Indicate Plate	Parts No.
/K .	18700
/MT	18701
/MT10	18774

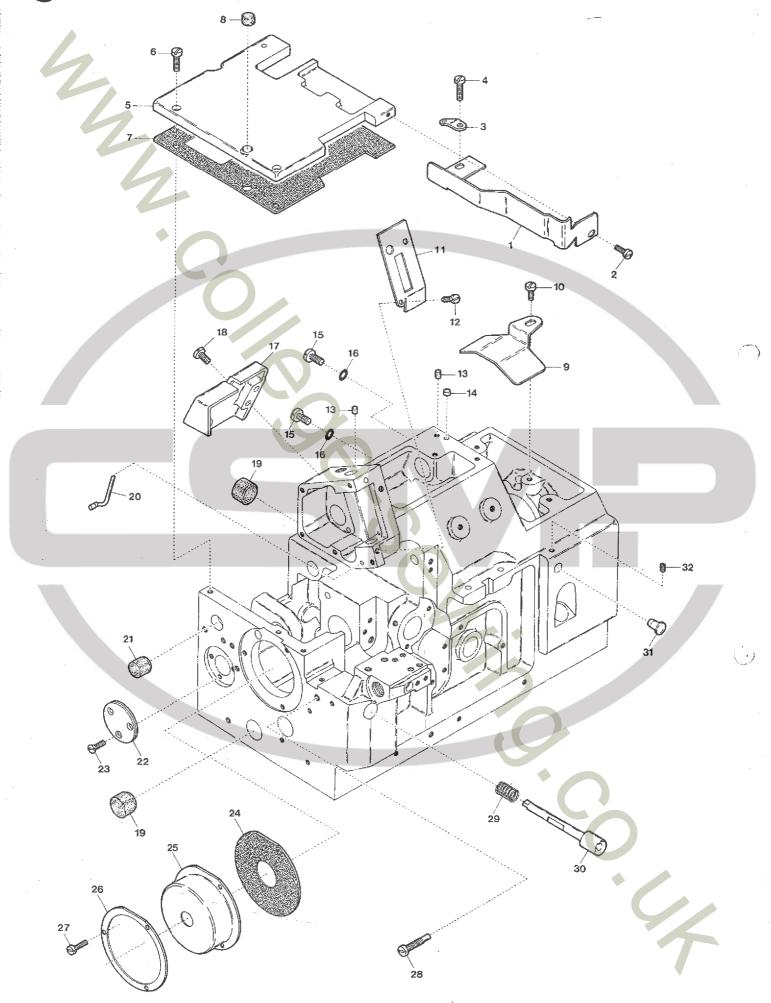

Ref. No.	Parts No.	$\underline{\textit{Description}}$		各	Amt. Req.
1	33653	Fabric Guide ·····	布滑り案[内板	1
2	4353	Screw for 33653			
3	33764	Double Chaining Looper Thread Eyelet			
4	4441	Screw for 33653			
5	34675	Feed Mechanism Cover			
. 6	4437	Screw for 34675	·················送リ上カ	バー止ネジ	2
7	34676	Feed Mechanism Cover Gasket ·····			
8	32604	Cloth Plate Rubber Cushion			
9	32663	Worm Oil Shield			
10	9853	Screw for 32663	····・・ウォーム:	カバー止ネジ・	1
11	32627	Needle Bar Connecting Link Cover	Allet Luc		
12	1223	Screw for 32627			
13	930	Oil Seal Plug			
14	928	Oil Seal Plug			
15	5078	Screw for Machine Frame			
16	20538	Seal Ring for 5078			
17	36384	Foot Lifter Hinge Cover			
18	4440	Screw for 36384·····			
19	36808	Seal Plug for Machine Frame			
20	32429	Wire			
20	32-123	Title .	************************************	IIIII)	1
21	33265	Seal Plug for Machine Frame			1
22	33013	Feed Bar Driving Shaft End Cap			
23	5345	Screw for 33013	送り軸蓋」	 止ネジ·······	3
24	33012	Crankshaft Ball Bearing (Small) Gasket			
25	33037	Crankshaft Ball Bearing (Small) Cap	端ブッシ:	ュ 蓋	1
26	33038	Crankshaft Ball Bearing (Small) Cap Clamp	端ブッシ:	ュ蓋リング	1
27	1174	Screw for 33038	端ブッシ:	ュ蓋リング止れ	きジ 3
28	5094	Screw for 36216	・・・・・・・・ブッシュ۶	ボタンガイドネ	ネジ 1
29	33131	Feed Dog Regulating Pushbutton Spring			
30	36216	Feed Dog Regulating Pusbbutton	・・・・・・ブッシュマ	ボタン	1
31	32612	Seal Plug			1
32	3434	Screw for 32612			

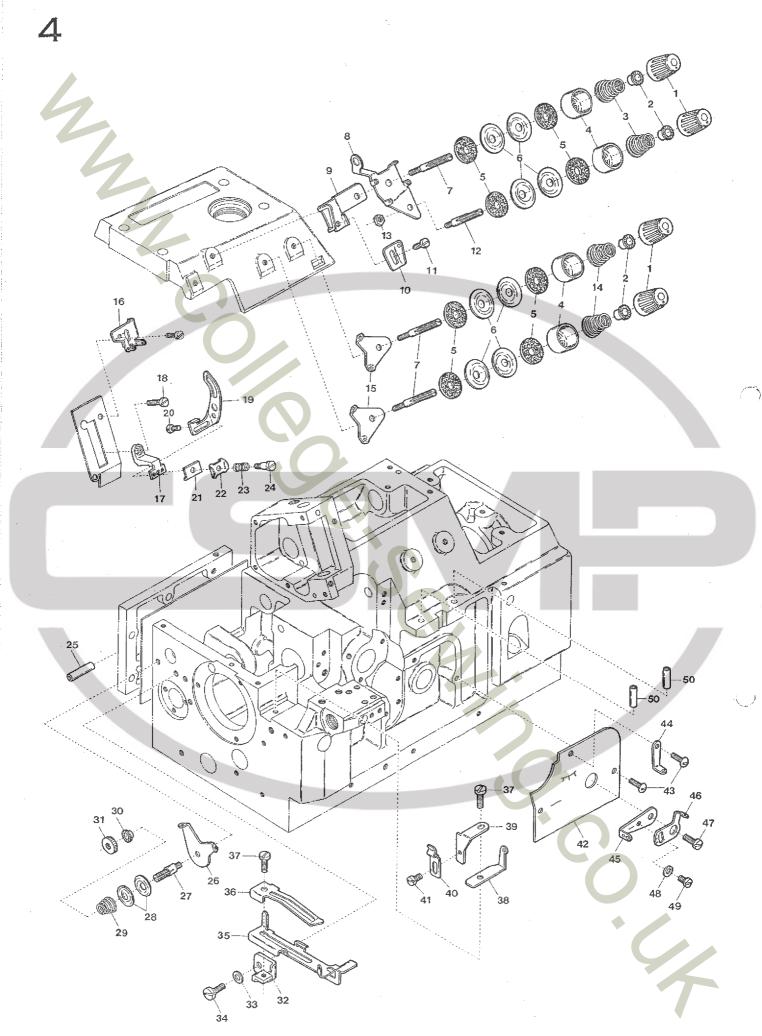


Ref. No.	Parts No.	Description	品	<i></i>	Amt.
	1101	Description			Req.
1	24084	Thread Tension Spring Cap	糸調子バ	ネキャップ(F)	4
2	24083	Tension Spring Bushing		ット回り it メー・・・・・・	4
3		Needle Thread Tension Spring	小小針糸調子	ブトロンエハ バネ (大)	2
. 4	20118	Thread Tension Spring Retainer			
5	177	Felt for 31111	・・・・・・フェルト		
6	31111	Tension Disc	糸調子面		8
7	7904	Tension Post (Long)	······	(長)	
8	36399	Needle Thread Tension Disc Eyelet	調子台糸	首	1
9	31888	Double Chaining Needle Thread Eyelet Holder	二重環針:	一 糸道台	1
10	35366	Double Chaining Needle Thread Eyelet			
	1050				
11		Screw for 35366	······二重環針:	糸道止ネジ	1
12	— .	Needle Thread Tension Post (Short)	糸調子棒	〈短〉·····	1
13		Nut for 4125	ナット・・・		1
14		Looper Thread Tension Spring	ルーパ糸	調子バネ・・・・・・	2
15		Looper Thread Tension Disc Eyelet	調子台系	道	2
16		Needle Thread Eyelei			
17	35364	Needle Bar Thread Retainer Bracket	·····小調子台·		1
18		Screw for 35364	小調子台』	止ネジ	1
19		Needle Thread Pull-off	針糸繰り	***************************************	1
20	1228	Screw for 35365	針糸繰り』	止ネジ ・・・・・・・	2
21	36175	Needle Bar Thread Retainer Plate Support			1
22	32425	Needle Bar Thread Retainer Plate			
23	32426	Needle Bar Thread Retainer Spring			
24		Screw for 32425	小嗣子ハ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	トラミン	1
25		Looper Thread Eyelet Pipe (Long)	小嶋) 皿」	ピイン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
26	20123	Double Chaining Looper Thread Tension Disc Es	ルルフェー ielet …二番i	罗国子女女诗	1
27	4120	Tension Post	, c.c.	水刷) 日水地	1
28	20124	Tension Disc	音語為	周子	2
29	20125	Double Chaining Looper Tension Spring	2000年上	周子バラ	
30	20126	Tension Spring Bushing		周子ナット同日止メ	1
31	182	Thread Tension Spring Nut	調節ナッ	<u> </u>	1
32		Thread Take-up Eyelet Bracket	糸調子カム	ム糸道台	1
33	10	Spring Washer for 36640	スプリン?	グワッシャ	1
34	6004	Screw for 36640	・・・・・・糸調子カム	ム糸道台止ネジ	1
35		Double Chaining Looper Thread Eyelet	糸調子カム	4条道	1
\bigcirc 36	33205	Thread Retaining Finger			
37	9853	Screw for 33205, 36643			_
38	20128	Double Chaining Looper Thread Eyelet	二重環ル-	- パ糸道	1
39	36643	Stopper Holder			
40	36641	Double Chaining Looper Thread Eyelet Stopper	カム糸道ス	ストッパ	1
41	5044	Screw for 36641	7 77.344		a
42	36531	Looper Thread Eyelet Support			
43	1326	Screw for 36531, 36533			
44	36533	Looper Thread Eyelet (Left)			
45	36534	Looper Thread Pull-off	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	(左)	<u>I</u>
46	36532	Looper Thread Full-off Looper Thread Eyelet (Right)			
47	4440	Screw for 36534 ·····		3(石)	1 1
48	14	Washer for 36532	ニルーハオ	で迷りエイン	1
49	1227	Screw for 36532	フッシャー	当(士) ルラミニ	1
50	32963	Looper Thread Tube	ルーハポル - ハボ岩 パイー	さいい かい か	1
		The second secon	- バス厚く!! イ		_

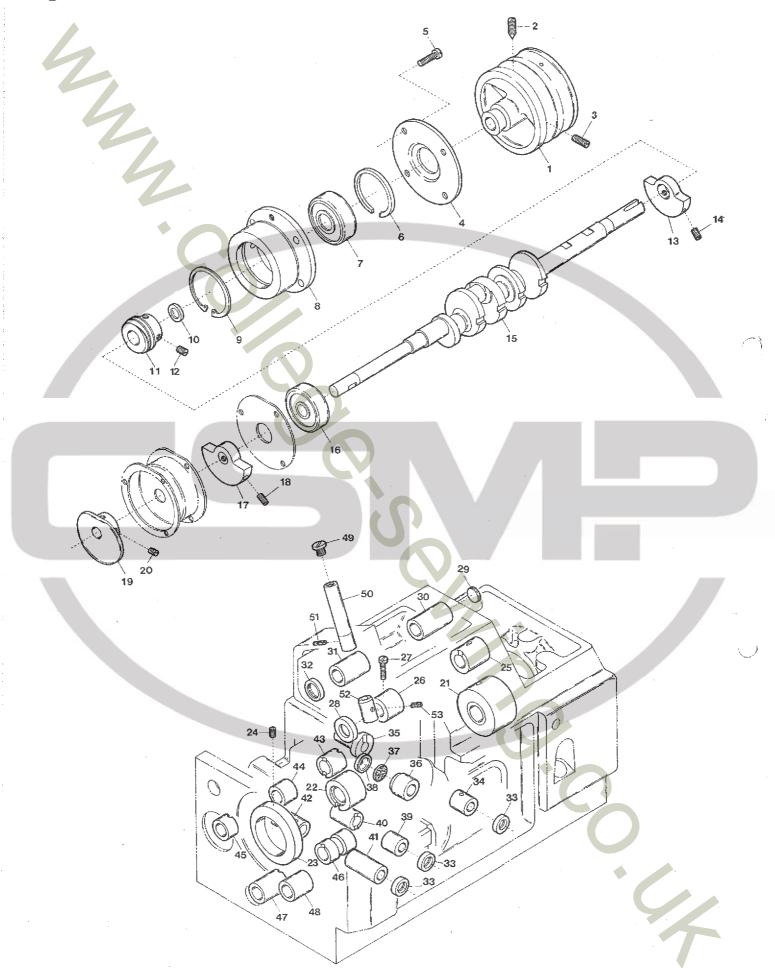


						_
	Ref.	Parts	.			Amt.
	No.	No.	<u>Description</u>			Req.
	1	31887	D. H			
	2	3591	Pulley	····ブーリ···		1
	3	9203	Sub-Screw for 31887	・・・・フーリ決	:メネジ・・・・・	1
	4	32817	Crankshaft Ball Bearing Housing Cap			
	5	4441	Screw for 32817	…大フッン	ユ 薀・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
	6	32818	Crankshaft Ball Bearing Retaining (Outer)	… 人 ノッノ	ユ 煮 止 不 ン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
	7	32777	Crankshaft Ball Bearing	·・・・ボールベ	アリング・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
	8	32775	Crankshaft Ball Bearing Housing			
	9	32778	Crankshaft Ball Bearing Retaining Ring (Inner)			
	10	33899	Crankshaft Ball Bearing Washer			
	11	32925	Oil Pump Driving Worm			
	12	7650	Screw for 32925		1 & **	I
	13	33077	Crankshaft Counterweight (Right)	…ソオーム	止るン	2
	14	1437	Screw for 33077	…ハランス	フェイト(右) ウェイト(左)止きだ	
	15	33080	Crankshaft	…クランク	シェイト(石)エネン	1
	16	33052	Crankshaft Ball Bearing	…ボールベ	アリング(小)・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
	17	33079	Crankshaft Counterweight (Left)	…バランス	ウェイト(左)	
	18	9029	Screw for 33079 ····	…バランス	ゥェイト(左) ウェイト(左)止ネジ	2
	19	33200	Double Chaining Looper Thread Take-up	…糸調子カ	<u> </u>	1
	20	1457	Screw for 33200	…糸調子カ	ム止ネジ・・・・・・	2
	21	32681	Crankshaft Bushing (Inner)	4-3 3		
	22	31833	Crankshaft Bushing (Left)	… 甲フッシ	.a ·····	1
	23	33051	Crankshaft Ball Bearing (Small) Housing	…小 ノッン	그 · · · · · · · · · · · · · · · · · · ·	······ £
	24	3434	Screw for 33051	…婦ブッシ	ュー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
	25	31840	Upper Knife Driving Shaft Bushing (Right)	・・・・トメス軸	ゴルネン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
	26	31839	Upper Knife Driving Shaft Bushing (Left)	・・・トメス軸	ブッシュ(左)·············	1
	27	2133	Screw for 31839	…上メス軸	ァッシュ(左) ブッシュ(右) ili ネジ·····	î
	28	32906	Upper Knife Driving Shaft Oil Seal	…上メス軸:	オイルシール・・・・・・・・・・・・・・・・	ī
	29	32650	Needle Bar Driving Crank Bushing Plug	…詰栓(12∮)	ī
	30	31838	Needle Bar Driving Crank Bushing (Right)			
	31	32647	Needle Bar Driving Crank Bushing (Left)	실병수교	`	*
	32	32684	Needle Bar Driving Crank Oil Seal	…針核クプ.	ノク軸 ノッシュ (左)	1
	33	30291	Looper Driving Shaft Oil Seal	・・・ 川ノー・・・ パ連由・	ナイルシール・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	3
	34	31841	Upper Looper Driving Shaft Bushing (Front)			
	35	31842	Upper Looper Driving Shaft Bushing (Rear)			
٠	/ 36	31 834	Upper Looper Bar Guide Bushing	…ル ~ パ案	カブッシュ······	1
	37	527	Oil Wick for 32350	…ルーパ案!	カブッシュ蓋油芯	1
	38	32350	Upper Bar Guide Bushing Cap			
	39	31844	Lower Looper Driving Shaft Bushing (Front)			
	40	31845	Lower Looper Driving Shaft Bushing (Rear)	…下ルーパ	触ブッシュ(後)	····· 1
	41	31847	Double Chaining Looper Driving Shaft Bushing (Fr.	ont lu mat	豊ルーパ軸 ブッシュ(命)	1
	42	31848	Double Chaining Looper Driving Shaft Bushing (Red			
	43	31853	Feed Bar Driving Shaft Bushing (Right)			
	44	31852	Feed Bar Driving Shaft Bushing (Middle)			
	45	31851	Feed Bar Driving Shaft Bushing (Left)	送り軸ブ-	ッシュ(左)	1
	46	31850	Looper Rocker Shaft Bushing (Right)	…ルーパ前行	後軸 ブッシュ (右)	1
	47	31849	Looper Rocker Shaft Bushing (Left)	…ルーパ前行	後軸ブッシュ(左)	1
	48	33119	Differential Feed Control Lever Shaft Bushing	…調節レバ-	- 軸ブッシュ	1
	49	3636	Cap Screw for 31835	・針棒 ブッミ	シュ(上)蓋ネジ	1
	50	31835	Needle Bar Bushing (Upper)	…針棒 ブッミ	ンュ (上)	1
	51	353	Oil Wick for 31835	油芯		1
	52	31836	Needle Bar Bushing (Lower)			
	53	325	Oil Wick for 31836 ·····			

D.f.	D			
Ref. No.		Description	品 名	Amt.
		2000100000	10	Req.
1	32670	Needle Bar Connecting Rod		1
2	5071	Screw for 32670	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
3	34405	Connecting Rod Roller Bearing (Standard)	****ログドエイン (煙淮)・・・・・・・・ニードルベアリング(煙淮)・	
3	32819) 1
4	32644	Needle Bar Driving Lever		
5	5520	Screw for 32644	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
6	32921	Needle Bar Connecting Rod Pin	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
7	4410	Screw for 32921	·····・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
8	32662	Needle Bar Driving Crank Counterweight	針 終ウェイト	1
9	3635	Screw for 32662	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
10	32646	Needle Bar Driving Crank Collar	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	
11		Screw for 32646	針棒クランク軸カラー止ネジ	<i>j</i> 2
12		Needle Bar Driving Crank	······針棒クランク軸······	1
13		Needle Bar Connecting Link	·····針棒リンク······	1
14		Needle Bar Connecting Link Pin	針棒リンクピン	2
15		Oil Wick for 90320	油芯	2
16		Screw for 90320	針棒リンクピン止ネジ	1
17	1111	Screw for 90320	針棒リンクピン止ネジ	1
18		Needle Bar Connecting Bracket	針棒抱キ	1
19		Screw for 32651	針棒抱キ止ネジ	1
20	37372	Needle Bar ·····	······針棒······	1
21	38101	MHCl		
22		Needle Clamp	針止メ	1
	-1	Screw for Needle	針止ネジ	2
	-2	Needle (System: DC×1)	·······針(DC×1)··········	1
24	_	" (System: DM×13)	// (DM×13)	1
24	_ 00000	Stitch Plate (A3)	···········針板(A3)··············	1
25	- 00070	(111)	(A 4)	1
26		Screw for Stitch Plate	·············針板止ネジ·············	1
27		Stitch Plate Support	·····・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
28		Screw for 33006	············針板受ケ止ネジ·············	2
29		Cloth Plate Rubber Cushion	···············理メ麼(大)····································	1
30	1.71	Needle Guard (Front) (A3, A4) (Double Chain	Stitch) …インタ針受ケ(前) (A3, A	4) 1
30	4404	Screw for 33089, 33087	·····-針受ケ(前)止ネジ······	2
31	33086	Needle Guard (Rear) (Overlock Stitch)	*************************************	1
32	5098	Srcew for 33086, 33088	イニハヨマソ (後) ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
33		Needle Guard (Front) (Overlock Stitch)	到文ツ (板)エネンオーバ社界を(前)。	
34	33088	Needle Guard (Rear) (Double Chain Stitch)		
		The state of the s	→ → → → → → → → → → → → → → → → → → →	тт

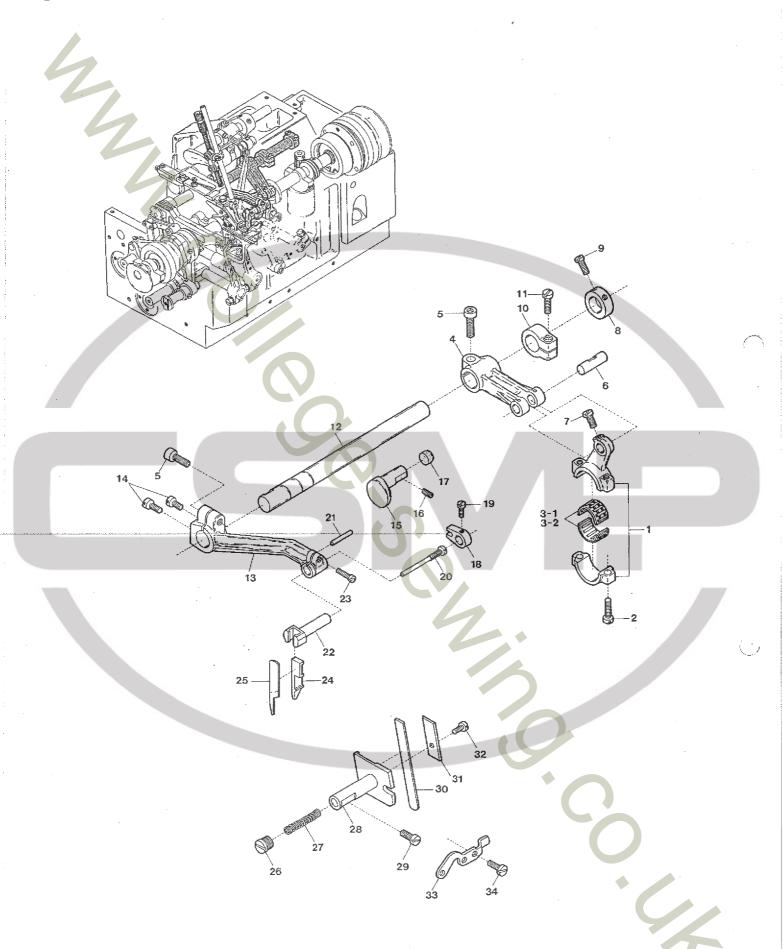


ъ.					
Ref. No.	Parts No.	Description	F	4	Amt.
1101	110.	Description	<u> </u>	名	Req.
1	32900	Upper Knife Driving Connecting Rod	L // 7.D	1*	a
2	5071	Screw for 32900	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	y P	
_	-1 34405	Connecting Rod Roller Bearing (Standard)	ニーニメスロ	ツトエイン	24-5
_	-2 32819	" " " (for Exchange)			
4	, , , , , , , , , , , , , , , , , , , ,	Upper Knife Driving Lever			
5	5520	Screw for 32902, 33140	上メス軸	17e	1
6		Upper Knife Driving Connecting Rod Pin			
7	4410	Screw for 32921	ロススユエメスロ	ットヒン	· · · · · · · · · · · · · · · · · · ·
8	32646	Upper Knife Driving Crank Collar	上メスロ	ットヒン止ネン	/······ I
9	9604	Screwfor 32646 ·····	上メス駟:	カラー(石)・・・・	1
10	32920	Upper Knife Driving Collar (Left)		カフー(石)止る	302
	02020	opper maje Ditoing Cottar (Lejt)	上メス軸:	カラー(左)・・・・・	························· 1
11	7311	Screw for 32920	・・・・・・トメス軸・	カラー(左) ルネ	2 55 1
12	32903	Upper Knife Driving Shaft	・・・・・・トメス軸・	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
13	33140	Upper Knife Driving Arm	エバス報		1
14	4437	Screw for 33140 ····	エバスロ	⊢ ネ ፡	2
15	33142	Upper Knife Driving Arm Guide	トメス台:	ガイド・・・・・・・・・・・・・・・・・・・・・・・	1
16	3434	Screw for 33142		ガイドルラジュ	
17	32519	Upper Knife Driving Arm Guide Plug	上又又会:	ガイド証ポント ガイド註枠	1
18	32912	Upper Knife Holder Guide	エバハロ.	为 · · · · · · · · · · · · · · · · · · ·	
19	7616	Screw for 32912	エハハネ!	カルラミュー	
20	5508	Screw for 32914	エハハギ!	3.4L.7\ /	1
21	723	Guide Pin for 32912	上メス案[内ピン	1
22	32911	Upper Knife Holder	上メス抱=	÷	1
23	1174	Screw for 32911	上メス抱=	キ止ネジ	1
24	32913	Upper Knife Clamp	上メス押ご	Ľ	1
25	32914	Upper Knife	上メス…		1
26	5074	Screw for 32756	下メスバニ	え止ネジ	1
27	32756	Lower Knife Holder Spring	下メスバネ	ب	1
28	32916	Lower Knife Holder	下メス台・		1
29	4591	Screw for 32916	下メス台」	Ŀネジ	1
30	30421	Lower Knife	下メス		1
2.1	20047				
31	32917	Lower Knife Clamp	下メス押コ	C	1
32	4353	Screw for 32917	下メス押コ	「止ネジ	1
33	36517	Lower Knife Holder Locking Plate			
34	4440	Screw for 36517	A TO 2 2 4 15	5 H J 👄 🚊 🖰	2

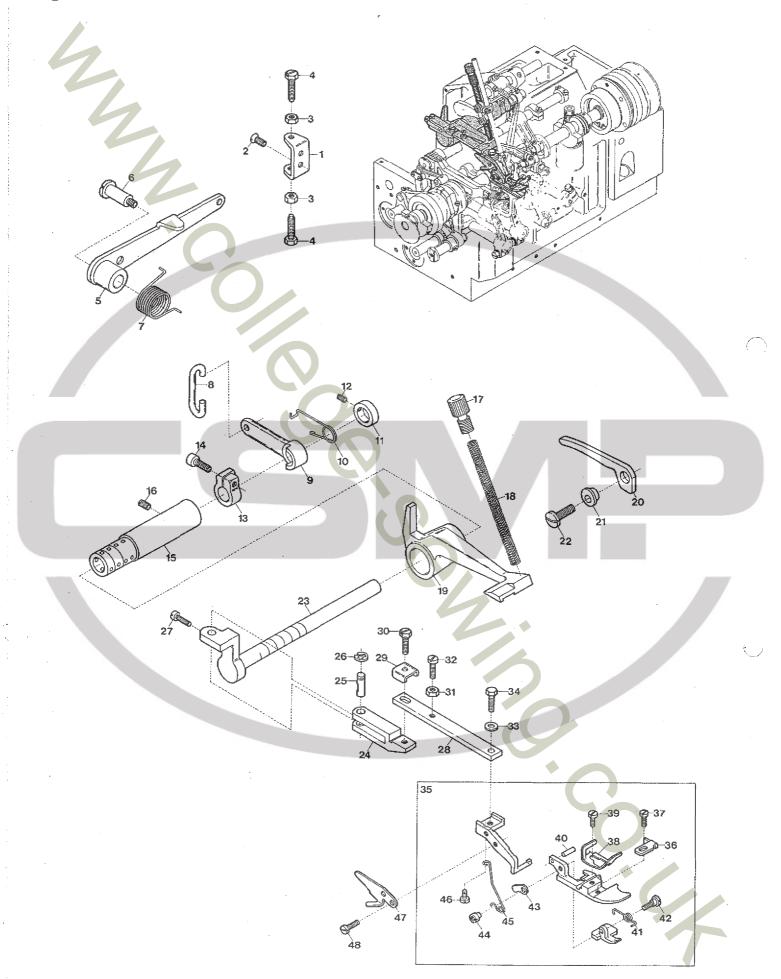

Ref.	Parts				Amt.
No.	No.	Description	品	名	Reg.
					Ticy.
1	36232	Foot Lifter Lever Stopper	抽土地方	= 7 k m 18	1
2	9127	Screw for 36232	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	ころ トッパルラミン	
3	334	Nut for 36230	1ヤー1あり	・ストッハエネン**	- m. b
4	5505	Adjusting Screw for 36230	サーナ 1多ク	レハー調朗インノ	7 7 7
5	36230	Foot Lifter Lever	サロエ 担った	レハー神則ネン・	. 1
6	6000	Screw for 36230	*************************************	ν/	1
7	33746	Foot Lifter Lever Spring	·····································	・レハーエネン *1. バラ・	······ 1
8	32714	Foot Lifter Connecting Link	一	レハーハイ	1
9	36231	Foot Lifter Intermediate Lever	押エレ/	・一連稿件・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	. 1
10	32729	Foot Lifter Intermediate Lever Spring		. 15 - 15 	I
	02,20	Took Differ three measure Level Spring	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	·//-//4······	1
11	32719	Foot Lifter Collar (Small)	押工軸し	バーカラー(小)…	1
12	1459	Screw for 32719	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	バーカラー(小) i	・ え ジ 1
13	32718	Foot Lifter Latch Collar		バーカラー・・・・・・	
14	5550	Screw for 32718		・・・ カラ ・バーカラー <u>は</u> えら	····· 1
15	32720	Foot Lifter Lever Shaft Bushing			
16	2022	Screw for 32720	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	ッシュ i トラジ・・・・・	
17	6401	Adjusting Screw for Presser Spring	カー・エー・ファン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	ランコエホン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
18	32726	Presser Spring	が子鳴点	」かァ	
19	32552	Presser Foot Positioning Arm		' '注メレバ〜・・・・・・・	1
20	32727	Presser Foot Release Lever	77.47년 	(XX D) (1
21	32420	Presser Foot Release Lever Bushing	手揚ゲブ	ッシュ	1
22	4635	Screw for 32420	手揚ゲブ	「ッシュ止ネジ	1
23	32722	Foot Lifter Lever Shaft	押工軸		1
24	32724	Foot Carrier Hinge	押工台		1
25	32723	Foot Lifter Hinge Pin	押エヒン	・ジピン	1
26	33024	Foot Lifter Hinge Pin Retaining Ring	ヒンジビ	- 'ンストップリング	· 1
27	1186	Screw for 32723	押ェヒン	ジピン止ネジ	1
- 28	32725	Foot Carrier	·····-押工取付	板	
29	32728	Foot Carrier Washer	押工台座	金	1
30	5541	Screw for 32725	押工取付	ー 板止ネジ	1
31	335	Nut for 1170	押工揚ゲ	ストッパナット…	1
32	1170	Stopper Screw for Presser Foot	押工揚ゲ	ストッパネジ	1
33	538	Washer for 33537	ワッシャ		1
34	5509	Screw for 33537	······-押エ止ネ	ジ	1
35	33537	Presser Foot, Complete Set (A3, A4)	押工(組)	(A3,A4) ·····	1
36	3 3515	Presser Foot Fabric Guard	·····布押工…		1
37	1230	Screw for 33515	···············布押工止	ネジ	1
38	33657	Presser Foot Hinge Spring	押エヒン	ジバネ	1
39	5036	Screw for 33657	押エヒン	ジバネ止ネジ	1
40	731	Presser Foot Pin	押ェバネ	止メピン	1
40	20500	D E 10 10 m			1
41	33526	Presser Foot Spring (Small)			
42	6093	Screw for 33526			
43	33529	Presser Foot Adjusting Plate			
44	216	Nut for 6093			
45	33525	Presser Foot Spring (Large)			
46	1222	Screw for 33525	押エバネ	(大)止ネジ	1
47	32706	Chain Cutter ·····	・・・・・チェーン	カッタ	1
48	4404	Screw for 32706	チェーン	カッタ止ネジ	2


ì	Ref.	Parts	T)			$\underline{Amt}.$
4	No.	No.	$\underline{Description}$	<u> </u>	<u>名</u>	Req.
	1	33626	Upper Looper Driving Lever Connecting Rod	····· トルーパロ	7 ay Kamanan	1
	2	5071	Screw for 33626			
	3	32785	Looper Driving Lever Link			
	4	32784	Looper Driving Lever Link Pin (Short)	-	=	
	5	9506	Screw for 32784 ·····			
	6	32787	Upper Looper Driving Lever			
	7	3635	Screw for 32787	上ルーパ陣	曲腕止ネ ジ	2
	8	32786	Looper Driving Lever Link Pin (Long)			
	9	3404	Screw for 32786			
	10	34517	Upper Looper Driving Shaft	上ルーパ軸	曲·····	1
	11	32792	Upper Looper Driving Shaft Collar	上ルーパ軸	由カラ ー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
	12	5550	Screw for 32792	上ルーパ陣	由カラー止ネジ	1
	13	32848	Upper Looper Driving Shaft Thrust Washer	スラスト	プレート	3
	14	32849	Upper Looper Driving Shaft Thrust Roller			
	15	34478	Upper Looper Bar Driving Arm, Complete Set			
	16	34104	Upper Looper Bar Driving Arm			
	17	520	Washer for 34104 ····			_
	18	5500	Screw for 34104		The state of the s	
	19	32799	Upper Looper Bar Driving Arm Pin			
/	20	278	Oil Wick for 32799	·····油芯·······		1
	21	3313	Screw for 32799	リレーノギリン	ックピン正ネジ	7
	22	32800	Upper Looper Bar			
	23	36192	Upper Looper Bar Guide	ルーパ案内	4	1
	24	33359	Upper Looper Holder Collar	上ルーパ』	- ヒメカラー	1
	25	5507	Screw for 33359	···・上ルーパ」	Lメカラー止ネジ	1
	26	32807	Upper Looper	<u>+</u> /v – /*		1
	27	304	Oil Wick for 36192·····			
	28	267	Oil Wick for 36192 ·····	·····油芯······		1
	29	325	Oil Wick for 36192 ·····			
	30	36195	Upper Looper Bar Guide Retainer	ルーパ案内	内蓋	1
	-31	5004	Screw for 36195	1/字型力	n 奈 ル タ ジ	2
	32	36218	Upper Looper Bar Guide Stopper			
	33	5050	Screw for 36218			
	34	32961	Looper Thread Tube			
	35	1892	Screw for 32961	糸道パイご	プ止ネジ	<u>1</u>
\checkmark	36	274	Oil Wick for 36195			

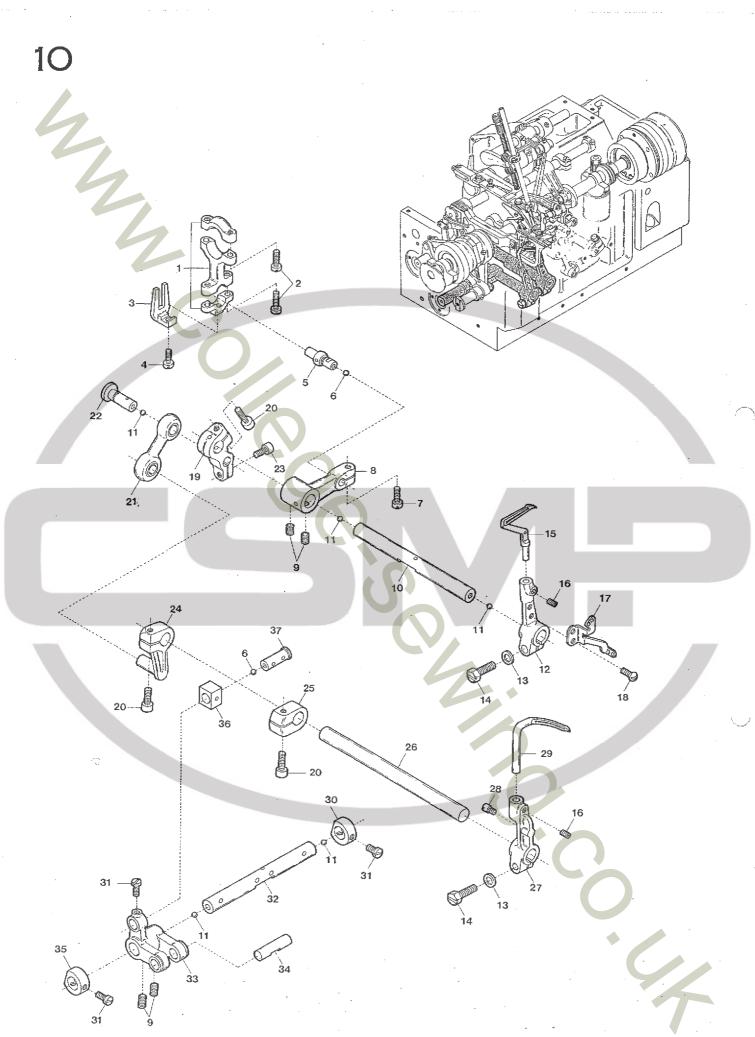


LOWER & DOUBLE CHAINING LOOPER MECHANISM

下ルーパ及び二重環 ルーパ機構 10


			70	1021111	
Ref. No.	Parts No.	Description	品	名	$rac{Amt.}{Req.}$
1 2 3 4 5 6 7 8	33633 5071 33057 4440 30305 636 4437 33058 3635	Lower Looper Driving Lever Connecting Rod Screw for 33633	·····ドルーパ ·····振レ止メ ·····球・····· ····· 辞栓・···· ····· 球止ネジ ·····ドルーパ ····· 止ネジ…	ロッド止ネジ 止ネジ 軸腕	
10	33054 637	Lower Looper Driving Shaft	·····詰栓······		5
12 13 14 15	32789 520 5500 34392	Lower Looper Holder Arm	···・ワッシャ ···・止ネジ···		······································
16 17 18 19	3638 36535 1326 33568	Screw for 34392, 20378 Looper Thread Pull-off Screw for 36535	····止ネジ··· ····下ルーパ ····下ルーパ		2 1
20	5550 33606	Looper Driving Shaft Lever	…止ネジ…	***************************************	3
22 23 24 25 26 27 28	33567 5040 33064 33071 33060 35396 3410	Looper Driving Connecting Guide Pin Screw for 33567 Double Chaining Looper Driving Lever Double Chaining Looper Driving Shaft Collar Double Chaining Looper Driving Shaft Double Chaining Looper Holder Arm Stopper Screw for 20378	…ルーパリ …ルーパリ …二重環ル …二重環ル …二重環ル	ンクピン···································	1 1 1 1 1 1 1 1 1
29 30	20378 33076	Double Chaining Looper Looper Rocker Shaft Collar (Right)			
31 32 33 34 35 36 37	9604 31876 33072 32921 33230 33073 33074	Screw for 33076, 33230, 33074 Looper Rocker Shaft Looper Rocker Shaft Arm Looper Connecting Pin Looper Rocker Shaft Collar (Left) Looper Slide Block Looper Slide Block Pin	····ルーパ前? ····ルーパ前? ····ルーパ前? ····ルーパ前? ····ルーパ前?	後軸・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	

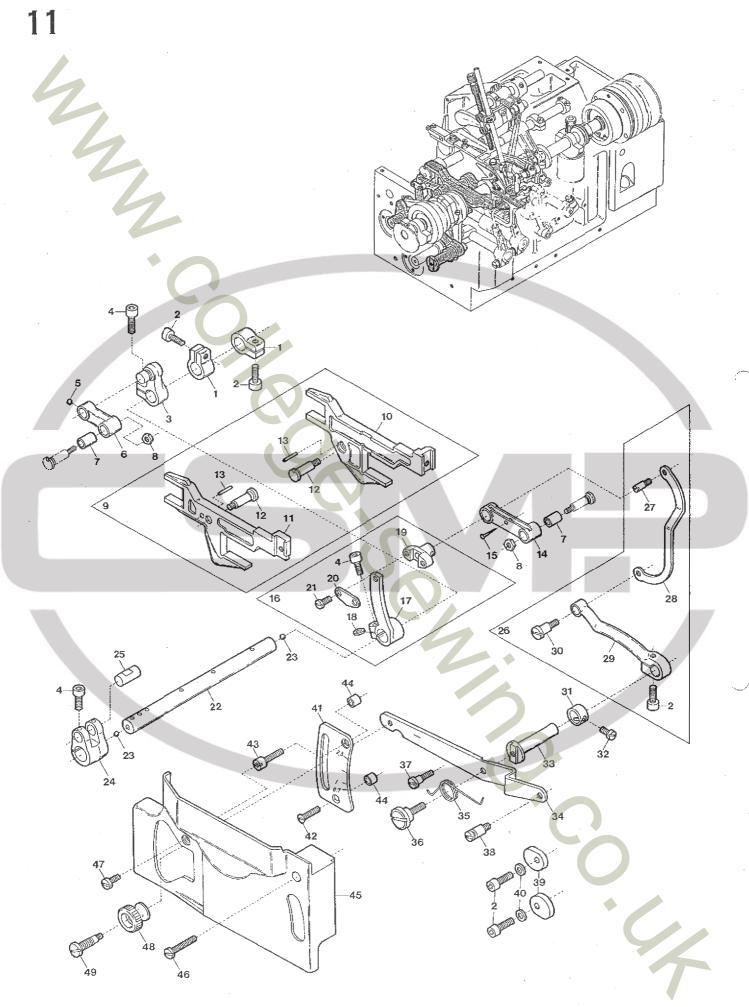


Ref.	Parts				Amt.
No.	No.	Description	品	名	Reg.
				_	
1	33104	Feed Bar Driving Shaft Collar	…送り軸カモ	,	2
2	5550	Screw for 33104, 33120, 33143			
3	34521	Main Feed Bar Driving Lever for Reverse Differ			
$\frac{3}{4}$	5520	Screw for 34521, 36291, 33105			
5	637	Plug for 33095			
6	33095	Main Feed Bar Driving Connection			
7	33098	Feed Bar Driving Connection Bushing			
8	451	Nut for 33099 ·····			
9	33667	Feed Bar, Complete Set			
10	33643	Main Feed Bar			
10	33043	Wath Feed Dar	俊透り音…	*************************	1
11	33642	Differential Feed Bar	前送月台…		1
12	33099	Feed Bar Driving Stud			
13	687	Pin for Feed Bar Driving Stud			
14	33094	Differential Feed Bar Driving Connection			
15	755	Pin for Oil Wick			
16	36294	Differential Feed Rocker, Complete Set			
~ 17	36291	Differential Feed Rocker			
18	567	Washer for 36291			
19	36292	Differential Feed Regulating Slide Pin			
20	36293	Differential Feed Regulating Slide Pin Cap			
20	50255	Differential Feed Regulating State I in Cap	・・・・ヘ ノイ グ霊	4	1
21	8145	Screw for 36293	・・・・スライダ蓋	生止ネジ	2
22	33100	Feed Bar Driving Shaft			
23	639	Plug for 33100	····詰栓······	***************************************	2
24	33105	Feed Bar Driving Shaft Lever	****送り軸腕・*		1
25	33683	Feed Bar Connecting Rod Pin			
26	33612	Differential Feed Control Inner Lever, Complete S			
27	5512	Screw for 33121			
28	33121	Differential Feed Control Link			
29	33120	Differential Feed Control Inner Lever			
30	5510	Screw for 33120			
	0010	3070111 107 33220	IATER V SYLE	11011 12111	_
31	30228	Differential Feed Control Inner Lever Shaft Colla	rr送リ調節	5中レバー軸カラー	1
32	9604	Screw for 30228	送リ調節中	レバー軸カラー止ネジ…	2
33	33118	Differential Feed Control Inner Lever Shaft	送り調節中	ロレバー軸	1
34	36220	Differential Feed Control Outer Lever			
35	33133	Differential Feed Control Outer Lever Spring	…調節レバー	- バネ	1
36	5514	Screw for 33133	調節レバー	・バネ止ネジ	1
37	3406	Screw for 33133	…調節レバー	-バネ掛ケネジ	1
38	3622 6	Chain Hook	…チェインフ	1 ク	1
39	33143	Differential Feed Control Outer Lever Stopper			
40	538	Washer for 33143	…ワッシャ…		2
41	36223	Differential Feed Graduations for Reverse Differe			
42	1733	Srcew for 36223			
43	5527	Screw for 36223			
44	494	Spacer for 36223			
45	31881	Side Cover ·····			
46	9106	Screw for 31881			
47	1202	Screw for 31881	横カバー止	:ネジ	1
48	210	Adjusting Nut for 36220	前送り調節	i外レバー調節ナット	1
49	5511	Adjusting Screw for 36220	前送り調節	5外レバー調節ネ <u>ジ</u>	1

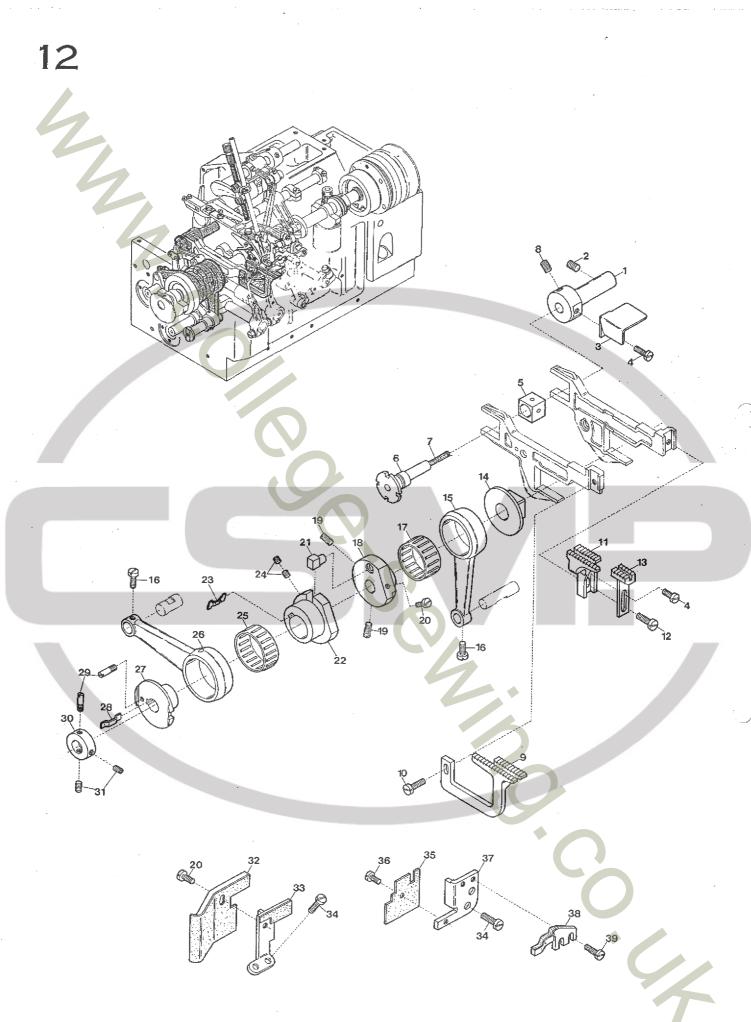


Ref.	Parts	·			
No.	No.	Description	品	4	Amt.
			20	<u>名</u>	Req.
1	33251	Feed Bar Guide (Rear)	¥114+	5 & 1° (2%)	
2	3632	Screw for 33251	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	7 -1 「 ト (13½)	<u>.</u>
3	33252	Feed Mechanism Rear Shield		ハイト (1支) エイン	1
3 4	9730	Screw for 33252, 33544		d k-jk-/	
5	32867	Feed Bar Guide Block			
6	33141	Feed Adjusting Eccentric Pin	/589 (/) /	مرد ما	1
7		Oil Wick for 33141	~ 本本		1
8	3635	Screw for 33141	ガル エキャン	ピンルラミ	1
9	33824	Differential Feed Dog (A3, A4) (for 8 stitched	es/inch) …前送り	(A3 A4)(84冊)
10	4353	Screw for 33824		・ネジーーー	
11	33825	Main Feed Dog (for 8 stitches/inch)	後送り(8針用)	1
12	7609	Screw for 33825	後送り止	\$ 3	
13	33544	Auxiliary Feed Dog (for 8 stitches/inch)		8 針冊)	
14	33116	Feed Lift Block ·····		******************	
15	33067	Looper Oscillating Rod	ルーパ前	後ロッド	
16	4410	Screw for Connecting Rod Pin	ロッドビ	ンルネジ	
17	33115	Needle Bearing for Looper Oscillating Rod.	ニードル	ベアリング(小)	
18	31860	Looper Oscillating Eccentric	ルーパ前	後エキセン	
19	3405	Screw for 31860	ルーパ前	後エキセン止ネ	ಶ 2
20	4358	Stopper Screw for 36359, 33649	止ネジ…		2
21	36191	Food Dom Dom Jatin F			
22	36359	Feed Dog Regulating Eccentric Pin	送リエキ	センピン	1
23	36394	Feed Dog Regulating Eccentric	送りエキ	セン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
24	3637	Feed Dog Regulating Eccentric Spring Screw for 36394	回り止メ	バネ	I
25	33114	Needle Begging for Fred Der Deisie C	回り止メ	バネ止ネジ	2
26	36360	Needle Bearing for Feed Dog Driving Connec	cung Koa ··· = -	ドルベアリング	1
27	36187	Feed Dog Priving Connecting Rod	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	F	······ 1
28	20403	Feed Dog Regulating Control Eccentric	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	エキセン	1
29	4109	Feed Dog Regulating Eccentric Spring	回り止く	バネ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	······ 1
30	20405	Stopper Screw for 36187, 20405	送り調節	エキセンストッ	パネジ2
	20 700	Feed Dog Regulating Control Eccentric Colle			
31	3638	Screw for 20405	公里」	エキセンカラー	L 9 cr
32	33649	Feed Mechanism Front Shield (Upper), Compl	ete Set ··送口前:	エコ ピンカン 一. カバー (E) (約1)。	L47
33	33647	Feed Bar Guide (Left)		イド(生)	1
34	4440	Screw for 33647, 33644	一点・一点・一点・一点・一点・一点・一点・一点・一点・一点・一点・一点・一点・一	イドルタジ	
35	33651	reed Mechanism Front Shield (Lower), Complete	lete Set¥IJī	前カバー(下) (組	1)1
36	1333	Screw for 33651	·····································	バー (下) (細) 止:	ž ×7 1
37	33644	Feed Bar Guide (Right)	※リ会ガ.	イド(右)	
38	33659	Stitch Plate Stay		• • • • • • • • • • • • • • • • • • • •	1
39	5000	Screw for 33659	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	L > >	

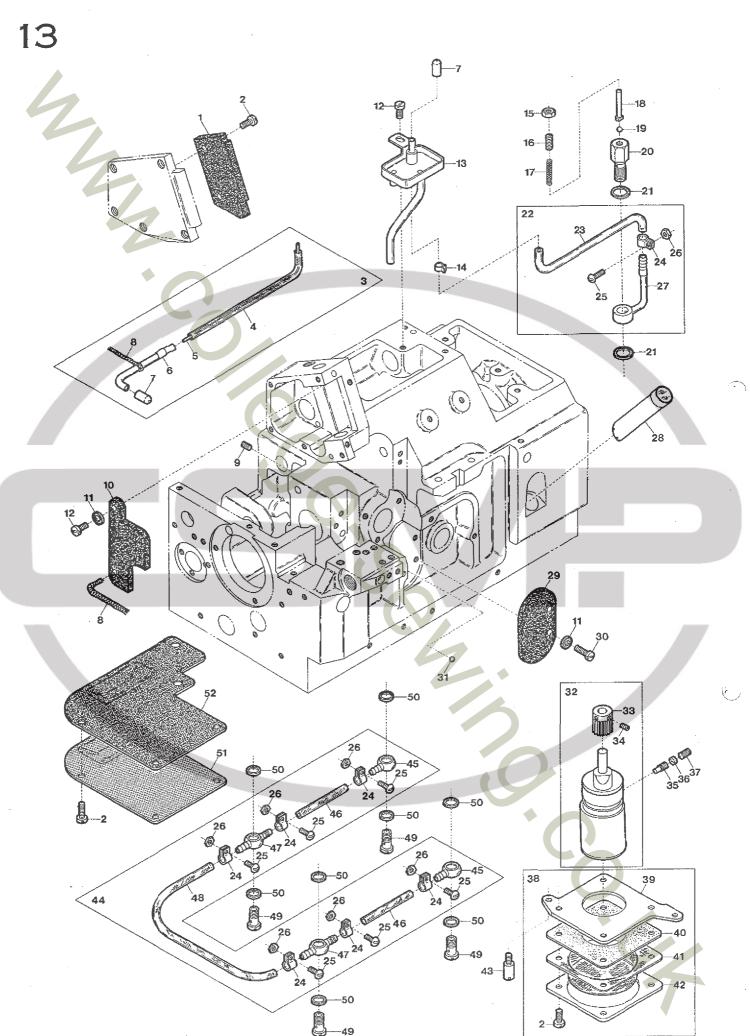


Ref. No.	Parts. No.	$\underline{\textit{Description}}$	品	名	$\frac{An}{Re}$	
1 2 3	32685 9853 33661	Needle Bar Oiling Felt (Left)	止ネジ…			9
4 5	33605	Oil Tube, Complete Set for Feed Bar Driving (Oil Tube	送りロッ	ド給油パイプ		1
6 7 8	33660 37697	Oil Nozzle Feed Bar Driving Connection Oil Nozzle Cap	注油キャ	ップ		2
9 10	3434 33782	Screw for 33660	····・·オイルパ	イプ止ネジ…	• • • • • • • • • • • • • • • • • • • •	1
11 12	550 9604	Washer for 33782, 32806	止ネジ…			2
13 14 15	32476 37675 419	Oil Receiver Oil Tube Clamp Nut for 30745	·······緊束環…		· · · · · · · · · · · · · · · · · · ·	1
16 17	6861 30745	Adjusting Screw for 30745 Oil Pressure Regulating Valve Spring	······調節弁バ ······調圧弁バ	ネ調節ネジ…ネ		1 1
18 19 20	30748 80503 32938	Oil Pressure Regulating Valve Spring Guide Oil Pressure Regulating Ball Oil Pressure Regulating Valve	調圧ボー	ル弁	······	1
21 22	509 33671	Seal for 32897 Oil Pressure Regulating Fitting Tube, Complete				
23 24 25	32850 32944 9989	Oil Tube (150mm) Oil Tube Clamp (Large) Screw for 32944	·······緊束環(大	t)	·····	7
26 27 28	15 32897 33150	Nut for 32944 Oil Pressure Regulating Bracket Oil Sight Gauge	······ナット···· ······調圧弁取 [・]	·····································		7 1
29 30	32806 4353	Upper Looper Bar Oiling Felt Screw for 32806	ルーパフ	± JV h		1
31 32	639 33144	Packing Piece	ポンプ(組	a)	1	L
33 34 35	30711 9526 6330	Oil Pump Driving Worm Gear Screw for 30711 Screw for 33144	······ウォーム: ·······ポンプ止:	・・ ギア止ネジ···· ネジ·······	······ 2	2
36 37 38	926 9503 3 366 2	Seal for 33144 Screw for 33144 Pump Filter Screen, Complete Set	蓋ネジ			L
39 40	33280 33279	Pump Filter Screen Seat Pump Filter Screen Gasket	·····・ポンプ沪i ·····・ポンプ沪i	過網受ケ合… 過網パッキン・	······· 1 ····· 1	L L
41 42 43	33281 33282 6261	Pump Filter Screen Clamp Screw for 33280	ポンプ沪ジ	過網押工	1	t
44 45 46	33670 37669 33668	Lubricating Tube, Complete Set Oil Tube Joint, One Way Oil Tube (50mm)	·····-給油管(組 ······-片口管継ぎ	I) 手	······· 1	l ≥
47 48	37668 33669	Oil Tube Joint, Two Way ·····Oil Tube (190mm) ·····	······両口管継ぎ ·····オイルバー	手 イプ (190am) ・	2 1	2
49 50	7668 567	Oil Tube Fitting Stud	管継手パッ	ッキン	8	3
51 52	33569 33672	Feed Mechanism Filter Screen (Upper) Feed Mechanism Filter Screen (Upper)				

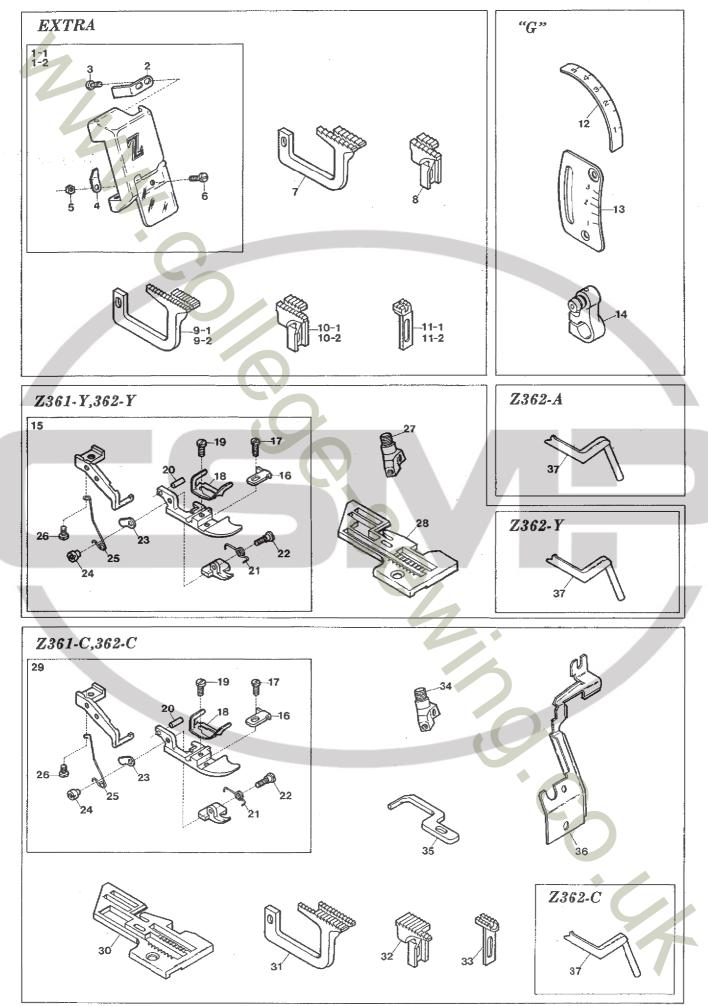


	Ref.	Parts	n :::				Amt.
4	IVO.	<u>No.</u>	Description	品		<u>名</u>	Req.
	1-1	34943	Safatu Plata Complete Set (Stead)				
	1-2	36315	Safety Plate, Complete Set (Short)	····セ-	- フティブ	レート(短)(組)	1
	2	32620	Needle Thread Cover Latch Spring	A1 4	// 2	″ (長)(組)・・・・・・・・	I
	3	7006	Screw for 32620		伶カハーハ:	ネ····································	1
	4	33680	Safety Plate Spring	····≇†∄	Ŕガハーハ: 	不止ネン	2
	5	322	Nut for 33680	12	- ノティノ	レートハネ	I
	6	4351	Screw for 33680	<u>.</u>	/ F·········		I
	7	33834	Differential Feed Dog (C) (Coarse Mesh)		- ノ ナ 1 ノ l + i l / C \ /#	レートハイ正イン········	1
	8	33835	Main Feed Dog (C) (Coarse Mesh)		版)(ロ)で2 とロ(C)(113	6個 /	1
	9-1	33826	Differential Feed Dog (A) (for 5 stitches/inch)	·····1交及 ····· 前沿	57(C)(/ 57(C)(/	//)···································	1
	9-2	33830	" " (C) (")				
	10-1	33827	Main Feed Dog (A) (for 5 Stitches/inch)	····283	, (Ο)(£11/Δ)/	// \	1
	10-2	33831	" " (C) (" ")	132.12	(0)(/)	1
	11-1	33559	Auxiliary Feed Dog (A) (for 5 Stitches/inch)	小边	€リ(A)(<i>"</i>)	1
	11-2	33549	" (C) (")	//	(C)(<i>"</i>) ······	1
	12	36775	Pully Graduations Plate (for Normal Differential)	プー	- リ目盛板((正差動用)	1
)	13	36222	Differential Feed Graduations (for Normal Differen	ntial)	…送り目録	盛板(正差動用)	1
	14	33096	Main Feed Bar Driving Lever (for Normal Differe	ntial)	…後送リロ	レバー(正差動用)・・・・・・・	1
	15	33538	Presser Foot, Complete Set (Y)	…押工	(組)(Y)·	***************************************	···· 1
	16	33515	Presser Foot Fabric Guard	布押	工		1
	17	1230	Screw for 33515	布押	エ止ネジ・		1
	18	33657	Presser Foot Hinge Spring	押工	ヒンジバジ	ネ⋯⋯⋯	1
	19	5036	Screw for 33657	…押工	ヒンジバニ	ネ止ネジ	1
	20	731	Presser Foot Pin	…押工	バネ止メし	ピン	1
	21	33526	Presser Foot Spring (Small)	- 400	15 A / Ja V		
	22	6093	Screw for 33526	. 	ハネ (小)・	L > >?	1
	23	33529	Presser Foot Adjusting Plate		・ハイ・ハン・ハン・ハー・ハー・ハー・ハー・ハー・ハー・ハー・ハー・ハー・ハー・ハー・ハー・ハー・	エイン	1
	24	216	Nut for 6093		· 副引用 · · · ·		1
	25	33525	Presser Foot Spring (Large)	ノソ…畑で	パラ (+).		1
	26	1222	Screw for 33525	17十二	パネ(大)。	F → < 7	1
	27	38011	Needle Clamp		X	<u> </u>	1
÷	28	31865	Stitch Plate (Y4)	針板	(Y 4)	***************************************	1
	29	33539	Presser Foot, Complete Set (C)	! ⊞⊤	(4B) (C)		1
	30	36590	Stitch Plate (C5)	…針板	(C5)	**********************	1
	31	33828	Differential Feed Dog (for 8 Stitches/inch) (Standa	rd)	前送リ(8	針用)	1
1	32	33829	Main Feed Dog (for 8 Stitches/inch) (Standard)	··後送	リ(8針用)	1
	33	33328	Auxiliary Feed Dog (for 8 Stitches/inch) (Standard	1)/\	送リ(8針	用)	1
	34	33247	Needle Clamp	…針止	××		1
	35	33250	Needle Guard (Front) (Double Chain Stitch)	・・・イン	タ針受ケ(前)	1
	36	31875	Chip Guard (Fixed)	…切屑	落シ板(大)	1
	37	32813	Spreader	b 7	プレガ		1

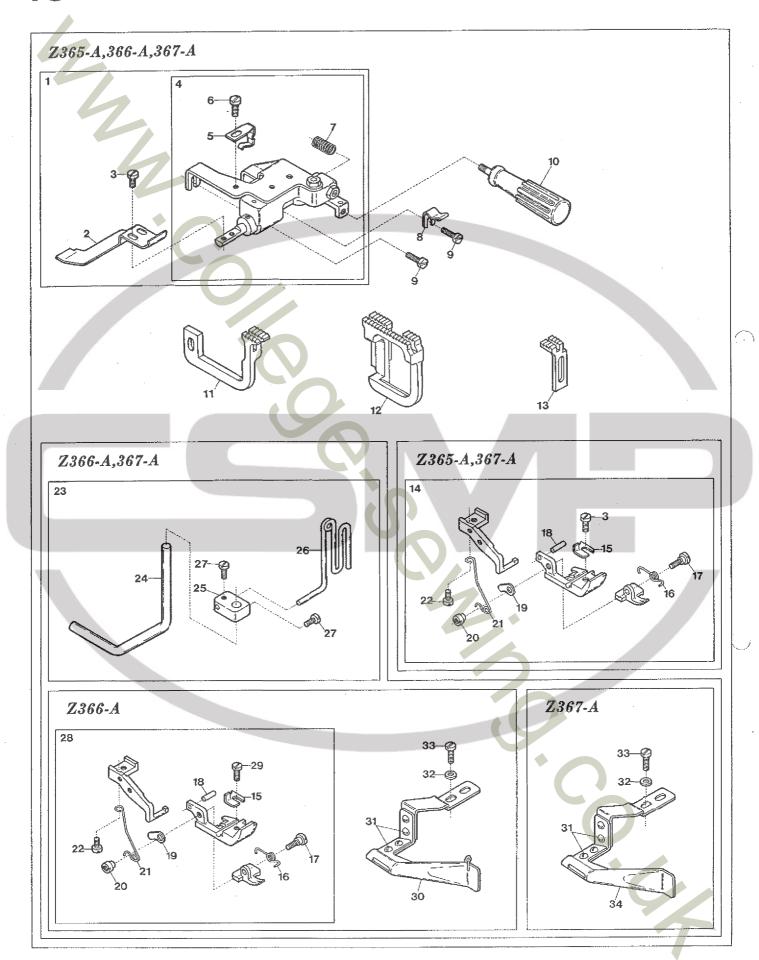

Ref. No.	Parts No.	Description		名	-	Amt. Req.
1 2 3 4 5 6 7 8 9	33391 33401 5036 33399 36267 7006 33398 33400 7405 37989	Ruffling Presser, Complete Set Ruffling Presser Foot Screw for 33401, 33304 Ruffling Presser Unit Ruffling Presser Stopper Spring Plate Screw for 36267 Ruffling Presser Spring Front Cover Latch Spring Screw for 33391, 33400 Swing-out Handle for Ruffling Presser	・・・・・ラフリンン・・・・・・ラフリジ・・・・・・・・ブラフ・デーブラフ・デーカー ファッカー アッカー アッカー アッカー アッカー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	グ装置(組)… グ押エ・・・・・・・ グ装置・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	ネジー	· 1 · 1 · 3 · 1 · 1 · 1 · 1 · 1 · 1 · 1 · 1
11 12 13 14 15 16 17 18 19 20	33307 33308 33558 33300 33304 33526 6093 731 33529 216	Differential Feed Dog Main Feed Dog Auxiliary Feed Dog Presser Foot, Complete Set Presser Foot Hinge Spring Presser Foot Spring (Small) Screw for 33526 Presser Foot Pin Presser Foot Adjusting Plate Nut for 6093	·····前送リ···· ·····後送リ···· ·····押エとり組) ·····押エエババネネ ·····押エ調節	ジバネーーーー (小)・ーーーーー (小)・上ネジーー・ 止メビンーーー		· 1 · 1 · 1 · 1 · 1 · 1 · 1
21 22 23 24 25 26 27 28 29 30	33525 1222 33430 35357 33433 33432 7616 33405 1227 33409	Presser Foot Spring (Large) Screw for 33525 Tape Guide, Complete Set Tape Guide Holder Shaft Tape Guide Bracket Tape Guide Screw for 35357, 33432 Presser Foot, Complete Set Screw for 33304 Folder, Complete Set	・・・・・押ェバネ・・・・・テープガ・・・・・テープガ・・・・・テープガ・・・・・・テープガ・・・・・・・・・・	(大)止ネジ・・・・ イド(組)・・・・・・ イド取付軸・・・・ イド・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・		1 1 1 1 2 1 1
31 32 33 34	1330 538 4358 33417	Screw for 33409, 33417	…ワッシャ· …定規(組)」	 止ネジ·······		2 2

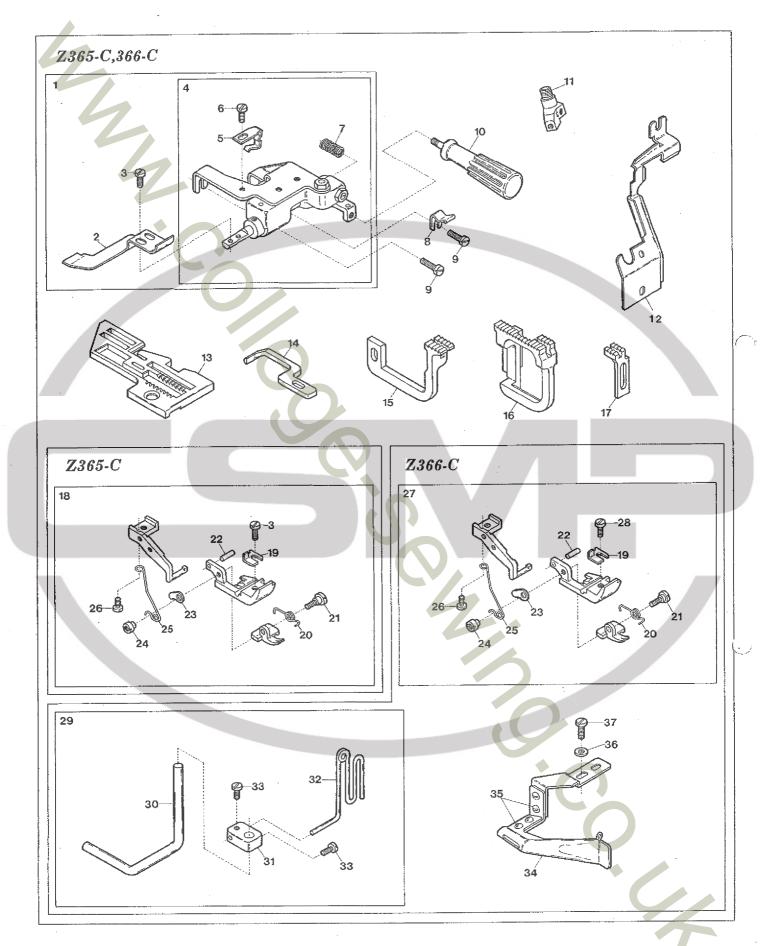

	Ref. No.	Parts No.	Description	品	名	Amt. Req.
	1	33403	Ruffling Presser, Complete Set	ラフリン	ガ洪器 (組)	1
	2	33404	Ruffling Presser Foot	・・・・・ラフリン	グ田丁・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
	3	5036	Screw for 33404, 33304		ンがエ	
	4	33399	Ruffling Presser Unit	ラカロン	ガ壮屋	
	5	36267	Ruffling Presser Stopper Spring Plate	・・・・・ブラケッ	ノ衣屋	
	6	7006	Screw for 36267	・・・・・ブラケッ ・・・・ブラケッ	トルメバネルネジ	
	7	33398	Ruffling Presser Spring	・・・・・押エバネ	THE PROPERTY OF	1
	8	33400	Front Cover Latch Spring	前閏キカ	バーバネ	1
	9	7405	Screw for 33403, 33400	止えジ…		2
	10	37989	Swing-out Handle for Ruffling Presser	・・・・押工軸レ	バーハンドル	1
		200.47				
	11	33247	Needle Clamp	針止メ…		
	12	31875	Chip Guard (Fixed)	…・切屑落シ	板(大)	1
	13	36590	Stitch Plate	針板		····· 1
	14	33250	Needle Guard (Front) (Double Chain Stitch)	インタ針	受ケ(前)	1
	15	33315	Differential Feed Dog	前送リ…	********	1
	16	33557	Main Feed Dog	…・後送リ…	***************************************	1
)	17	35264	Auxiliary Feed Dog	…小送リ…	******	1
	18	33312	Presser Foot, Complete Set	…押エ(組)	***************************************	1
	19 20	33304 33526	Presser Foot Hinge Spring	…・押エヒン	ジバネ	······ 1
	20	33320	Presser Foot Spring (Small)	…押エバネ	(시/)	1
	21	6093	Screw for 33526	400	/45 4 = 50	
	22	731	Presser Foot Pin	…押エハネ	(小)正ネン	······ I
	23	33529	Presser Foot Adjusting Plate	押工八不。 押工部签:	正メビン	
	24	216	Nut for 6093	····	Д	1
	25	33525	Presser Foot Spring (Large)		(-1)	1
	26	1222	Screw for 33525	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	(大) (上) (大) (大) (上) (上) (大) (大) (大) (大) (大) (大) (大) (大) (大) (大	1
	27	33858	Presser Foot, Complete Set	17二ハヤ、141、141、141、141、141、141、141、141、141、14	(人/エネン	1
	28	1227	Screw for 33304	371年(6年)	ジバラルラジ	1
	29	33430	Tape Guide, Complete Set	·・・・テープガ	ノバボエネン イド/\$B)	
	30	35357	Tape Guide Holder Shaft	・・・・テープガ	イド部(付献	
					· ·	
	31	33433	Tape Guide Bracket	···・テープガ <i>・</i>	イド取付片	1
	32	33432	Tape Guide	···・テープガ <i>・</i>	۲ K	
	33	.7616	Screw for 35357, 33432	…止ネジ…		2
	34	33866	Folder, Complete Set	…: 定規(組)・		
	35	1330	Screw for 33866 ·····	…定規止ネ	ゔ	····· 4
)	36	538	Washer for 33866			2
	37	4358	Screen for 33866	- chila (401) -	1 2 22	

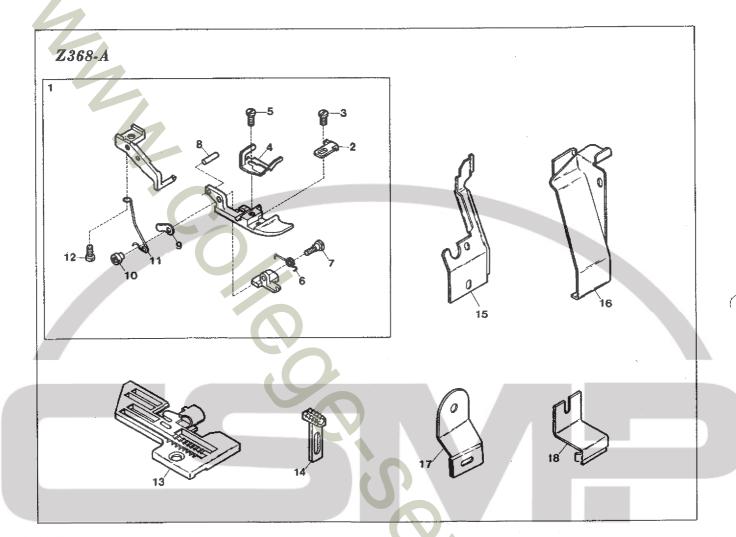



C


0

Ref. No.	Parts No.	Description	品		Amt. Req.
1	33319	Presse Foot, Complete Set	押工(組)・		1
2	33515	Presser Foot Fabric Guard	布押工…		1
3	1230	Screw for 33515	布押工止	ネジ	1
4	33657	Presser Foot Hinge Spring	押エヒン	ジバネ	1
5	5036	Screw for 33657	押エヒン	ジバネ止ネジ	1
6	33526	Presser Foot Spring (Small)			
7	6093	Screw for 33526	押エバネ	(小)止ネジ…	1
8	731	Presser Foot Pin			
9	33529	Presser Foot Adjusting Plate	押工調節	+	1
10	216	Nut for 6093	····・・・・・・・・・・・・・・・・・・ナット····		1
11 12	33525 1222	Presser Foot Spring (Large)			
13	31820	Stitch Plate			
14	33328	Auxiliary Feed Dog			
15	31859	Chip Guard (Fixed)			
16	33325	Chip Guard (Openable)			
17	31823	Tape Guide (Right)			
) 18	33327	Tape Guide (Left) ·····			



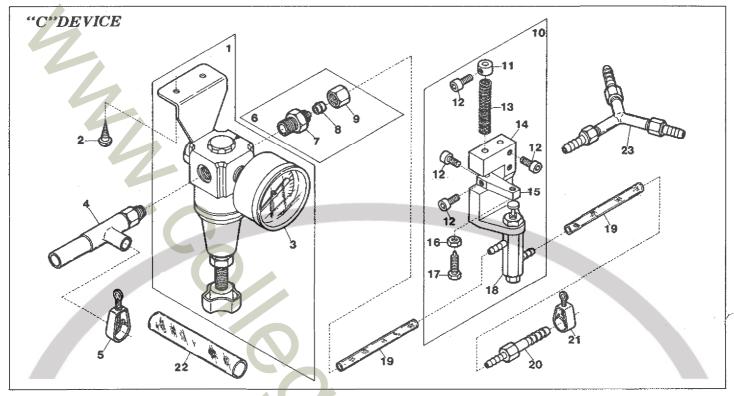

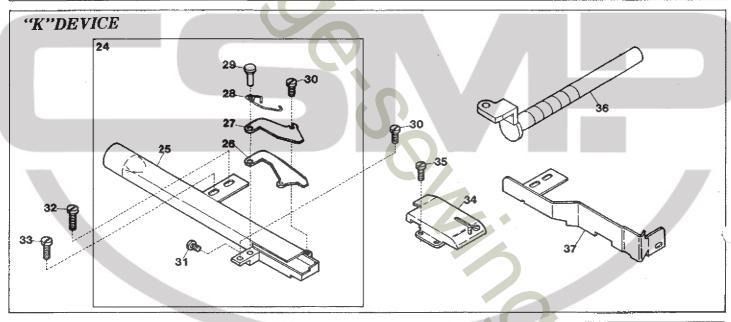


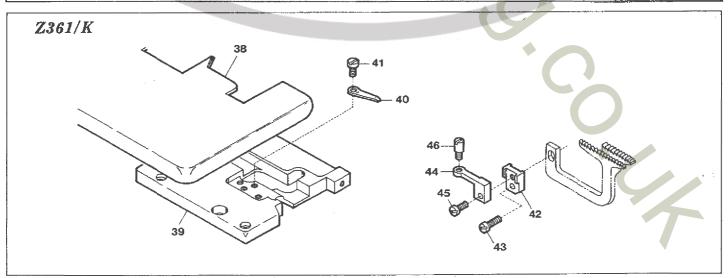


"C"及び"K"装置 18


	Ref.	Parts No.	Description	品	名	Amt. Req.
	1	22005	D /			
	1	33925	Regulator, Complete Set	…レギュレー?	ৡ(組)	···· 1
	2	6905	Screw for 33925	・・レギュレー タ	タ(組)止ネジ	2
	3	33928	Pressure Gauge	…プレッシャ-	-ゲージ・・・・・・	1
	4	10100	Venturi Tube, Comlete Set	…ベンチュリ-	- 管 (組)	1
	5	33940	Hose Band % inch	··ホースバン	ヾ%インチ	···· 1
	6	33931	Mouth-piece, Complete Set, PT 1/8 inch	ーストレートミ	ジョイント(組) ½インチ…	1
	7 8	33949	Mouth-piece, PT 1/8 inch	・・ストレート5	ブョイント%インチ	1
	9	33951 33950	Pipe Holder			
	10	33953	Nut for Straight Joint			
	10	22222	Air Valve, Complete Set	··エアバルブ(組)	1
	11	33938	Collar for 33937	・エアバルブギ	共助バネカラ	1
	12	5040	Screw for 33938, 33936, 33935			
	13	33937	Return Spring for Air Valve Stopper			
	14	33936	Air Valve Holder	・エフバルブぼ	800/・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
	15	33935	Air Valve Stopper	・エアバルブラ	λια ω ζ. k. ω / ζ	1
	16	3 34	Nut for 33935	ナット・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	***************************************	1
	17	5505	Screw for 33935	・エアバルブス	てトッパ調節ネジ・・・・・・・・	1
J	18	33934	Air Valve	・エアバルブ・・		î
	19	33941	Nylon Hose 4¢ ·····	・ナイロンホー	- 7 4 6	2
1	20	33932	Joint for Single Head	・ジョイント(ミシンが1台の時のみ使り	E) 1
		00000				
	21	33939	Hose Band, 1/4 inch	・ホースバント	ベインチ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	3
	22	33942	Nylon Hose 12\$	・ナイロンホー	- ス12∮	1
	23	33933	Three Pronged Joint for Plural Heads	・三又ジョイント	(ミシンが2台以上の時使用)	··· 1
	24	33572	Suction Pipe, Complete Set			
	25	33571	Suction Pipe			_
	26	33574	Lower Trimming Knife			_
	27	33590	Upper Trimming Knife			_
	28	33575	Lower Trimming Knife Spring			
	29 30	33588 1202	Trimming Knife Holder Pin			
	50	1202	Screw for 33571, 33590	・止ネジ	***************************************	2
	31	1230	Screw for 33588	が古法ピンル	. ラジ	1
	32	4441	Screw for 33571	の文符にクロ	- T /	1 1
	33	4353	Screw for 33571	・吸込音エネン・吸込管止える	S	1
	34	33592	Suction Pipe Cover	吸込管エイン・吸込管カバー		1
	35	4358	Screw for 33592	·吸込管カバー	- ルネジ	2
	36	33586	Foot Lifter Lever Shaft	押工軸		1
	37	33654	Fabric Guide	・ ・布滑リ家内板	, ,,	1
	38	31858	Cloth Plate	・クロスプレー	· -	1
	39	33658	Feed Mechanism Cover	送り上カバー		1
	40	33593	Lower Trimming Knife Pushing Plate			
	41	7010				
	41	7618	Screw for 33593			
	42	33581	Lower Trimming Knife Guide Holder Connection	下刃ガイド取	!付台······	··· 1
	43	7609	Screw for Differential Feed Dog	前送リ止ネジ		1
	44	33655	Lower Trimming Knife Guide Holder	下刃ガイドビ	'ン取付台·······	··· 1
	45	1196	Screw for 33655	・下刃ガイドヒ	'ン取付台止ネジ	1
	46	3348	Lower Trimming Knife Guide Pin	・下刃ガイドビ	ンネジ	1


"MT"DEVICE

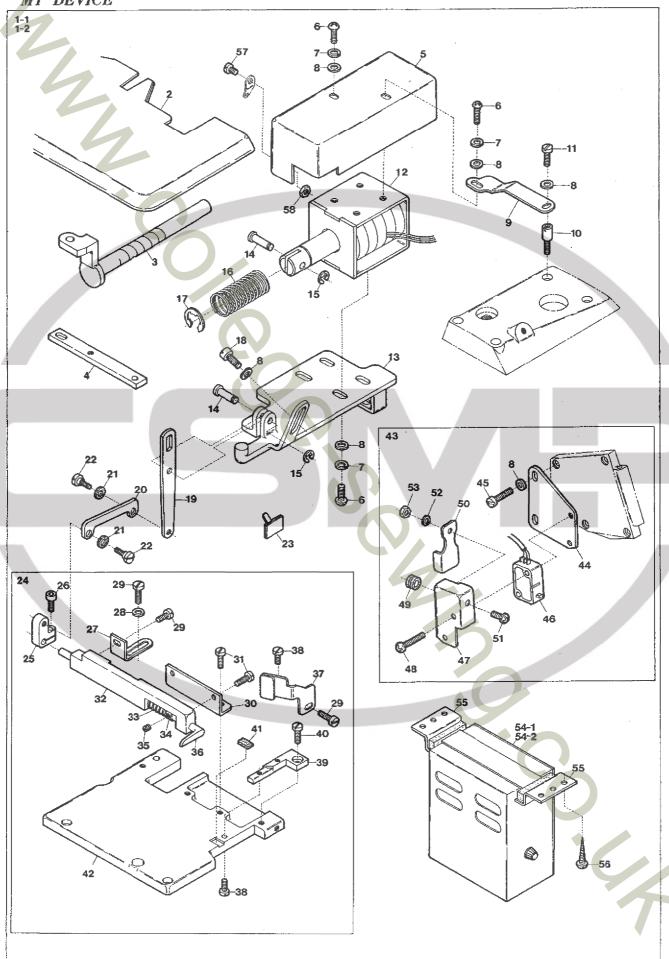


Ref.	Parts				Amt.
No.	<u>No.</u>	Description	<u> </u>	名	Req.
1-1	31821	"MT" Device, Complete Set (Class Z361)	"M T "趕	: 簡 (組)	1
1-2		"MT10" Device, " " (for Z366)	······"M T 10"	,弹器(粗)····································	1
2	31828	Cloth Plate	・・・・・・クロスプ	L =	1
3	33586	Foot Lifter Lever Shaft	······押工軸···		1
4	33697	Presser Foot Carrier	押工取付	板	1
5	22653	Solenoid Cover	ソレノイ	ドカバー	1
6	9992	Screw for 22653, 11760			
7	644	Spring Washer for 22653, 11760			
8	538	Washer for 22653, 11760, 34186, 35293, 35723			
9	34186	Anti-vibration Plate for Solenoid Cover	ソレノイ	ド振レ止メ板	1
10	5489	Screw for Top Cover (Right)	······上蓋(右)	止ネジ・・・・・	1
11	4353	Screw for 34186	ソレノイ	ド振レ止メ板止ネジ	1
12	11760	Solenoid	·····ソレノイ	K	1
13	35293	Solenoid Support	ソレノイ	ド取付板	·····1
14	35301	Solenoid Connecting Rod Pin	連結棒ビ	`ン	2
15	33024	Retaining Ring for 35301	······ Eリング	***********************	2
16 17	23217	Solenoid Spring	ソレノイ	ドバネ	1
18	35300 5043	Retaining Ring for 23217	ソレノイ	ドバネストップリンク…	1
19	35298	Screw for 35293 Solenoid Connecting Lever	タレノイ	ド取付板止ネジ	2
20	35302	Upper Knife Connecting Plate	・・・・・・ソレノイ	FD/\	1
20	33302				
21	568	Rubber Cushion for 35302	防振ゴム	***************************************	2
22	6068	Screw for 35302	上メス連	結板止ネジ	2
23	35767	Cord Clamp (Large)	コード支	ェ(大)・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2
24	35303	Trimming Device, Complete Set	メス装置	(組)	1
25	35296	Upper Knife Driving Lever	上メス腕	*************************	1
26	5098	Screw for 35296	上メス腕	止ネジ	1
27	33696	Upper Knife Holder Stay (Rear)	上メス台	支工(後)	1
28 29	532 4353	Washer for 33696	ワッシャ		1
30	33695	Screw for 33696, 35313 ·································			
50	33033				-
31	4351	Screw for 33695	上メス台	支工(前)止ネジ	4
32	35315	Upper Knife Holder	上メス台	************************	1
33	33711	Upper Knife Spring			
34	33710	Upper Knife Spring Collar	上メスバ	ネカラー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
35	3637	Screw for 33710	上メスバ	ネカラー止ネジ	1
36	33690	Upper Knife	····・・上メス・・・	•••••	1
37	35313	Fabric Guide	布案内板		1
38 39	4404	Screw for 35313, 33656			
40	33656 7405	Lower Knife Screw for 33656	・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	N 60	1
	7405	Screw for 55050	\ X X IE	ネン 	1
41	36361	Upper Knife Rubber Cushion	上メスク	ッション	1
42	33640	Feed Mechanism Cover			
43	11755	Mannual Switch, Complete Set	·····スイッチ	(組)	1
44	35723	Switch Support	スイッチ]	取付板	1
45	5004	Screw for 35723	・・・・・スイッチ	取付板止ネジ	2
46	11891	Switch	スイッチ		····· 1
47 48	20989	Switch Cover	・・・・・スイッチ:	カバー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	1
48 49	9993 35722	Screw for 20989	・・・・・スイッチ:	カバー止ネジ	2
50	35719	Cord Bushing	······コードフ·	ッシュ	1
51	9995	Screw for 35719	・・・・・スイッチ	版止ネジ・・・・・・・・・・・	1
52	2	Spring Washer for 35719	·····スプリン·	グワッシャ	1
53	488	Nut for 35719	····・ナット····		1
54-1	11819	Control Box, Complete Set (MT Device)	MT制御	装置 (組) · · · · · · · · · · · · · · · · · · ·	1
54-2		Control Box, Complete Set (MT10 Device)	······M T10制	卸装置 (組)	1
55 56	11709	Control Box Stay	····・コントロー	ールボックススティー・・・・・	2
57	4358	Wood Screw for 11709 Screw for (33764)	········木ネジ·····		4
58	335	Nut for (33764)		- ハ水項止ネン - パタ洋ナ… L	1
		10. 100101	一宝垛小。	ハ水垣ノット	1

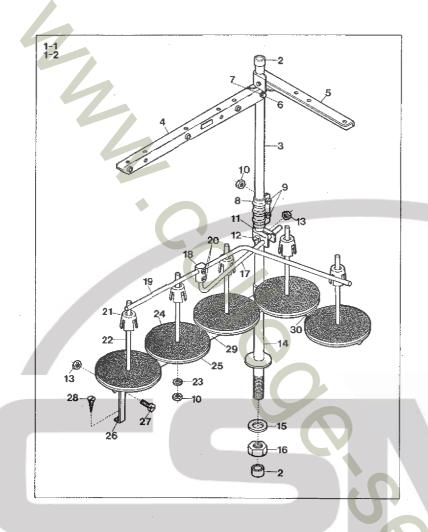

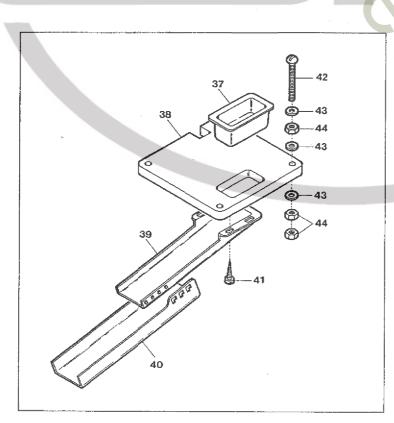

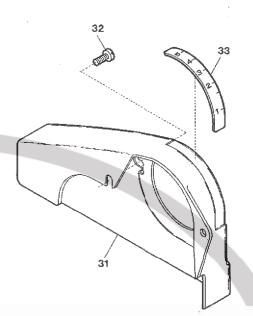

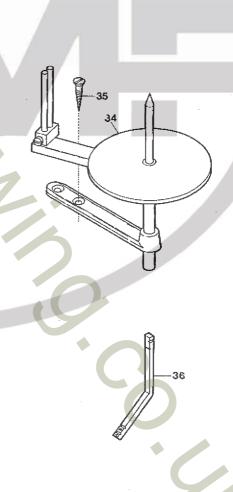

	. .	_				
	Ref.	Parts	B :::		4-	$\underline{\underline{A}mt}$.
	IVO.	<u>No.</u>	<u>Description</u>	品	名	Req_{\cdot}
	1 1	00056	777 1 C 1 C 1 C 1 C 1 C 1 C 1 C 1 C 1 C			
	1-1	99056 99073	Thread Stand, Complete Set (5 Spools Type)			
	2	99057	" " " (4 Spools Type)		(4本糸用)	1.
	3	99058	Column Cap	・・コラムキャ	ップ····································	2
	4	99060	Column Pipe (Upper)	・・コラムパイ	フ(上)・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	···· 1
	5	99059	Thread Hanger (3 Spools Type) Thread Hanger (2 Spools Type)	スレッドハ:	ンガ(3本糸用)	···· I
	6	147	Screw for 99059, 99060	·スレッドハ:	ンガ(2本糸用)	···· 1
	7	148	Washer for 99059, 99060			
	8	99061	Column Pipe Connector			
	9	149	Screw for 99061			
	10	150	Nut for 99061, 99066			
		,00				•
	11	99062	Thread Guide Holder	…糸案内ホル:	<i>ÿ</i>	1
	12	151	Screw for 99062			
	13	152	Nut for 99062, 99069			
	14	99063	Column Pipe (Lower)			
	15	154	Washer for 99063			
_	16	153	Nut for 99063			
()	17	99030	Thread Guide Bar	…糸案内支工柱	* ·····	1
	18	99031	Thread Guide Bar Bracket	··支工棒接点·		1
	19	99064	Thread Guide			
	20	156	Screw for 99064	…止ネジ	***************************************	2
	21	99065	Spool Cushion			-
	22	99066	Spool Pin	マスプールク・	ッション	5
	23	157	Spring Washer for 99066			
	24	99067	Spool Mat			
	25	99068	Spool Seat Disc	・スノールマミ	у р	5
	26	99069	Spool Holder Stay			
	27	158	Screw for 99069			
	28	159	Wood Screw for 99069			
	29	99070	Spool Holder (3 Spools Type)			
	30	99071	Spool Holder (2 Spools Type)			
		00071				
- 7	31	31886	Belt Cover ····	・ベルトカバー	,	1
	32	5089	Screw for 31886	・ベルトカバー	- 止ネジ	2
	33	36523	Pulley Graduations Plate	・プーリ目盛樹	Ē	1
	34	99050	Tape Stand, for Z366, 367, 368			
1 2	35 -		Screw for 99050	・テープスタン	ノド止ネジ	2
\mathcal{L}	36	37961	Timing Gauge	・タイミングケ	f — ジ······	1
₹ ,,		30080	Chip Receiver ·····	·切屑受ケ		1
	38	30083	Supporting Board	·受ケ板		1
	39	30081	Chute (Upper)	・シュート(上)	1
	40	30082	Chute (Lower) ·····	シュート(下)	1
	41 -		Was J. Carry of Special			,
	41 -		Wood Screw for 30081			
	43 -		Screw for 30083	・止ネジ		4
	45 -		Washer for 30083			
	77		Nut for 30083	・アット・・・		12

List of Main Spare Parts (主要部品リスト)

21	rd tch) Rear	/針受(後)	33086	"		"	"		"	"	"				"
4	Needle Guard (Overlock Stitch) Front Rea	(海	33087 33		"	"	"	"	"	"	"	,,	,,	"	· ·
	Guard sin Stitch) Rear	インタ針受(後)	33088		"		2	2	"	2	2	,			n n
	Needle Guard (Double Chain Stitch) Front Rear	インタ針受(前)	33089	"	"	33250	33089	"	33250	33089	33250	33089	33250	33089	"
	Double Chaining Looper	「重環ルーパ	20378	"	"	"	*	"	"	"	"	"	"	"	,
	Lower	下ルーパ	34392		"	"	u u	u u	"				"	*	
7 F)	Upper Looper	上ルーパ	32807	"	ı,	"	(32813)	"	*	32807	"	"	11	"	"
品リスト)	Auxiliary Feed Dog	小器リ	33544	"	ı.	33328	33544	"	33328	33558	35264	33558	35264	33558	33328
主要部	Main Feed Dog	後送り	33825	"	*	33829	33825		33829	33308	33557	33308	33557	33308	33825
rts (F	Differential Feed Dog	前送リ	33824	*	"	33828	33824	"	33828	33307	33315	33307	33315	33307	33824
е Раз	Stitch plate	幹板	36569	36570	31865	36590	36569	31865	36590	36570	36590	36570	36590	36570	31820
Spar	Presser Foot Complete Set	#エ(組)	33537	"	33538	33539	33537	33538	33539	33300	33312	33405	33858	33300	33319
Main	Needle Clamp	針止メ	38101		38011	33247	38101	38011	33247	38101	33247	38101	33247	38101	
List of Main Spare Parts (主要部	Main Parts		Z361-A3DF	-A4DF	-Y4DF	-C5DF	Z362-A4DF	-Y4DF	-C5DF	Z365-A4GF	-C5GF	Z366-A4GF	-C5GF	Z367-A4GF	Z368-A4DF

()in "Upper Looper"…indicating "Upper Spreader" 上ルーパの()内は上スプレダを表わす。 Note:

Parts No.	Page No.	Ref. No.	Weight (g)	-	Parts No.	Page No.	Ref.	Weight (g)		Parts No.	Page No.	Ref.	Weight (g)
2	19	52	0.1		532	19	28	0.3		1227	16	28	0.3
10	4	33	0.2		538	8	33	0.4		1228	4	20	0.2
14	4	48	2		538	11	40	0.4		1230	8	37	0.2
15	13	26	0.7		538	15	32	0.4		1230	14	17	0.2
147	20	6	4		538	16	36	0.4		1230	17	3	0.2
148	20	7	0.5		538	19	8	0.4		1230	18	31	0.2
149	20	9	1.5		550	13	11	0.03		1326	4	43	1
150	20	10	8.0		563	1	14	1.05		1326	10	18	1
151	20	12	4.5		567	1	6	0.07		1330	1	9	0.6
152	20	13	1.5		567	11	18	0.07		1330	2	34	0.6
153	20	16	1		567	13	50	0.07		1330	15	31	0.6
154	20	15	5		568	19	21	0.13		1330	16	35	0.6
156	20	20	1		570	1	15	0.66		1333	12	36	0.9
157	20	23	0.7							1437	5	14	***********
158	20	27	2		636	10	6	0.02		1457	5	20	2.3
159	20	28	3 .		637	10	11	0.12		1459	2	31	0.7
177 182	4	5 31	0.3		637	11	5	0.12		1459	8	12	0.7
102	4	21	4.3		639	11	23	0.21		1733	11	42	1.3
210	11	48	1.5		639	13	31	0.2	ı	1892	9	35	0.1
216	8	44	0.3		644	19	7	0.8		0000			
216	14	24	0.3		687	11	13	0.1		2022	8	16	1
216	15	20	0.3		723	77	0.1	0.7	- 4	2133	5	27	1.7
216	16	24	0.3		731	7 8	21 40	0.7	://	2528	2	44-1	
216	17	10	0.3		731	14	20	0.7		2529	2	44-2	
267	9	28			731	15	18	0.7		2012	^	1.0	0.1
274	9	36	0.1		731	16	22	0.7	- 1	3313	6	16	0.1
278	6	15	0.03		731	17	8	0.7		3313	9	21	0.1
278	9	20	0.03		755	11	15	0.7		3348 3404	18 9	46	1
			••••		100	11	13	0.2	/	3405	12	19	0.2
304	9	27	.0.14		916	2	14			3406	11	37	1 3
317	1	16	0.65		926	13	36	0.06		3410	10	28	0.35
322	1	29	0.3		928	3	14	0.5	ĺ	3434	3	32	0.33
322	14	5	0.3		930	3	13	0.4		3434	5	24	0.4
325	5	53	1			_				3434	7	16	0.4
325	9	29	1		1016	2	18			3434	13	9	0.4
334	8	3	0.6		1092	4	24	1		3591	5	2	1
334	18	16	0.6		1170	8	32	0.1		3632	12	2	1.7
335	1	26	0.8		1174	1	30	1		3635	6	9	0.9
335	8	31	0.8		1174	3	27	1		3635	9	7	0.9
335	19	58	0.8		1174	7	23	1	74.	3635	10	9	0.9
340	4	13	0.5		1186	6	19	1		3635	12	8	0.9
353	5	51			1186	8	27	1		3636	5	49	2.5
			:		1196	18	45	0.5		3637	6	22	0.1
419	13	15	1		1202	11	47	0.8		3637	12	24	0.1
451	11	8	1.5		1202	18	30	0.8		3637	19	35	0.1
488		53			1222	8	46	0.5		3638	10	16	0.5
494	11	44	2.55		1222	14	26	0,5		3638	12	31	0.5
					1222	15	22	0.5	- [
509		21	0.1		1222	16	26	0.5		4109	12	29	0.4
520		17	0.3		1222	17	12	0.5		4120	4	27	4
		13	0.3		1223	2	35	0.55		4125	4	12	5
527		37	0.05		1223	3	12	0.55		4313	6	17	0.4
528		27	1.85		1227	4	49	0.3		4351	14	6	0.9
532	1	21	0.3		1227	15	29	0.3	1	4351	19	31	0.9

Parts No.	Page No.	Ref.	Weight		Parts No.	Page No.	Ref.	Weighe		Parts No.	Page No.	Ref.	Weight
4353	3	2	0.9	ĺ	5071	10	2	2		7006	15	6	0.7
4353	7	32	0.9	1	5074	7 -	26	6		7006	16	6	0.7
4353	12	10	0.9		5076	1	5	8		7311	7	11	1.9
4353	13	30	0.9		5078	3	15	2.8		7405	1	27	1.2
4353	18	33	0.9		5089	2	26	4		7405	15	9	1.2
4353	19	11	0.9		5089	20	32	4		7405	16	9	1.2
4353	19	29	0.9		5094	3	28	1.7		7405	19	40	1.2
4358	1	22	0.9		5098	6	32	1.5		7609	12	12	1
4358	2	46	0.9		5098	19	26	1.5		7609	18	43	1
4358	4	11	0.9	1	5131	2	39	0.4		7616	7	19	0.3
4358	12	20	0.9		5345	3	23	0.9		7616	15	27	0.3
4358	15	33	0.9		5401	6	25	1		7616	16	33	0.3
4358	16	37	0.9		5489	19	10	3		7618	18	41	0.5
4358	18	35	0.9		5500	9	18	5		7650	2	29	0.35
4358	19	57	0.9		5500	10	14	5		7650	5	12	0.35
4404	6	30	0.3		5505	8	4	2.1		7668	13	49	4
4404	8	48	0.2		5505	18	17	2.1		7904	4	7	5
4404	19	38	0.2		5507	9	25	0.65		7904	4	1	,
4410			0.2		5508	7	20	2		8145	11	21	0.5
	6 7	7 7	0.9		5509			1.8		9029			0.5
4410						8	34	3.75			5 2	18	2
4410	12	16	0.9		5510	11	30			9106		8	3
4435	2	6	1.05		5511	11	49	5		9106	11	46	
4437	3	6	1.5		5512	11	27	1	-A	9127	8	2	1.1
4437	7	14	1.5		5514	11	36	10		9143	1	23	0.4
4437	10	7	1.5		5519	1	13	10		9203	5	3	2
4440	2	16	1.5		5520	6	5	5		9503	13	37	1
4440	3	18	1.5		5520	7	5	5		9506	9	5	0.6
4440	4	47	1.5		5520	11	4	5		9526	13	34	0.7
4440	7	34	1.5		5527	11	43	2		9604	6	11	0.9
4440	10	4	1.5		5541	8	30	1.7		9604	7	9	0.9
4440	12	34	1.5		5550	8	14	3		9604	10	31	0.9
4441	3	4	2.2		5550	11	2	3		9604	11	32	0.9
4441	5	5	2,2		5550	9	12	3		9604	13	12	0.9
4441	18	32	2.2		5550	10	20	3		9730	12	4	0.6
4445	2	2	1.7							9852	1	7	2.5
4591	7	29	2.4		6000	8	6	14		9853	3	10	2
4635	8	22	4		6004	4	34	3		9853	4	37	2
					6066	1	32	3.5		9853	13	2	2
5000	4	18	0.5		6068	19	22	2.5		9989	13	25	1
5000	12	39	0.5		6093	8	42	0.9		9992	19	6	2
5004	9	31	2.3		6093	14	22	0.9		9993	19	48	2.5
5004	19	45	2.3		6093	15	17	0.9		9995	19	51	0.4
5036	8	39	0.6		6093	16	21	0.9					
5036	14	19	0.6		6093	17	7	0.9		10100	18	4	132
5036	15	3	0.6		6261	13	43	10		11709	19	55	48
5036	16	3	0.6		6330	13	35	3.2		11755	19	43	
5036	17	5	0.6		6401	8	17	27		11760	19	12	890
5040	10	23	2		6662	6	27	3		11819	19	54-1	
5040	18	12	2		6861	13	16	2.4		11834	19	54-2	
5043	19	18	1.76		6905	18	2	2		11891	19	46	
5044	4	41	0,3		6910	1	18	5		,		7	
5050	9	33	_			_			1	20004	2	11	8
5071	6	2	2		7006	1	25	0.7		20005	2	12	1.25
5071	7	2	2		7006	2	20	0.7		20118	4	4	0.95
5071	9	2	2		7006	14	3	0.7		20123	4	26	7
	-			ı			_		1		~		-

Parts No.	Page No.	Ref.	Weight		Parts No.	Page No.	Ref. No.	Weight (g)		Parts No.	Page No.	Ref. No.	Weight (g)
20124	4	28	1.8		31871	2	32			32724	8	24	25
20125	4	29	0.36		31872	2	33			32725	8	28	20
20126	4	30	4		31873	2	38			32726	8	18	9
20128	4	38	3.5		31874	4	35			32727	8	20	13
20378	10	29	5.5		31875	14	36			32728	8	29	4.5
20403	12	28	0.5		31875	16	12			32729	8	10	1.1
20405	12	30	6.2		31876	10	32			32756	7	27	1.1
20538	3	16	0.07		31880	1	1			32775	5	8	191
20989	19	47	13.2		31881	11	45			32777	5	7	62
22653	19	5	207		31883	1	19			32778	5	. 9	3
23217	19	16	_		31885	2	24			32784	9	4	3
24083	4	2			31886	20	31	_		32785	9	3	9
24084	4	1	+		31887	5	1			32786	9	8	4
					31888	4	9			32787	9	6	50
30080	20	37			01000	-				32789	10	12	29
30081	20	39			32350	5	38	0.1		32792	9	11	16
30082	20	40			32420	8	21	2		32799	9	19	2.75
30083	20	38			32421	1	4	0.1		32800	9	22	11
30228	11	31	12		32425	4	22	0.4		32806	13	29	1.6
30255	4	3	2.7	V	32426	4	23	0.1		32807	9	26	2
30291	5	33	1		32429	3	20	4		32813		37	2
30305	10	5	11		32476	13	13	15		32817_	14 5	4	
30421	7	30	5		32519	7	17	0.4		32818	5	6	51 5
30711	13	33	16		32552	8	19	87		32819	6	3-2	6
30745	13	17	0.4		32604	3	8	0.9					6
30748	13	18	0.7		32604	6	28	0.9		32819	7	3-2	
31111	4	6	5		32607	2	36	37		32848	9	13	3
31820	17	13	_		32608	2	37	7		32849	9	14	2
31821	19	1-1	_		32609	2				32850	13	23	3.5
31823	17	17			32612	3	45	1.2		32867	12	5	2.8
31826	19	1-2		1	32618	2	31 23	0.4		32879	1	11	11
31828	19	2	_		32620	2	19	1.6		32897	13	27	20
31833	5	22			32620					32900	7	1	41
31834	5	36				14	2	2		32902	7		106
31835	5	50		[32622	2 3	21	7		32903	7		115
31836	5	52		1	32627		11	13		32906	5	28	1.65
31000	3	34		ì	32644 32645	6	4	57		32911	7	22	10
31838	5	30		I		6	12	125		32912	7	18	8
31839	5	26		t	32646 32646	6	10	12		32913	7	24	4
31840	5	25		l	32647	7 5	8 31	12		32914	7	25	3
31841	5	34								32916	7	28	37
31842	5	3 4 35			32650	5	29	5		32917	7	31	3
31844	5	39		F	32651	6	18	12	-T	32920	7	10	35
31845	5	40		l	32662	6	. 8	153		32921	6	6	7
31847	5 5				32663	3	9	26		32921	7	6	7
		41			32670	6	1	55		32921	10	34	7
31848 31849	5	42	_		32681	5		119		32925	5	11	47
	5	47			32684	5	32	1		32938	13	20	30.5
31850	5 E	46			32685	13	1	8		32944	13	24	2.1
31851	5 5	45			32706	8	47	3		32952	4	14	1.8
31852	5	44			32714	8	8	6		32961	9	34	2
31853	5	43	_		32718	8	13	20		32962	4	15	8
31858	18	38			32719	8	11	5		32963	4	50	1.1
31859	17	15	_		32720	8	15	89		32970	2	5	72
31860	12	18			32722	8	23	93	1				7
31865	14	28			32723	8	25	3		33006	6	26	66

						ı			-							
	Parts No.	Page No.	Ref. No.	Weight (g)	_		Parts No.	Page No.	Ref.	Weight (g)		1	Parts No.	Page No.	Ref. No.	Weight (g)
	33012	3	24	6			33247	14	34	5			33526	15	16	0.2
	33013	3	22	14			33247	16	11	5	-		33526	16	20	0.2
	33024	8	26	0.1			33250	14	35	3			33526	17	6	0.2
	33024	19	15	0.1			33250	16	14	3			33529	8	43	0.2
	33026	1	17	74			33251	12	1	32			33529	14	23	0.2
	33037	3	25	28			33252	12	3	2			33529	15	19	0.2
	33038	3	26	12			33265	3	21	0.1			33529	16	23	0.2
	33051	5	23	36			33279	13	40	3			33529	17	9	0.2
	33052	5	16	30		1	33280	13	39	51			33537	8	35	33
	33054	10	10	44			33281	13	41	14			33538	14	15	33
	33057	10	3	7			33282	13	42	14			33539	14	29	34
	33058	10	8	38			33284	1	8	15			33544	12	13	3
	33060	10	26	65			33300	15	14	31			33549	14	11-2	2
	33064	10	24	33			33304	15	15	0.5			33557	16	16	17
	33067	12	15	40			33304	16	19	0.5			33558	15	13	2
	33071	10	25	14			33307	15	11	13			33559	14	11-1	3
	33072	10	33	45			33308	15	12	16			33562	2	15	7
	33073	10	36	3.4			33312	16	18	31			33567	10	22	8
	33074	10	37	6			33315	16	15	14			33568	10	19	32
	33076	10	30	8			33319	17	1	34			33569	13	51	26
1	33077	5	13	39			33325	17	16	28			33571	18	25	67.2
	33079	5	17	49			33327	17	18	4			33572	18	24	83
	33080	5	15	489			33328	14	33	2		/	33574	18	26	4
	33086	6	31	14			33328	17	14	2	1		33575	18	28	2
	33087	6	33	0.8			33359	9	24	0.8	- /		33581	18	42	3
	33088	6	34	10			33391	15	1	161			33586	18	36	88
	33089	6	29	2			33398	15	7	1.1			33586	19	30	88
	33094	11	14	15			33398	16	7	1.1			33588	18	29	1.1
	33094	11	6	13			33399	15	4	158			33590	18	27	4
	33096	14	14	31			33399	16	4	158	A		33592	18	34	14
	33098	11	7	2			33400	15	8	0.7	-/-			18	40	0.1
×	33099	11	12	3.6			33400	16	8	0.7			33593 33605	13	40	3
	33100	11	22	65			33401	15	2	16			33606		21	31
	33104	11	1	18			33403	16		160				10		59
	33104	11	24	33					1				33612	11	26	41
	33114	12	25	10			33404	16	2	17			33626	9	10	11
	33115	12	17	8	!		33405	15	28	30		5	33627	1	12	50
	33116	12	14	19	i		33409	15 15	30	46			33633	10	1	121
	33118	11	33	24			33417		34	46			33640	19	42	58
	33119	5		15			33430	15	23	71			33642	11	11	51
		11	48				33430	16	29	71			33643	11	10	
	33120		29	33			33432	15	26	10			33644	12	37	12
	33121	11	28	16			33432	16	32	10			33647	12	33	10
	33131	3	29	1.1			33433	15	25	15			33649	12	32	6
	33133	11	35	2.6			33433	16	31	15			33651	12	35	1
	33140	7	13	101			00515	•					33653		1	29
	33141	12	6	12			33515	8	36	0.6		,	33654	18	37	28
	33142	7	15	18			33515	14	16	0.6			33655	18	44	4
	33143	11	39	13			33515	17	2	0.6			33656	19	39	4
	33144	13	32	332			33525	8	45	0.8			33657	8		1.5
	33150	13	28	26			33525	14	25	8.0	İ		33657	14	18	1.5
	33159	4	25	1.5			33525	15	21	0.8			33657	17	4	1.5
	33200	5	19	25			33525	16	25	8.0			33658	18		147
	33205	4	36	2			33525	17	11	0.8			33659	12	38	5
	33209	1	2	42			33526	8	41	0.2			33660	13	6	8
	33230	10	35	8			33526	14	21	0.2			33661	13	3	10

	Parts No.	Page No.	Ref. No.	Weight (g)		Parts No.	Page No.	Ref. No.			Parts	Page	Ref.		
	33662			-					(g)	-	No.	No.	No.	(g)	
6		13	38	81		34478	9	15	53	1	36291	11	17	29	
	33667	11	9	113		34505	2	29	7	ļ	36292	11	19	5	
	33668	13	46			34507	1	30	12		36293	11	20	2	
	33669	13	48			34509	1	31	3		36294	11	16	36.5	
	33670	13	44	46		34517	9	10	66		36315	14	1-2	*********	
	33671	13	22	20		34521	11	3	33		36333	2	7		
	33672	13	52	1		34628	1	10	59		36334	2	10	1	
	33680	14	4	0.4		34637	2	28	12		36336	2	4	2	
	33683	11	25	7		34639	2	25	1.9		36359	12	22	59	
	33690	19	36	20	- 1	34675	3	5	121		36360	12	26	56.2	
	33695	19	30.	16		34676	3	7	2.7		36361	19	41		
	33696	19	27	5		34943	14	1-1			36384	3	17	126	
	33697	19	4	19							36394	12	- 23	0.5	
	33710	19	34	0.5		35264	16	17	2	İ	36399	4	8		
	33711	19	33	0.8		35293	19	13	166.5		36414	2	3	1.92	
	33746	8	7	10		35296	19	25	17	-	36429	2	1	_	
	33764	3	3	0.02		35298	19	19	18	ŀ	36435	2	40		
	33782	13	10	15							36479	2	13	_	
	33824	12	9	15	$\Pi \setminus$	35300	19	17	1.3		36501	1	3		
	3 3825	12	11	8		35301	19	14	2.9		36507	2	9	1.9	
	33826	14	9-1	15		35302	19	20	10		36515	1	24	3	
	33827	14	10-1	8		35303	19	24	197.2		36516	1	28		
	33828	14	31	18		35313	19	37	3	-A	36517	7	33	7.4	
	33829	14	32	8		35315	19	32	54	- / 1	36523	20	33		
	33830	14	9-2	17		35357	15	24	4		36531	4	42	3	
	33831	14	10-2	8		35357	16	30	4		36532	4	46	2.8	
	33834	14	7	. 17		35363	4	16	5		36533	4	44	2	
	33835	14	8	8		35364	4	17	\		36534	4	45	3.9	
	33858	16	27	31		35365	4	19	7	/A	36535	10	17	5.5	
	33866	16	34	6		35366	4	10	$\Delta \Delta \lambda$		36569	6	24-1	15	
	33899	5	10	_		35396	10	27			36570	6	24-2	15	
	33925	18	1	459		35719	19	50			36590	14	30	12	
	33928	18	3			35722	19	49	0.9		36590	16	13	12	
	33931	18	6	7.7		35723	19	44	45		36640			12	
	33932	18	20	15		35767	19	23	0.6		36641	4 4	32 40		
	33933	18	23	87		00701	15	20	0.0		36643	4	39	_	
	33934	18	18	64		36175	4	21	0.1		36775	14			
	33935	18	15	11		36179	2	16	28		36808	3	12		
	33936	18	14	58		36187	12	27	32		30000	0	19		
	33937	18	13	5		36191	12	21	3.7		27272	c	00	10	
	33938	18	11	7		36192	9				37372	6	20	13	
	33939	18	21	12		36195	9	23 30	26 47		37668	13	47	4	
	33940	18	5	12		36216	3				37669	13	45	4	
	33941	18	19	43		36218	9	30	13		37675	13	14	2	
	33942	18	22	355				32	5.3		37697	13	7	0.1	
	33949	18	7			36220	11	34	41		37961	20	36		
	33950			4.6		36222	14	13	21	[37989	15	10		
	33951	18	9	3		36223	11	41	21		37989	16	10		
	33953	18	8	0.1		36226	11	38			000			_	
	00800	18	10	156		36230	8	5	45		38011	14	27	5	
	24104	0	10	90		36231	8	9	26		38101	6	21	5	
	34104	9	16	28		36232	8	1	13		80503	13	19	0.2	
	34186	19	9	11		36240	2	21	77						
	34392	10	15	4		36267	15	5	2		90320	6	14	3	
	34405	6	3-1	6 .		36267	16	5	2		90321	6	13	10	
	34405	7	3-1	6							99030	20	17		

Parts No.	Page No.	Ref.	Weight (g)
99031	20	18	
99050	20	34	_
99056	20	1-1	
99057	20	2	
99058	20	3	
99059	20	5	
99060	20	4	
99061	20	8	
99062	20	11	
99063	20	14	
99064	20	19	
99065	20	21	
99066	20	22	
99067	20	24	
99068	20	25	-
99069	20	26	
99070	20	29	
99071	20	30	
99073	20	1-2	_

Parts No.	Page No.	Ref.	Weight (g)	_



