


INSTRUCTIONS FOR STEAM IRON WITH BOTTLE

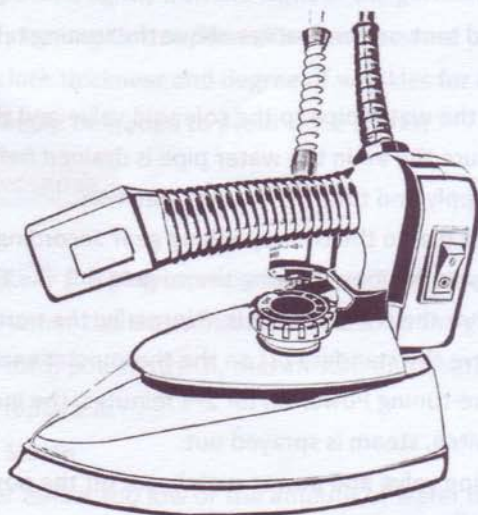

Overview

The heating plate of Easteye steam Iron with water tank is cast into shape as a whole, so the steam storehouse is tightly closed and the steam pressure is high.

We use high quality heating tube imported from South Korea to heat the steam Iron evenly then give long service life.

Easteye Steam Iron never grow scale in the steam storehouse due to special treatment.

Specifications and models

Model	Voltage	Power	Weight	Steam holes	Teflon shoe
DP-85	220V	1200W	2kg	12	85
DP-85	220V	1800W	2kg	34	85
DP-300L	220V	1800W	2.4kg	19	300L

Usage method

1. Hang the water-filled tank on the bracket above the ironing table at a height of about 1.5 meters.
2. Connect one end of the water pipe to the solenoid valve and the other end to the water bottle. Make sure the air in the water pipe is drained before use.
3. Plug in the power supply and turn the power switch on.
4. Turn the temperature dial to the corresponding gear according to the required temperature. The gear position is facing the cover “↑”. The higher the gear position is, the higher the temperature is. (Normally, the normal operating temperature is above the standard [3] on the thermostat knob. According to the actual situation, fine-tuning Power on for 2-4 minutes, the indicator light is off, press the steam switch, steam is sprayed out.
5. Turn off the water pipe valve and power switch, cut off the power supply, and let the iron cool naturally.
6. To achieve a good ironing effect, the knobs are recommended for use as follows:
 - 1~2 temperature dial: preheat
 - 3 temperature dial : Silk fine fiber(lower temperature)
 - 4 temperature dial: Cotton and wool(medium temperature)
 - 5 temperature dial: Hemp quality (high temperature)

The above is for reference only, please refer to your actual ironing experience.

Tip: Pure water is recommended to use to avoid scale and extend service life.

Notes

1. Please turn off the hanged bottle switch firstly after use, then press the steam switch continuously to make all water out of the steam iron
2. There is a ground protection wire in the power cord, and the socket must be connected to the ground wire.
3. Please DO NOT touch the steam iron plate during heating, in case any accident or burns happen.
4. The power of steam iron must be cut off when operator leave the workbench or stop using the steam iron.
5. When moving or unplugging the power plug, do not pull the power cord blindly to avoid short circuit, leakage or even fire.

Tips: **Nylon:** Nylon cloth are best are best ironed with an ironing cloth to prevent shine marks. **Silk:** Ironing the back of clothing or with an ironing cloth. When ironing the front pocket, lightly iron the front of the garment. **Wool:** Use spray ironing, do not dry ironing. **Cotton/linen:** The temperature can be adjusted according to the cloth thickness and degree of wrinkles for ironing, and the back of dark clothing should be ironed to avoid shine marks.

Maintenance and repair

1. No Heating

Please check Whether the plug is properly inserted, whether the power switch is turned on, and whether the thermostat is adjusted to the gear position. please Check the power cord, power switch, thermostat, and heating plate for damage. If damaged, please replace it.

2. Small amount of Steam

The hanging water tank is too low or the amount of water is low; if there's blocking of steam holes in the steam injection plate, please dredge the steam injection holes.

3. If the temperature is low, there will be water leakage, please adjust to gear 3 or above, and the indicator light is off before use.

4. This iron is strictly prohibited from using any chemicals for descaling, If the heating plate is damaged it is not covered by the warranty, Please use the iron correctly to avoid burns and electric shock

BREAKDOWN DRAWING

