

Form 3210W
(462)
Printed in U. S. A.

LIST OF PARTS COMPLETE

FOR

MACHINE NOS. 300W103 and 300W203


HISTORICAL COPY

RECEIVED BY

RECEIVED BY

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE
FOR

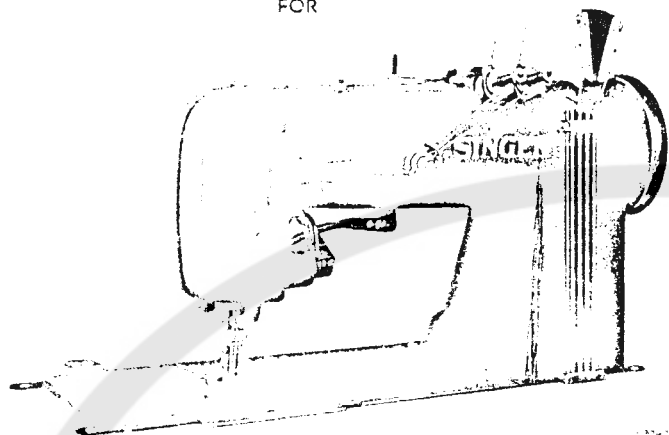

MACHINE No. 300W103

TWO THREAD CHAIN STITCH
ONE NEEDLE. ONE LOOPER.
COMPOUND FEED.
ALTERNATING PRESSERS.
MAXIMUM STITCH $3\frac{1}{2}$ TO THE INCH
NEEDLE BAR STROKE $1\frac{1}{4}$ INCHES.
PRESSER BAR LIFT $\frac{3}{8}$ INCH.

FOR WELTING, BINDING, MATTRESSES and SEAMING

MEDIUM and HEAVY FABRICS

No.	Plate	Name
*267501	-----	Arm with 201485C, 204235, 267602, 267635, 268004, two each 3554, 200030H, three each 200029E and 200047D
*267602	-----	Arm Head with 200351C and 200417C
204235	18640	" " Position Pin
200029E	18640	" " Screw
3582	18640	" " Position Pin (2)
200004E	18640	" " Screw (4)
267503	18632	" " Shaft with 263009, 268044, 268264, two each 268214 and 350534C
268024	18632	Arm Shaft Ball Bearing (back)
268004	18632	" " " " " Housing
200047D	18632	" " " " " Screw
268005	18632	" " " " " (front)
268006	18632	" " " " " (front)
268006	18632	Arm Shaft Connection Belt Pulley with two each 201254C and 201253
201254C	18632	Arm Shaft Connection Belt Pulley Set Screw

PARTS FOR MACHINE No. 300W103

No.	Plate	Name
202253	18632	Arm Shaft Connection Belt Pulley Spring Flange
268732	18632	Arm Shaft Counter Balance with 200354C and 200362C
200354C	18632	Arm Shaft Counter Balance Position Screw
200362C	18632	" " " " " Set Screw
268264	18632	" " " " " Oil Control Rod (wood)
268008	18632	" " " " " Slinger with 350171C
350171C	18632	" " " " " Set Screw
268214	18632	" " " " " Stop Ball, 5/32 in. diameter
350534C	18632	" " " " " Screw
268009	18632	" " " " " Spring (front)
268044	18632	" " " " " " (rear)
267604	18640	" " Side Cover
267661	18640	" " " " " Oil Shield with 244411 and 267662
267662	18640	Arm Side Cover Oil Shield Pin
244411	18640	" " " " " " " Staple
200078H	18640	" " " " " Screw (4)
268048	18632	Balance Wheel "V" belt groove (outside diam. of belt groove 2.9 in.) with 200342C and 200347C
268049	18632	Balance Wheel 268048 with 268024
200342C	18632	" " " " " Position Screw
200347C	18632	" " " " " Set Screw
*268401	-----	Bed with 268184, two each 200035E and 225887
265307	18640	" " Hinge Connection (2)
200553H	18640	" " " " " Screw (4)
267505	18640	" " Plate (left)
268018	18640	" " " (right)
200053H	18640	" " " " " Screw (8)
267606	18640	" " " " " Slide with two 268022 and four 200154H
268022	18640	Bed Plate Slide Spring
200154H	18640	" " " " " " " Screw
263160	18632	" " " " " " " Shaft with 268044, 268214, 268265 and 350534C
268024	18632	Bed Shaft Ball Bearing
268028	18632	" " " " " Connection Belt Pulley with two 201254C
268261	18632	Bed Shaft Connection Belt Pulley 268024 with 268024
201254C	18632	Bed Shaft Connection Belt Pulley Set Screw
268732	18632	" " " " " Counter Balance with 200354C and 200362C
200354C	18632	Bed Shaft Counter Balance Position Screw
200362C	18632	" " " " " " " Set Screw
268024	18632	" " " " " Needle Bearing (2)
268265	18632	" " " " " Oil Control Rod (wood)
350534C	18632	" " " " " " " Screw
268044	18632	" " " " " " " Spring
268007	18640	Face Plate with 268006, 268008, 268009 and 201415C
268006	18640	Face Plate Hinge Pin (2)
201415C	18640	" " " " " " " Set Screw
200353C	18640	" " " " " " " " " (long)
268032	18640	" " " " " " " Lock Spring

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
268197	18640	Face Plate Lock Spring Plate
200571XC	18640	" " " " Screw (2)
268033	18640	" " " " Stud
268034	18634	Feed Bar with 200373C and two 200403C
268035	18634	" " " " Hinge Pin
202574	18634	" " " " Collar with 200380C
200380C	18634	" " " " Set Screw
200403C	18634	" " " " Set Screw
268618	18643	" " Dog with 268318 and two 200172D, for 268614
200100C	18643	Feed Dog Screw (2)
268318	18634	" " Shank with 201537H and 350552C
350552C	18634	" " " " Adjusting Screw
201537H	18634	" " " " " " Lock Nut
200040AL	18634	" " " " " " Screw
201525E	18634	" " " " " " Lock Nut
208636	18634	" " " " " " Washer
267608	18634	" " Driving Connection
267609	18634	" " " " 267608 with 271055
268652	18634	" " " " Hinge Stud with 268258
201524E	18634	Feed Driving Connection Hinge Stud Nut
268258	18634	" " " " " " Oil Packing (wick)
271055	18634	Feed Driving Connection Needle Bearing
267610	18633	" " " " Eccentric
268085	18633	" " " " Adjusting Disc
268066	18633	" " " " " " Spring
268067	18633	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382C
200382C	18633	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw
267623	18633	Feed Driving Eccentric Friction Plate
350548C	18633	" " " " " " " " Screw
350477C	18633	" " " " " " " " Set Screw
		Feed Driving Eccentric Friction Plate Screw
		Set Screw Packing (brass)
268215	18633	Feed Driving Flange with 267623, two each 241763, 350467AL, 350477C and 350548C
241763AL	18633	Feed Driving Flange Set Screw
268064	18634	" " " " Rock Frame with 200394C and 200382C
		Feed Driving Rock Frame Position Screw
200152C	18634	" " " " " " Set Screw
268073	18634	" " " " " " Shaft
268072	18634	" " " " " " Collar with two 200386C (2)
200386C	18634	Feed Driving Rock Shaft Collar Set Screw
268073	18634	" " " " " " Crank with 201418C and two 200061C
200061C	18634	Feed Driving Rock Shaft Crank Pinch Screw
201418C	18634	" " " " " " Position Screw
268071	18634	" " " " " " Needle Bearing (2)
268074	18634	" " Lifting Connection
268662	18634	" " " " Hinge Stud with 268258
201524E	18634	Feed Lifting Connection Hinge Stud Nut

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
268258	18634	Feed Lifting Connection Hinge Stud Oil Packing (wick)
268075	18634	Feed Lifting Crank with 200373C and 201256C
201256C	18634	" " " " Pinch Screw
268047	18635	" " " " Eccentric with 268077 and two 200394C
268077	18635	Feed Lifting Eccentric Lubricating Pad (wood)
200394C	18635	Feed Lifting Eccentric Set Screw
268078	18634	" " " " Link
268079	18634	" " " " Hinge Pin with 268258 (2)
268258	18634	" " " " " " Oil Packing (wick)
200373C	18634	Feed Lifting Link Hinge Pin Set Screw
268080	18634	" " " " Rock Shaft
268072	18634	" " " " " " Collar with two 200386C (2)
200386C	18634	Feed Lifting Rock Shaft Collar Set Screw
268198	18634	" " " " " " Crank with 201418C and two 200061C
200061C	18634	Feed Lifting Rock Shaft Crank Pinch Screw
201418C	18634	" " " " " " Position Screw
268071	18634	Feed Lifting Rock Shaft Needle Bearing (2)
268081	18633	" " " " Regulating Stud
240245	18633	" " " " Retaining Spring
268082	18633	" " " " Socket
200075F	18633	" " " " " " Screw (2)
270025	18633	" " " " " " Spring
267611	18638	Foot Lifter Arm with 200058C and 200173C
200058C	18638	" " " " " " Pinch Screw
200373C	18638	" " " " " " Set Screw
267612	18638	" " " " " " Crank
200650H	18638	" " " " " " Stop Screw Stud
268085	18638	" " " " " " Lever (back) with 238084
201363C	18638	" " " " " " Hinge Screw
204348	18638	" " " " " " Spring
201495C	18638	" " " " " " " " Screw
201160E	18638	" " " " " " " " Eye
267612	18638	" " " " " " (front) with 267614
267614	18638	" " " " " " Hinge Pin
203941	18638	" " " " " " Spring
201702E	18638	" " " " " " " " " " Eye
350524X	18638	" " " " " " Rod Hinge Screw
201524E	18638	" " " " " " " " " " Nut
206133	18638	" " " " " " " " Washer
267615	18638	" " " " " " Rod
267616	18638	Lifting Crank with 200167E, 200418C and two 200061D
200061D	18638	Lifting Crank Pinch Screw
200418C	18638	" " " " " " Set Screw
268064	18632	" " " " " " Eccentric
268065	18632	" " " " " " Adjusting Disc
267618	18632	" " " " " " " " Spring
267619	18632	" " " " " " Connection
267620	18632	" " " " " " " " 267618 with 268063

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
267621	18638	Lifting Eccentric Connection Crank with 201063D and two 200058C
200058C	18638	Lifting Eccentric Connection Crank Pinch Screw
267617	18638	Lifting Eccentric Connection Hinge Pin with 244071
244071	18638	Lifting Eccentric Connection Hinge Pin Oil Packing (wick)
201063D	18638	Lifting Eccentric Connection Hinge Pin Pinch Screw
263062	18632	Lifting Eccentric Connection Needle Bearing
267622	18632	" " Flange with 267623, two each 241763, 350467AL, 350477C and 350548C
350467AL	18632	Lifting Eccentric Flange Set Screw
267623	18632	" " Friction Plate
350548C	18632	" " " " " " Screw
350477C	18632	" " " " " " Set Screw
241763	18632	Lifting Eccentric Friction Plate Screw Set Screw Packing (brass)
267624	18632	Lifting Eccentric Spacing Collar with two 200360C
200360C	18632	Lifting Eccentric Spacing Collar Set Screw
267625	18636	" " Lever with two 267093
267626	18636	" " " " Hinge Stud
200362C	18636	" " " " " " Set Screw (2)
267093	18636	" " " " Needle Bearing
267627	18636	" " Link
267617	18638	" " " " Hinge Pin with 244071 (2)
244071	18638	" " " " " " Oil Packing (wick)
200167E	18638	" " " " " " Set Screw
267628	18636	" " Presser Bar
267629	18636	" " " " Guide Block with 200066D and 200081C
200066D	18636	" " " " " " Guide Block Pinch Screw
200066D	18636	Lifting Presser Bar Guide Block Pinch Screw
200417C	18636	" " " " " " " " Set Screw
200561C	18636	Lifting Presser Bar Guide Rod Set Screw (upper)
267631	18636	Lifting Presser Bar Lifting Crank with 263258
263258	18636	Lifting Presser Bar Lifting Crank Oil Packing (wick)
267632	18643	Lifting Presser Foot with 200076F, 10r 267659
200076F	18643	Lifting Presser Foot Guide Pin with 200076F
267633	18638	" " Rock Shaft
267634	18638	" " " " " " 267635 with 2002 and 267636
267635	18638	Lifting Rock Shaft Bracket
8554	18638	" " " " " " Position Pin
200058C	18638	" " " " " " " " Screw

No.	Plate	Name
268072	18638	Lifting Rock Shaft Collar with two 200386C
200386C	18638	" " " " Set Screw
267636	18638	" " " " Crank with 200157E
2022	18638	" " " " Pin
267110	18638	" " " " Needle Bearing (2)
268318	18643	Loop Deflector
200172D	18643	" " " " Screw
268038	18615	Looper
350478C	18615	" " Adjusting Screw
266090	18615	" " Carrier
268205	18615	" " " " 268090 with two 18615
268207	18615	" " " " Crank with 200049C
186208	18615	" " " " Clamping Band
201524E	18615	" " " " " " Nut
27418	18615	" " " " " " Washer
268206	18615	" " " " " " Hinge Pin with 268205
268209	18615	" " " " " " 268090 with 268205
		(Wick)
201540C	18615	Looper Carrier Crank Hinge Pin Pinch Screw
268207	18615	" " " " Needle Bearing
*268207	18615	" " " " Shaft
268204	18615	" " " " " " 268090 with 268205
		and 268097
*268097	18615	Looper Carrier Shaft Bushing (Left)
		(eccentric) with 200384C and 200386C
268206	18615	Looper Carrier Shaft Bushing (Left) Position
		Plate
200085C	18625	Looper Carrier Shaft Bushing (Left) Position
		Plate Screw (2)
*268097	18615	Looper Carrier Shaft Bushing (Right)
		(eccentric) with 200384C and 200386C
200384C	18615	Looper Carrier Shaft Bushing (Right) Pinch Screw
200386C	18615	" " " " " " Set Screw
268096	18615	" " " " Driving Connection
268206	18615	" " " " " " 268096 with
		268205
268207	18615	Looper Driving Connection Needle Bearing
268207	18615	" " " " Crank with 200157E, 200387B
		and 200386C
268182	18615	Looper Driving Crank Oil Hole Cover
200384H	18615	" " " " " " " " Screw
204425	18615	" " " " " " " " Washer
		Washer
200384D	18615	Looper Driving Crank Oil Stop Locks
200384E	18615	" " " " " " " " Position Screw
200384C	18615	" " " " " " " " Set Screw
268097	18615	" " " " " " " " Holder with two 350478C
200387E	18615	" " " " " " " " Screw
200635	18615	" " " " " " " " Washer
		" " " " " " " " Thread Guide
268207	18641	" " " " " " " " (top of Arm)
186184	18641	" " " " " " " " " " " "
268207	18641	" " " " " " " " " " " "
268207	18641	" " " " " " " " " " " "
		268111 with two 186158 and two 301097
200387C	18641	Looper Thread Guide (top of Arm) Washer
		Screw (2)
301097	18641	Looper Thread Guide (top of Arm) Washer
		Screw

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
268296	18616	Looper Thread Guide (on Bed at Looper)
268468E	18616	" " " " " " " Screw
268035D	18641	" " " " " " " Screw
268114	18633	" " " " " " " Take-up Driving Connection
268079	18633	" " " " " " " " "
		Hinge Stud with 268258
268258	18633	Looper Thread Take-up Driving Connection
		Hinge Stud Oil Packing (wick)
268098F	18633	Looper Thread Take-up Driving Connection
		Hinge Stud Set Screw
268113	18633	Looper Thread Take-up Driving Eccentric
		with 200378C and 201220C
201220C	18633	Looper Thread Take-up Driving Eccentric
		Position Screw
200378C	18633	Looper Thread Take-up Driving Eccentric
		Set Screw
268116	18633	Looper Thread Take-up Lever with 200098F
		and two 201052C
268116	18633	Looper Thread Take-up Lever Hinge Stud
268072	18633	" " " " " " " " "
		Collar with two 200386C
200386C	18633	Looper Thread Take-up Lever Hinge Stud
		Collar Set Screw
200386C	18633	Looper Thread Take-up Lever Hinge Stud
		Set Screw (2)
268117	18633	Looper Thread Take-up Rod
201052C	18633	" " " " " " " Set Screw
268507	18641	" " " " " " " Thread Guide
268132C	18641	" " " " " " " " Screw
268119	18641	" " " " " " " " Support
		Stud
200394C	18641	Looper Thread Take-up Thread Guide
		Support Stud Set Screw
268120	18641	Looper Thread Tension Bracket
200504E	18641	" " " " " " " " Screw (2)
268121	18641	" " " " " " " " Spacing
		Collar (2)
2455	18641	Looper Thread Tension Disc
10141	18641	" " " " " " " Spring
3455	18641	" " " " " " " Spring
268122	18641	" " " " " " " Thread Guide
1562J	18641	" " " " " " " Thumb Nut
5989	18641	Looper Thread Tension complete, Nos. 418D,
		1562J, 10141 and two 3455
268123	18641	Looper Thread Tube with two 200386C (4)
268124	18641	" " " " " " " Clamp (2)
200654C	18641	" " " " " " " " Screw (4)
268125	18641	" " " " " " " Thread Bushing
200386C	18635	" " " " " " " " Thread-out Gear with two 200386C
268127	18635	" " " " " " " " Locking Plunger
268113	18635	" " " " " " " " " "
		Handle
201477C	18635	Looper Throw-out Gear Locking Plunger
		Screw Bushing
200386C	18635	Looper Throw-out Gear Locking Plunger
		Spring

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
200444C	18635	Looper Throw-out Gear Locking Plunger Stop Screw
200364C	18635	Looper Throw-out Gear Locking Plunger Stop Screw Set Screw
201620D	18635	Looper Throw-out Gear Locking Plunger Thumb Nut
200362C	18635	Looper Throw-out Gear Set Screw
268129	18635	" " Rack Rod
268314	18635	" " " " 268129 with 201553D
201553D	18635	Looper Throw-out Rack Rod Thumb Nut
268131	18634	" " Safety Latch
268199	18634	" " " " Collar with two 200386C
200386C	18634	Looper Throw-out Safety Latch Collar Set Screw
268132	18634	Looper Throw-out Safety Latch Spring
268133	18634	" " " " Bracket
200098F	18634	Looper Throw-out Safety Latch Spring Bracket Screw (2)
223443	18635	Machined Locating Stud (4)
268003	18636	Needle Bar with 200135F
268117	18636	" " Connecting Link
268136	18636	" " " " 268117 and 200379C and two 270266
268139	18636	Needle Bar Connecting Link Cap Washer
200095H	18636	" " " " " " " " Screw
270266	18636	Needle Bar Connecting Link Needle Bearing
200423	18636	" " " " " " " " 200423 and two 200069C
200423	18636	Needle Bar Connecting Stud Oil Packing (wick)
200069C	18636	Needle Bar Connecting Stud Pinch Screw
268142	18632	" Crank with 200346C, 200384C, 200376C and 200379C
268143	18632	Needle Bar Crank Pin with 200379C
200379C	18632	" " " " Oil Hole Plug Screws
200376C	18632	" " " " " " " " Screws
200346C	18632	Needle Bar Crank Set Screw
268144	18636	" " Oiling Felt (2)
268145	18636	" " " " " " " " Screw (2)
200173D	18636	" " " " " " " "
267537	18636	" " Rock Frame
267638	18636	" " " " Driving Arm with one 200043C
200043C	18636	Needle Bar Rock Frame Driving Arm Pinch Screw
267608	18632	" " " " " " " " 267608 with 271955
200123D	18636	Needle Bar Rock Frame Driving Connection Cup Screws

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
268224	18641	Needle Thread Nipper Disc Washer (vellumoid)
268225	18632	Needle Thread Nipper Eccentric with two 200394C
268226	18632	Needle Thread Nipper Eccentric Connection
268228	18632	" " " " " "
		268226 with 268227
268227	18632	Needle Thread Nipper Eccentric Connection Needle Bearing
268259	18632	Needle Thread Nipper Eccentric Flange
201403H	18632	" " " " " " Spring
200394C	18632	" " " " " " Set Screw
268229	18641	" " " " " " Plunger with 350496C
268230	18641	" " " " " " Cap
268231	18641	" " " " " " Hinge Pin
350496C	18641	" " " " " " " "
		Set Screw
222513	18641	Needle Thread Nipper Spring
208235	18641	" " " " " " Flange
201537H	18641	" " " " " " Nut
350483C	18641	" " " " " " Spring
		Bearing
268167	18641	Needle Thread Tension Bracket
200047E	18641	" " " " " " Screw (2)
268121	18641	" " " " " " Spacing
		Collar (2)
2102	18641	Needle Thread Tension Disc
268168	18641	" " " " " " Releaser
268169	18641	" " " " " " Cap with 201052C
201052C	18641	Needle Thread Tension Releaser Cap Set Screw
204365	18641	Needle Thread Tension Releaser Spring
32572	18641	" " " " " " Releasing Disc
225206	18641	" " " " " " Pin
268171	18638	" " " " " " Plate (adjustable)
238069	18638	Needle Thread Tension Releasing Plate Pin
131741	18641	" " " " " " Spring
59536	18641	" " " " " " Bushing (back)
59537	18641	" " " " " " " " (front)
59326C	18641	" " " " " " Stud
59539	18641	" " " " " " " 50326C with 51570C
54279	18641	Needle Thread Tension Thread Guide (double)
268263	18641	Needle Thread Tension complete, Nos. 32572, 59537 to 59539, 131741, and two 2102
267641	18638	Presser Bar Spring
267642	18638	" " " " " " Arm
267643	18638	" " " " " " Ball Bearing
267644	18638	" " " " " " " " Retainer
201403H	18638	" " " " " " " " " "
		Screw (2)
267644	18638	Presser Bar Spring Arm Fork

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
267645	18638	Presser Bar Spring Arm Fork Lock Washer (nylon)
267646	18638	Presser Bar Spring Arm Fulcrum
201254C	18638	" " " " " Set Screw (2)
267647	18638	Presser Bar Spring Arm Hinge Buffer (leather)
267648	18638	Presser Bar Spring Housing
267660	18638	Presser Bar Spring Housing complete, Nos. 200186H, 267641, 267644, 267645, 267648, 267651, 267652, 267654 and 267655
201524E	18638	Presser Bar Spring Housing Adjusting Nut (2)
201540H	18638	Presser Bar Spring Housing Oil Screw
201578C	18638	" " " " " Set Screw
244084	18638	" " " " " " " Packing (fibre)
201540H	18638	Presser Bar Spring Housing Support with 200378C and 244084
267670	18638	Presser Bar Spring Housing Support Retainer
200026F	18638	" " " " " " " Screw (2)
267671	18638	Presser Bar Spring Plunger
267682	18638	" " " " " " " Bearing with 267653
267683	18638	Presser Bar Spring Plunger Bearing Bushing (oil retaining)
267684	18638	Presser Bar Spring Plunger Cap
267685	18638	" " " " " " " Washer (leather)
267686	18638	Spreader with 268162
268161	18605	" " " " " " " Bar
268162	18605	" " " " " " " Bearing
268163	18605	" " " " " " " Position Pin
268164	18605	" " " " " " " Screw
268165	18605	" " " " " " " Driving Connection with two 261020E
268166	18605	Spreader Driving Connection 268186 with 261020E and 261020F
268167	18605	Spreader Driving Connection Cap Screw
268168	18605	" " " " " " " Needle Bearing
268169	18605	" " " " " " " Crank with 267650C and 262403C
268170	18605	Spreader Driving Crank Position Screw
200403C	18605	" " " " " " " Set Screw
268171	18605	" " " " " " " Eccentric with two 200364C
268172	18638	" " " " " " " Counter Balance with two 200364C
200364C	18638	Spreader Driving Eccentric Counter Balance Set Screw
268173	18605	Spreader Driving Eccentric Set Screw
268174	18638	" " " " " " " Thrust Washer (2)
268175	18605	Spreader Driving Pin
268176	18605	" " " " " " " Rock Shaft
268177	18605	" " " " " " " Collar with two 200360C (2)

PARTS FOR MACHINE No. 300w103

No.	Plate	Name
200386C	18605	Spreader Driving Rock Shaft Collar Set Screw
268071	18605	Spreader Driving Rock Shaft Needle Bearing (2)
350466C	18605	Spreader Driving Rock Shaft Screw Stud
351876	18605	" " " " " " " Ball Roller
201736E	18605	Spreader Driving Rock Shaft Screw Stud Nut
268185	18605	" " " " " " " Holder with two 200380C
200380C	18605	" " " " " " " Set Screw
268186	18605	" " " " " " " Point
350149C	18605	" " " " " " " Screw
204925	18605	" " " " " " " Washer
267656	18640	Thread Lubricator with 50608R, 139017, 350549C and three 236957
236957	18640	Thread Lubricator Oil Pad (felt)
350549C	18640	" " " " " " " Regulating Screw
50608R	18640	" " " " " " " Plug Screw
139017	18640	" " " " " " " Washer
200064D	18640	" " " " " " " Screw
268614	18643	Throat Plate for 268618
200100E	18643	" " " " " " " Screw (3)
267657	18638	Vibrating Presser Bar
267658	18638	" " " " " " " Hinge Stud
267659	18640	" " " " " " " Foot with 200075F for 267632
200078F	18643	Vibrating Presser Foot Pinch Screw

PARTS FOR MACHINE No. 300w203

MACHINE No. 300w203

TWO THREAD CHAIN STITCH

TWO NEEDLES. TWO LOOPERS.
COMPOUND FEED.

ALTERNATING PRESSERS.

MAXIMUM STITCH 3 1/2 TO THE INCH

NEEDLE BAR STROKE 1 1/4 INCHES.
PRESSER BAR LIFT 3/4 INCH.

FOR LAP SEAM FELLING and INSERTING SLEEVES
in SPORT SHIRTS and SIMILAR WORK in
MEDIUM and HEAVY FABRICS

MADE IN GAUGES FROM 1/16 TO 1 INCH

Same as Machine No. 300w201, with the following
exceptions:

No.	Plate	Name
267300	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1, 4, 9, 32 and 7, 32 in. (teeth cut 15 to the inch) with two 268317 and four 200172D, for 267350
267302	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 1, 4, 9, 32 and 5, 16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267351
267304	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11, 12, 3, 8 and 13, 32 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267353
267312	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 7, 16, 15, 32 and 1, 2 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267355
267317	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 11, 32 to 21, 32 in. in steps of 1/32 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267357
267321	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 11, 16 to 31, 32 in. in steps of 1/32 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267358
267325	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 1 in. gauge (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267359
267326	18644	Lifting Presser Foot, for 267300, in gauges from 3, 16 to 11, 32 in. in steps of 1/32 in. with 200073F
267377	18644	Lifting Presser Foot, for 267380, in gauges from 3, 16 to 11, 32 in. in steps of 1/32 in. with 200073F

No.	Plate	Name
268317	18644	Loop Deflector
268088	18639	Looper (2)
268103	18639	" Holder, in gauges from 3/16 to 11, 32 in., in steps of 1/32 in., with four 350478C
268104	18639	Looper Holder, in gauges from 3/8 to 5/8 in., in steps of 1/32 in., with four 350478C
268105	18639	Looper Holder, in gauges from 21, 32 to 7/8 in., in steps of 1/32 in., with four 350478C
268106	18639	Looper Holder, in 20, 31, 16, 31, 32 and 1 in. gauge, with four 350478C
268296	18639	Looper Thread Guide (on Bed at Looper) for gauges from 1, 16 to 15, 32 in.
268297	18639	Looper Thread Guide (on Bed at Looper) for gauges from 1, 2 to 35, 32 in.
268298	18639	Looper Thread Guide (on Bed at Looper) for gauges from 13, 16 to 1 in.
268121	18642	Looper Thread Tension Release (2)
5089	18642	Looper Thread Tension Release (1) (18642, 18642 and two 50014C)
268136	18637	Needle Bar
268219	18639	" Rock Frame Thread Guide, in gauges from 1, 16 to 11, 32 in. in steps of 1/32 in.
268254	18639	Needle Bar Rock Frame Thread Guide, in gauges from 1, 16 to 11, 32 in. in steps of 1/32 in.
268255	18639	Needle Bar Rock Frame Thread Guide, in gauges from 21, 32 to 7/8 in. in steps of 1/32 in.
268256	18639	Needle Bar Rock Frame Thread Guide, in 20, 32, 16, 31, 32 and 1 in. gauge
268151	18639	Needle Holder, in gauges from 1, 16 to 11, 32 in. in steps of 1/32 in., with two 50014C
268152	18639	Needle Holder, in gauges from 3, 8 to 5, 8 in. in steps of 1/32 in., with two 50014C
268154	18639	Needle Holder, in gauges from 11, 12 to 7, 8 in. in steps of 1/32 in., with two 50014C
268156	18639	Needle Holder, in 20, 32, 16, 31, 32 and 1 in. gauge, with two 50014C
50014C	18639	Needle Set Screw
226206	18642	" Thread Tension Releasing Pin (2)
54279	18642	" Thread Guide (double) (1)
268263	18642	Needle Thread Tension Complete, Nos. 186263, 500176, 500177, 134741 and two 500122
268177	18639	Spreader, in gauges from 1, 16 to 11, 32 in. in steps of 1/32 in., with two 268162
268178	18639	Spreader, in gauges from 1, 4 to 5, 8 in. in steps of 1/32 in., with two 268162
268179	18639	Spreader, in gauges from 21, 32 to 7, 8 in. in steps of 1/32 in., with two 268162
268180	18639	Spreader, in 20, 32, 16, 31, 32 and 1 in. gauge
267850	18644	Throat Plate, for 267300, in gauges 1, 16 and 7, 32 in.
267851	18644	Throat Plate, for 267302, in gauges 1, 4, 2, 32 and 5, 16 in.
267853	18644	Throat Plate, for 267304, in gauges 11, 32, 3, 8 and 13, 32 in.

PARTS FOR MACHINE No. 300w203

No.	Plate	Name
267855	18644	Throat Plate, for 267812, in gauges 7/16, 15/32 and 1/2 inch
267857	18644	Throat Plate, for 267817, in gauges from 17/32 to 21/32 in., in steps of 1/32 inch
267858	18644	Throat Plate, for 267821, in gauges from 11/16 to 31/32 in., in steps of 1/32 inch
267859	18644	Throat Plate, for 267825, in 1 in. gauge
267679	18644	Vibrating Presser Foot, 40 needle hole, in gauges from 3/16 to 11/32 in., in steps of 1/32 in., with 200078F, for 267676
267680	18644	Vibrating Presser Foot, 40 needle hole, in gauges from 3/8 to 1 in., in steps of 1/32 in., with 200078F, for 267677



ACCESSORIES

ACCESSORIES

FOR MACHINE No. 300W103

FOOT LIFTER TREADLE

No.	Plate	Name
62x59	-----	Needles, six, size 22
228443	18612	Drip Pan
200019E	18612	" " " Screw (2)
410805	18612	" " " Washer (2)
52843	18612	" " " " (leather) (4)
384280	18611	Looper and Needle Bar Setting Gauge
264276	18611	" Threading Wire
131161	18612	Machine Base Oil Drain Jar (glass)
131462	18612	" " " " " Cap
131138	18612	" " " " " " Clamp
131217	18612	" " " " " " " 131183 with 131139
131189	18612	Machine Base Oil Drain Jar Clamp Lever
1247C	18612	" " " " " " " Screw
131286	18612	" " " " " " " Nipple (short)
128452	18612	Machine Base Oil Drain Jar complete, Nos. 131217, 131266, 131951, 131962 and two 1247C
128320	18645	Machine Cushion (felt) (4)
128444	18645	" " " (neoprene) (4)
41400	18611	" Rest Pin (wood)
128449	18645	" Support (left) with two wood screws 1-1/4 in., No. 12, F. H. B.
128450	18645	Machine Support (right) with two wood screws 1-1/4 in., No. 12, F. H. B.
128491	18611	Pressure Oiler
128498	18611	Screw Driver (7-1/4 in. long)
128542	18611	" " (8 in. blade)
128476	18611	" " (Bobbin Case)
27739	18611	Thread Cone (wood) (2)
201511	18611	Wrench
201900	18611	Wrench
249820	18611	Wrench
255540	18611	" (steel)

FURNISHED ONLY WITH MACHINES ORDERED

FOR 30 W. AND 300. ORDERED INSTALLATION

41401	-----	Machine Rest Pin (wood) (in place of 41400)
128460	-----	" Support (left) with two wood screws 1-1/4 in., No. 12, F. H. B. (in place of 128449)
128461	-----	Machine Support (right) with two wood screws 1-1/4 in., No. 12, F. H. B. (in place of 128450)

No.	Plate	Name
228716	18646	Treadle
228474	18646	" Chain, 34 in. long, with two 202784
202784	18646	" " Hook
14373	18646	" Extension
50581R	18646	" " " Screw
2718R	18646	" " " Washer
17881	18646	" Shaft
14374	18646	" Spring
14375	18646	" Stand
228717	18646	Foot Lifter Treadle complete, Nos. 17881, 14373 to 14375, 17881, 50581R and 2718R

THREAD UNWINDER FOR TWO SPOOLS

228647	18627	Base with two 200141C
228692	18627	Spool Pin
201528H	18627	" " Nut
228693	18627	" " Washer
225257	18627	" Rest (for two spools) (flat) with 201018C, two each 201528H, 228693 and 228692
150203	18627	Spool Rest Cushion (felt)
228648	18627	" " Rod
200341C	18627	" " " Set Screw
201018C	18627	" " " Set Screw
228649	18627	Thread Tube with two 208103
268105	18627	" " Bushing
350101AL	18627	" " " Set Screw
228649	18627	" " " Set Screw
201129H	18627	Thread Tube Support Set Screw
228650	18627	Thread Unwinder complete, for two spools, Nos. 228647, 228648, 228649, 228650, 228651, each 150203, 228649 and three 4 x 4 screws 1-1/4 in., No. 14, F. H. B.

FOR MACHINE No. 300W103

Same as Machine No. 300W103 with the following
exceptions:

50158	-----	Needles, six, size 22
27739	18611	Thread Cone (wood) (4)

ACCESSORIES

THREAD UNWINDER FOR FOUR SPOOLS

No.	Plate	Name
228647	18628	Base with two 200341C
228692	18628	Spool Pin
201528H	18628	" " Nut
228692	18628	" " Washer
225257	18628	" Rest (for two spools) (flat) with 201016C, two each 201328H, 228692 and 228648
150203	18628	Spool Rest Cushion (felt)
228648	18628	" " Rod
200341C	18628	" " Set screw
201016H	18628	" " Set screw
228652	18628	" " Stud
228651	18628	" " Support with 201134H, two 228652 and eight 350101AL
201134H	18628	Spool Rest Support Set Screws
228647	18628	Thread Guide with tv. 138125
208121	18628	" " Bushing
350101AL	18628	" " Set screw
228651	18628	Frame. Flow water complete, for four spools. Nos. 228647, 228648, 228651, two 225257, four each 150203, 228649 and three wood screws 1-1, 4 in., No. 14, R. H. B.

FEED DOGS

FOR MACHINE No. 300W103

267804	18644	Feed Dog with 268318 and two 200172D, for 186614
--------	-------	---

FOR MACHINE No. 300W203

267809	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11, 12, 13, 14 and 15, 16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267850
267811	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11, 14, 15, 16 and 17, 18 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267851

FEED DOGS

No.	Plate	Name
267804	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11, 12, 13, 14 and 15, 16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267850
267812	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges 11, 14, 15, 16 and 17, 18 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267851
267817	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 17, 18 to 21, 22 in., in steps of 1/16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267852
267821	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in gauges from 21, 22 to 24, 25 in., in steps of 1/16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267853
267825	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 22, in 1 in. gauge, (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267854
267815	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 24, in gauges 11, 12, 13, 14 and 15, 16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267855
267819	18644	Feed Dog, 46 needle hole, for needle sizes 20 and 24, in gauges 11, 12, 13, 14 and 15, 16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267856
267826	18644	Feed Dog, 46 needle hole, for needle sizes 21 and 24, in gauges 11, 12, 13, 14 and 15, 16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267857
267831	18644	Feed Dog, 46 needle hole, for needle sizes 21 and 24, in gauges 11, 14, 15, 16 and 17, 18 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267858
267834	18644	Feed Dog, 46 needle hole, for needle sizes 21 and 24, in gauges from 17, 18 to 21, 22 in., in steps of 1/16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267859
267835	18644	Feed Dog, 46 needle hole, for needle sizes 21 and 24, in gauges from 21, 22 to 24, 25 in., in steps of 1/16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267860
267837	18644	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in gauges from 11, 12 to 15, 16 in. in steps of 1/16 in. (teeth cut 15 to the inch) with two 268318 and four 200172D, for 267861

FEED DOGS

No.	Plate	Name
267838	18644	Feed Dog, 40 needle hole, for needle sizes 23 and 24, in 1 in. gauge (teeth cut 8 to the inch) with two 268218 and four 200172D, for 267859

NEEDLE BAR ROCK FRAME THREAD GUIDES

FOR MACHINE No. 300w103

LOOPER HOLDERS

FOR MACHINE No. 300w103

268602	18616	Looper Holder with two 350478C
--------	-------	--------------------------------

FOR MACHINE No. 300w203

268103	18639	Looper Holder, in gauges from 3 to 11 32 in., in steps of 1 32 in., with four 350478C
268104	18639	Looper Holder, in gauges from 1 3 to 5 3 in., in steps of 1 32 in., with four 350478C
268105	18639	Looper Holder, in gauges from 21 32 to 7 8 in., in steps of 1 32 in., with four 350478C
268106	18639	Looper Holder, in 29 32, 15 16, 31 32 and 1 in. gauge, with four 350478C

LOOPER THREAD GUIDES (on Bed at Looper)

FOR MACHINE No. 300w103

268206	18616	Looper Thread Guide (on Bed at Looper)
--------	-------	--

FOR MACHINE No. 300w203

268206	18639	Looper Thread Guide (on Bed at Looper) for gauges from 3 16 to 15 32 inch
268207	18639	Looper Thread Guide (on Bed at Looper) for gauges from 1 2 to 25 32 inch
268208	18639	Looper Thread Guide (on Bed at Looper) for gauges from 15 16 to 1 inch

No.	Plate	Name
268219	18616	Needle Bar Rock Frame Thread Guide

FOR MACHINE No. 300w203

268219	18639	Needle Bar Rock Frame Thread Guide, in gauges from 3 16 to 11 32 in., in steps of 1 32 in.
268254	18639	Needle Bar Rock Frame Thread Guide, in gauges from 1 3 to 5 3 in., in steps of 1 32 in.
268255	18639	Needle Bar Rock Frame Thread Guide, in gauges from 21 32 to 7 8 in., in steps of 1 32 in.
268256	18639	Needle Bar Rock Frame Thread Guide, in 29 32, 15 16, 31 32 and 1 in. gauge

NEEDLE HOLDERS

FOR MACHINE No. 300w203

268151	18639	Needle Holder, in gauges from 3 16 to 11 32 in., in steps of 1 32 in., with two 300140
268152	18639	Needle Holder, in gauges from 3 8 to 5 8 in., in steps of 1 32 in., with two 300140
268153	18639	Needle Holder, in gauges from 21 32 to 7 8 in., in steps of 1 32 in., with two 300140
268154	18639	Needle Holder, in 29 32, 15 16, 31 32 and 1 in. gauge, with two 300140

DRESSED FEET

FOR MACHINE No. 300w103

267632	18643	Lifting Presser Foot with 200076F for 267659
267659	18643	Vibrating Presser Foot with 200076F for 267632

PRESSER FEET

FOR MACHINE No. 300w203

No.	Plate	Name
267676	18644	Lifting Presser Foot, for 267679, in gauges from 3/16 to 11/32 in., in steps of 1/32 in., with 200078F
267677	18644	Lifting Presser Foot, for 267680, in gauges from 3/8 to 1 in., in steps of 1/32 in., with 200078F
267679	18644	Vibrating Presser Foot, 40 needle hole, in gauges from 3/16 to 11/32 in., in steps of 1/32 in., with 200078F, for 267676
267680	18644	Vibrating Presser Foot, 40 needle hole, in gauges from 3/8 to 1 in., in steps of 1/32 in., with 200078F, for 267677

THROAT PLATES

FOR MACHINE No. 300w203

No.	Plate	Name
267850	18644	Throat Plate, for 267800, in gauges 3/16 and 7/32 inch
267851	18644	Throat Plate, for 267802, in gauges 1/4, 9/32 and 5/16 inch
267853	18644	Throat Plate, for 267804, 267815 and 267819, in gauges 11/32, 3/8 and 13/32 inch
267855	18644	Throat Plate, for 267811, 267823 and 267811, in gauges 7/16, 15/32 and 1/2 inch
267857	18644	Throat Plate, for 267817 and 267834, in gauges from 17/32 to 21/32 in., in steps of 1/32 inch
267858	18644	Throat Plate, for 267821, 267835 and 267837, in gauges from 11/16 to 31/32 in., in steps of 1/32 inch
267859	18644	Throat Plate, for 267845 and 267853, in 1/2 inch gauge

SPREADERS

FOR MACHINE No. 300w103

268606	18616	Spreader with 268162
--------	-------	----------------------

FOR MACHINE No. 300w203

268177	18639	Spreader, in gauges from 3/16 to 11/32 in., in steps of 1/32 in., with two 268162
268178	18639	Spreader, in gauges from 3/8 to 5/8 in., in steps of 1/32 in., with two 268162
268179	18639	Spreader, in gauges from 21/32 to 7/8 in., in steps of 1/32 in., with two 268162
268180	18639	Spreader, in 29/32, 15/16, 31/32 and 1 in. gauge, with two 268162

THROAT PLATES

FOR MACHINE No. 300w103

268614	18643	Throat Plate, for 268618
--------	-------	--------------------------